



SPYDER™

SKU# 5001986



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 1999-2002 CHEVY SILVERADO 1500/2500 (DOES NOT FIT STEPSIDE)
- 1999-2006 GMC SIERRA 1500/2500/3500
- 2007 SIERRA CLASSIC

- [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- PHILLIPS SCREWDRIVER



STEP 1:

DISCONNECT THE NEGATIVE BATTERY TERMINAL




STEP 2:
REMOVE (2X) PHILLIPS SCREWS



STEP 3:
UNSEAT TAIL LIGHT



STEP 4:
REMOVE (3X) BULB SOCKETS FROM TAIL LIGHT. (NEVER TOUCH BULBS WITH BARE HANDS)

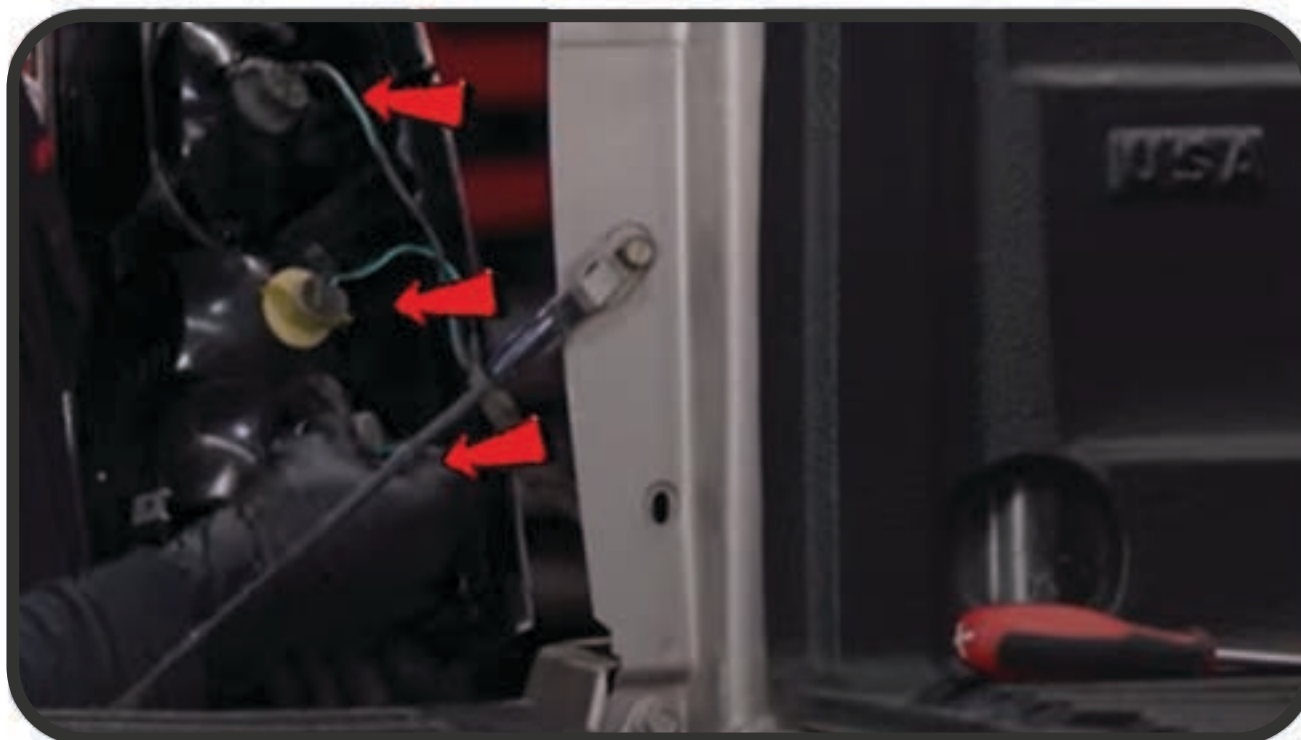

STEP 5:
INSTALL (3X) BULB SOCKETS INTO SPYDER TAIL LIGHT. (MAKING SURE YOU HAVE CANTER AMBER TURN SIGNAL BULB)



STEP 6:
SEAT SPYDER TAIL LIGHT



STEP 7:
REINSTALL (2X) PHILLIPS SCREWS SECURING TAIL LIGHT



STEP 8:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY