



SPYDER™

SKU# 5083418



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2007-2014 CHEVROLET SUBURBAN/TAHOE
- 2007-2014 GMC YUKON/YUKON DENALI (2008-2013 EXCLUDING HYBRID MODELS)

- [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- PHILLIPS SCREWDRIVER
- PANEL POPPER



STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL

**STEP 2:**

UNDER THE REAR BUMPER USING A PANEL POPPER, REMOVE THE CONNECTOR FROM THE BODY PANEL

**STEP 3:**

DISCONNECT THE TAIL LIGHT HARNESS



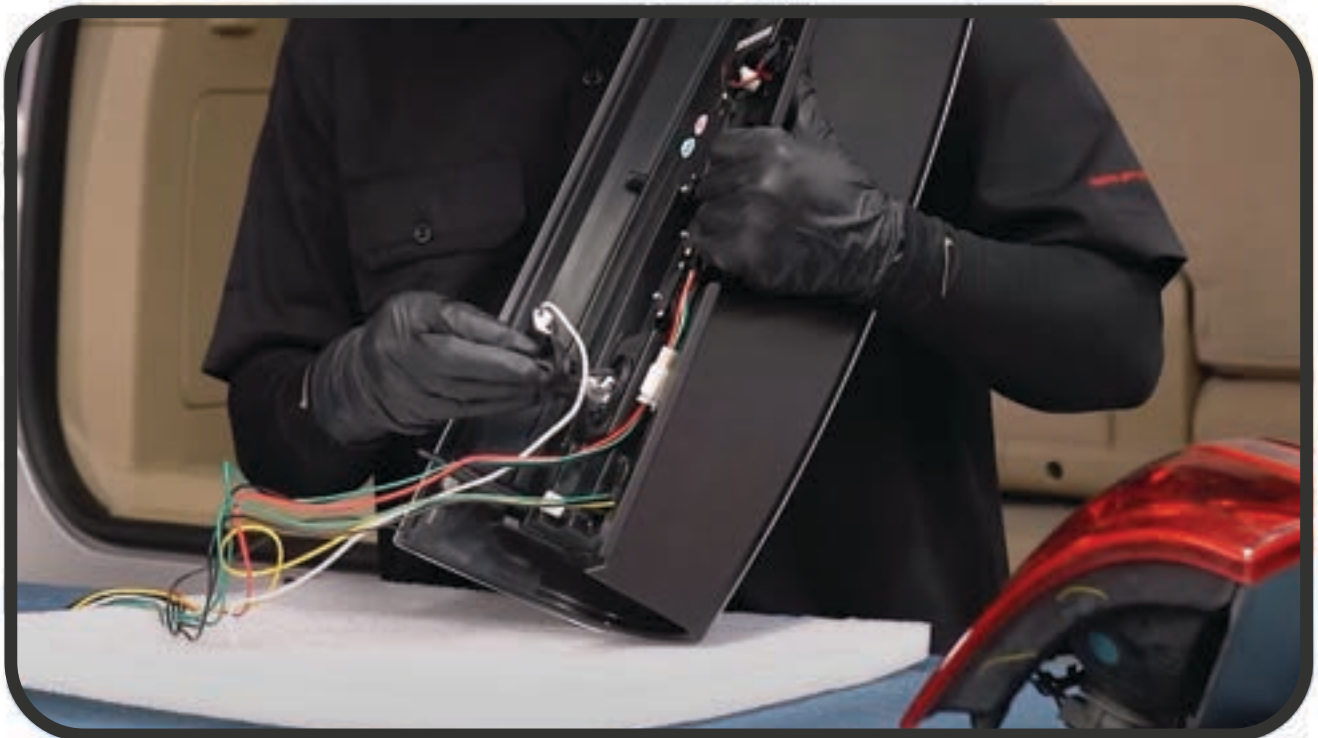
STEP 4:
REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT



STEP 5:
UNSEAT THE TAIL LIGHT AND PULL OUT THE HARNESS

**STEP 6:**

**REMOVE THE PARKING BULB FROM THE OLD TAIL LIGHT
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)**

**STEP 7:**

INSTALL BULB IN THE SPYDER REVERSE TAIL LIGHT SOCKET



STEP 8:
ROUTE THE SPYDER HARNESS AND SEAT THE TAIL LIGHT



STEP 9:
REINSTALL THE (2) PHILLIPS SCREWS TO SECURE THE TAIL LIGHT

**STEP 10:**

CONNECT THE SPYDER TAIL LIGHT HARNESS AND CLIP TO THE BODY PANEL

**STEP 11:**

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY