



SPYDER™

SKU# 5084026



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2009-2018 DODGE RAM 1500
- 2010-2018 DODGE RAM 2500/3500

(NOTE: NOT COMPATIBLE WITH LED MODEL)

- [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)




SCAN THE QR CODE
TO VISIT OUR WEBSITE


WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- BIT DRIVER
- T25 TORX SOCKET

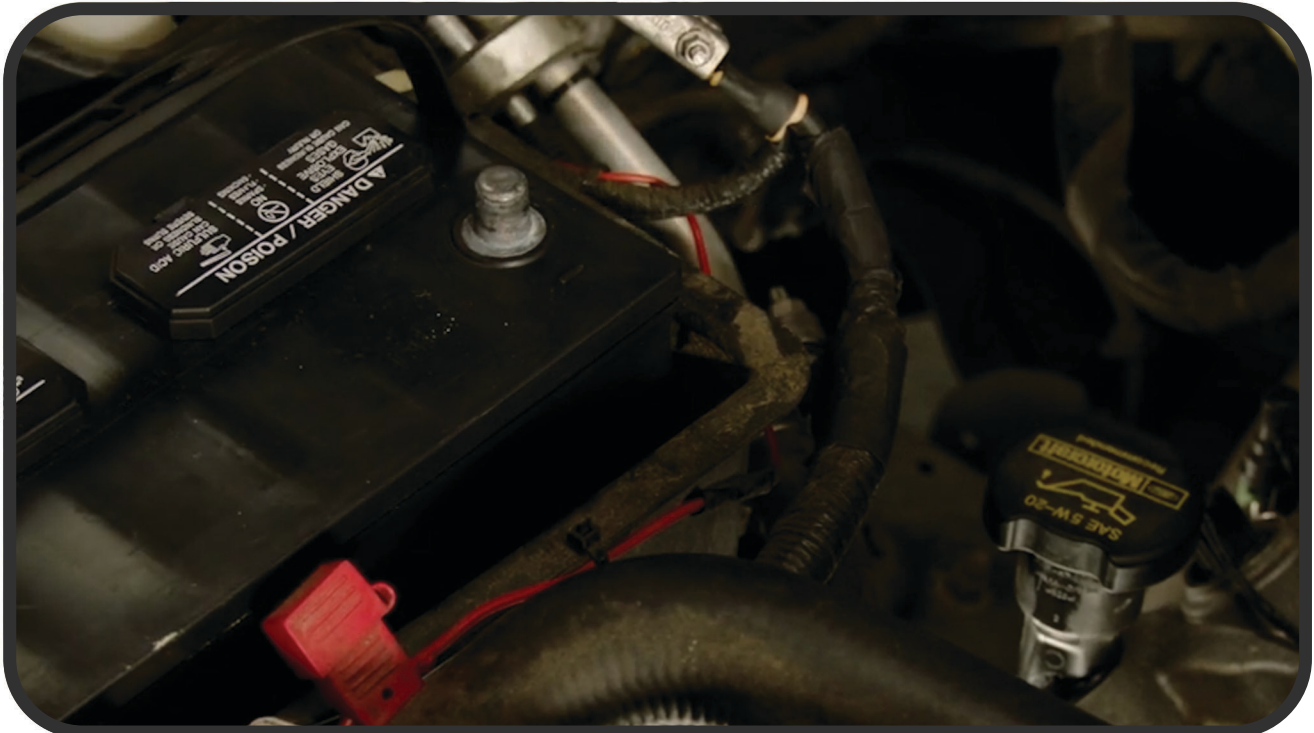

STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL

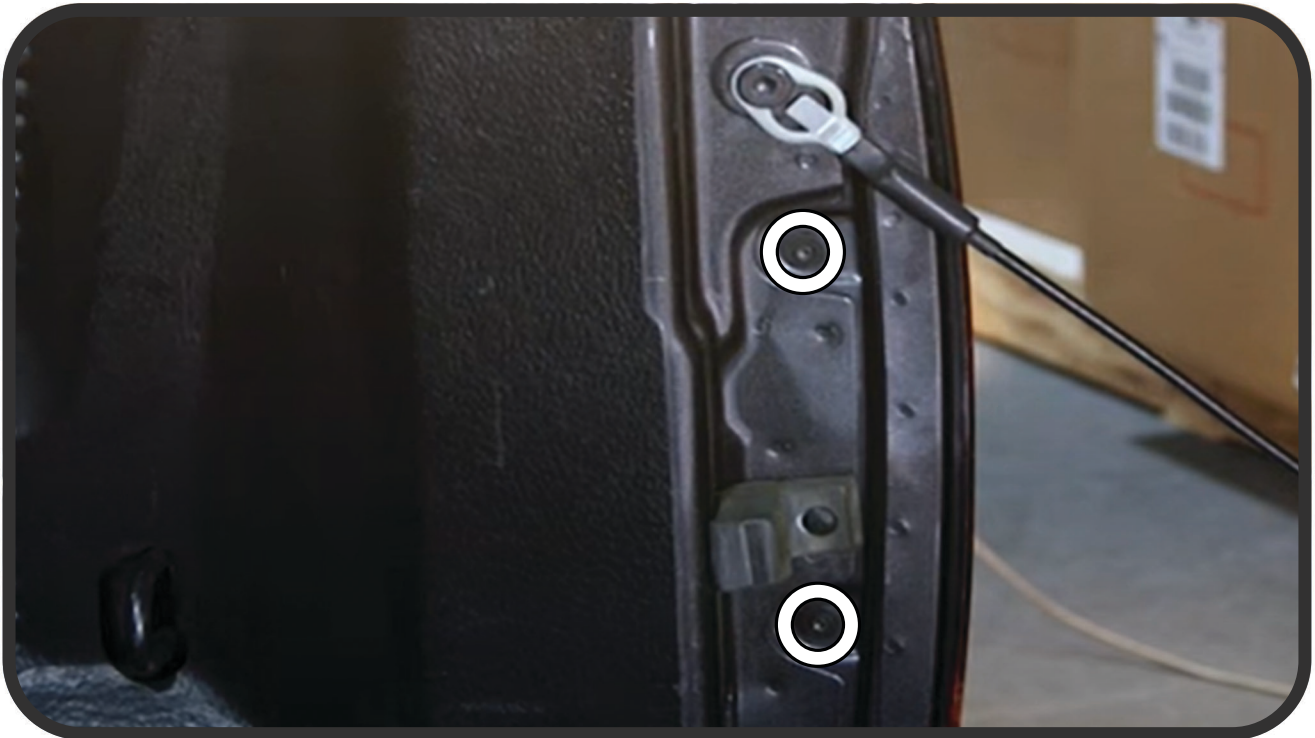

STEP 2:
OPEN THE TAILGATE AND REMOVE (2) T25 TORX SCREWS



STEP 3:
UNSEAT THE TAIL LIGHT



STEP 4:
REMOVE REVERSE SOCKET AND BRAKE LIGHT HARNESS
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)



STEP 5:
REMOVE BRAKE BULB FROM SOCKET



STEP 6:

INSTALL SOCKET INSERT ENSURING THE BLACK WIRE MATCHES THE BLACK WIRE ON THE SOCKET



STEP 7:


INSTALL REVERSE SOCKET AND BRAKE LIGHT HARNESS ONTO THE SPYDER TAIL LIGHT



STEP 8:
SEAT THE SPYDER TAIL LIGHT



STEP 9:
REINSTALL THE (2) T25 TORX SCREWS AND CLOSE THE TAILGATE

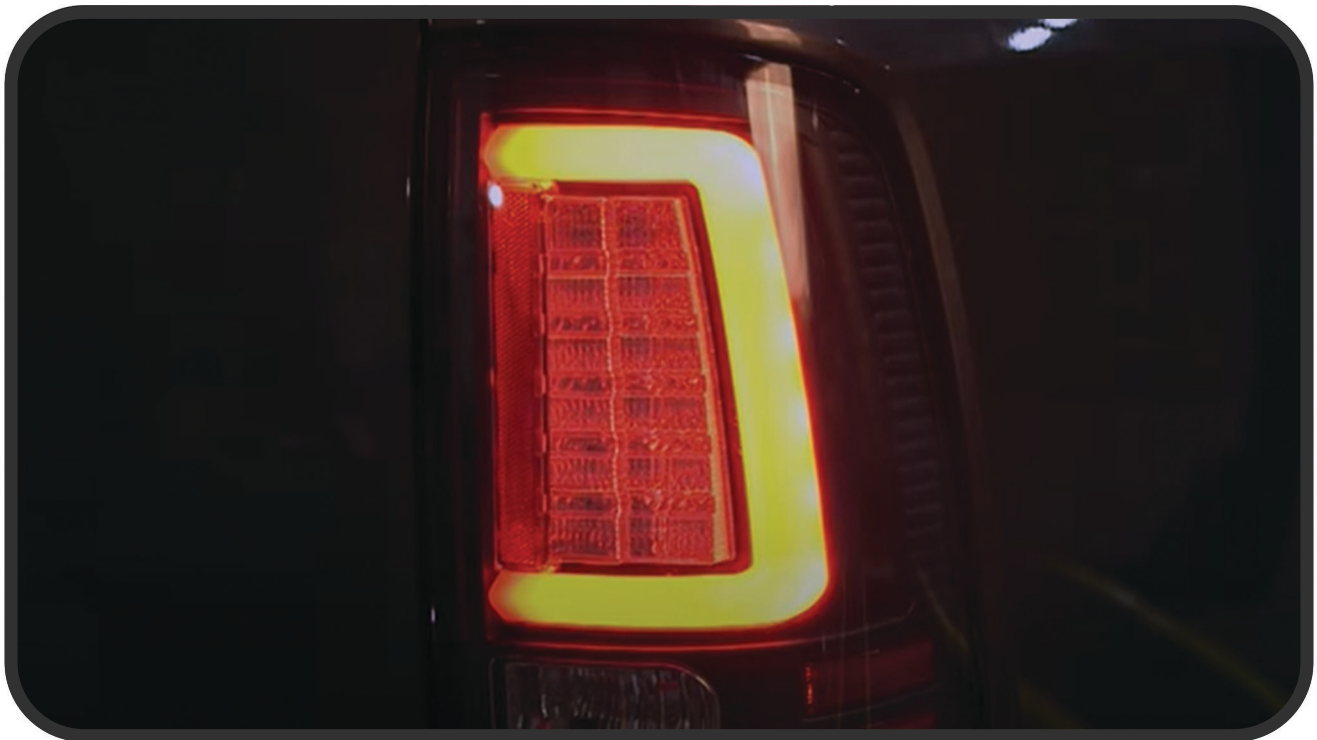

STEP 10:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY