



SPYDER™

SKU# 5077530



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2013-2018 DODGE RAM 1500
- 2013-2018 DODGE RAM 2500/3500 LED TAIL LIGHTS

(NOTE: NOT COMPATIBLE WITH INCANDESCENT MODEL)

- FACEBOOK.COM/SPYDERAUTO
- LINKEDIN.COM/COMPANY/SPYDER-AUTO
- INSTAGRAM.COM/SPYDERAUTO
- TWITTER.COM/SPYDERAUTO
- TIKTOK.COM/@SPYDERAUTO




SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- BIT DRIVER
- T20 TORX SOCKET

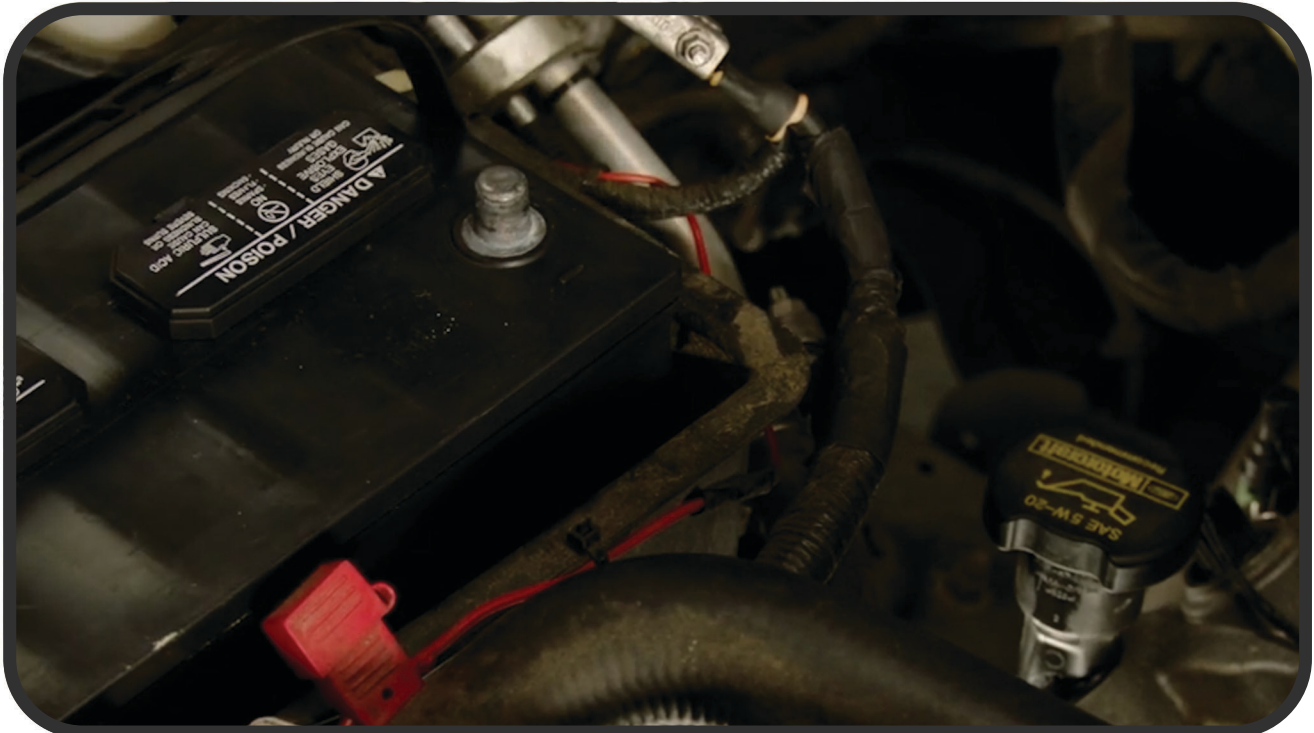


STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL




STEP 2:
OPEN THE TAILGATE AND REMOVE (2) T20 TORX SCREWS




STEP 3:
UNSEAT THE TAIL LIGHT

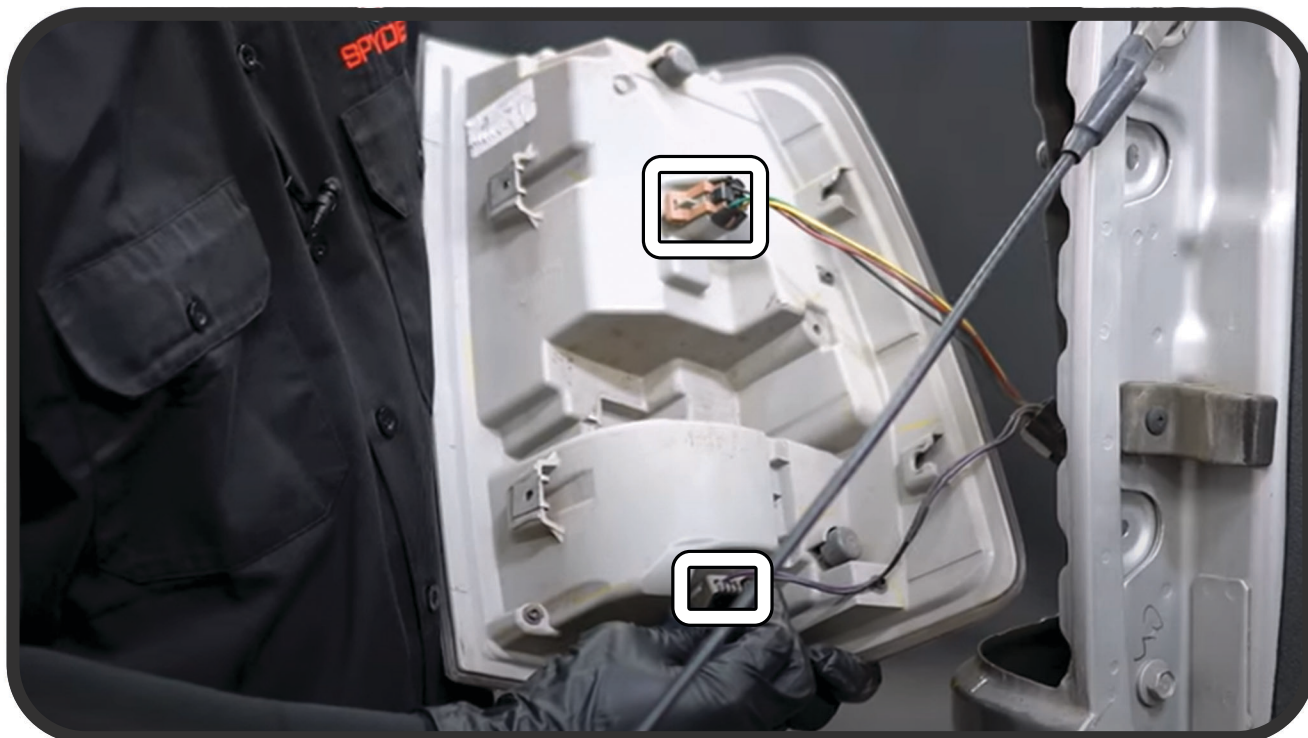

STEP 4:
REMOVE REVERSE SOCKET AND BRAKE LIGHT HARNESS
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)

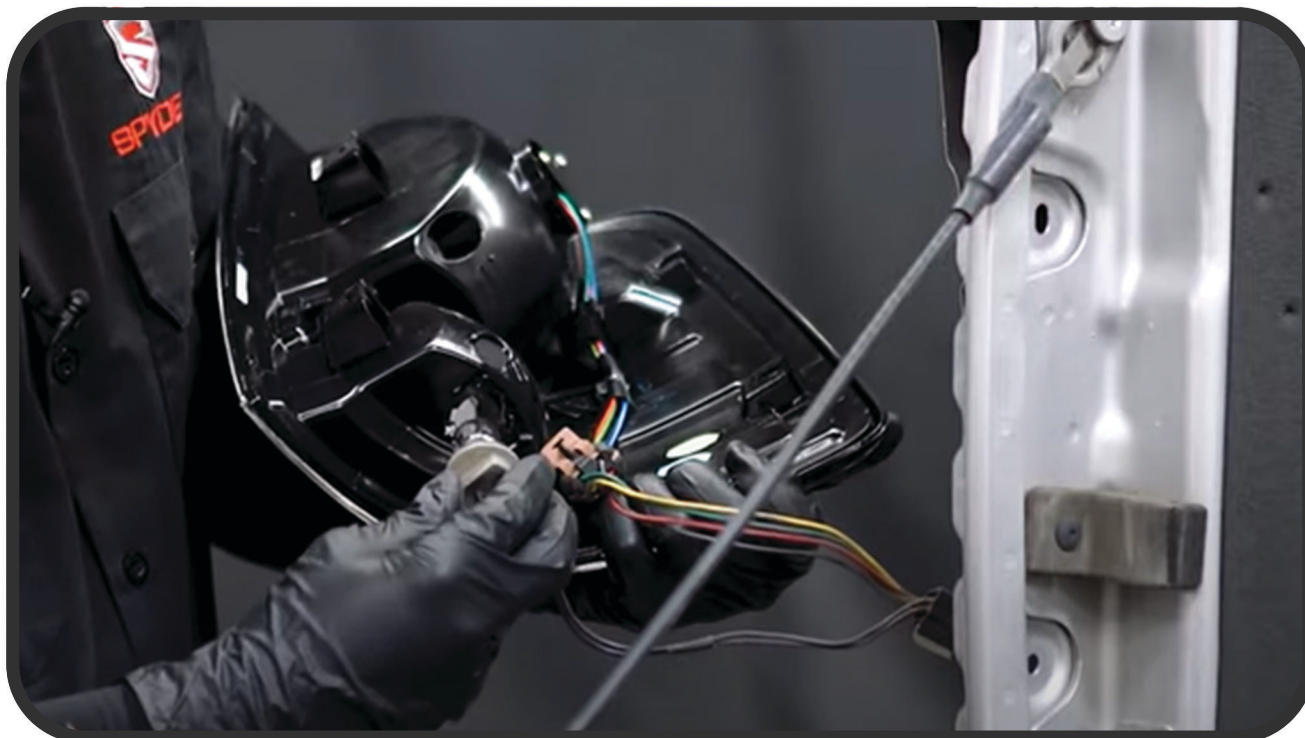

STEP 5:
INSTALL REVERSE SOCKET AND BRAKE LIGHT HARNESS ONTO
SPYDER TAIL LIGHT

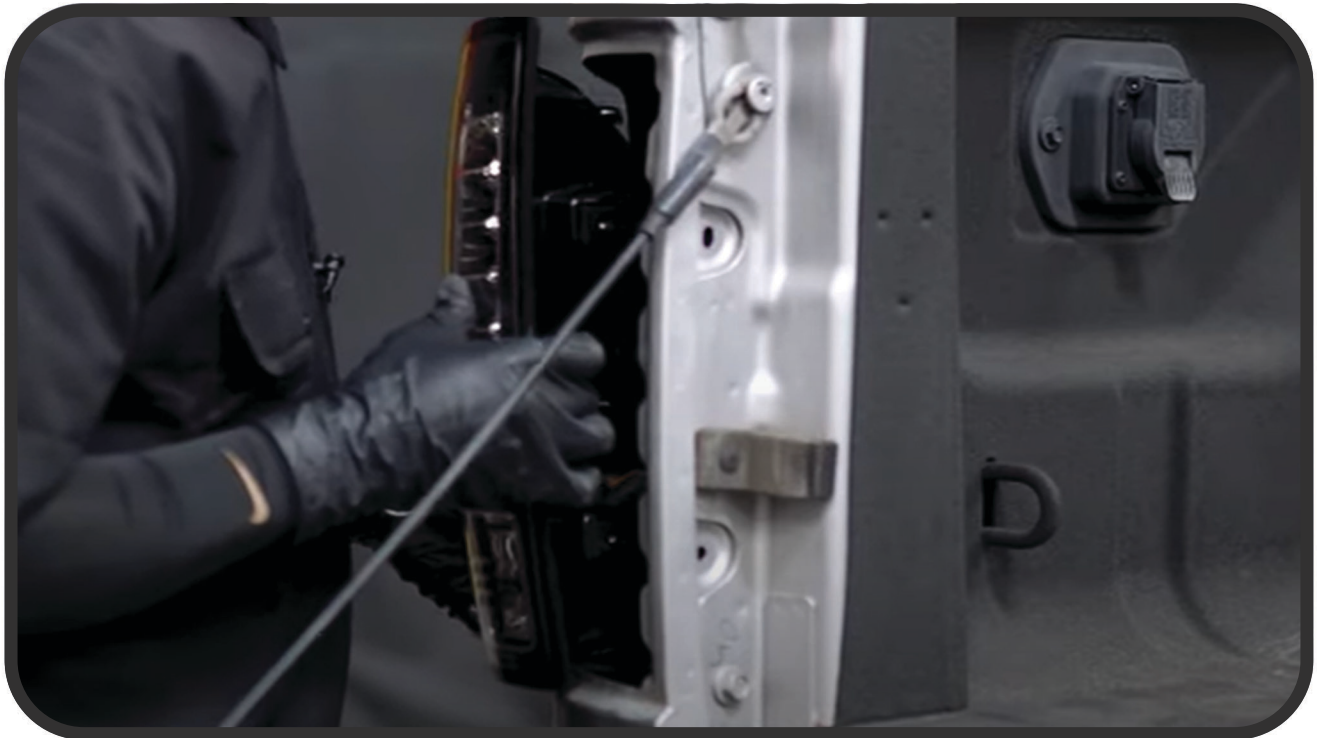

STEP 6:
SEAT THE SPYDER TAIL LIGHT



STEP 7:
**REINSTALL THE (2) T20 TORX SCREWS TO SECURE THE TAIL LIGHT.
CLOSE THE TAILGATE**



STEP 8:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY