



SPYDER™

SKU# 5085689



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2018-2020 FORD F150
(NOT COMPATIBLE WITH REAR BLIND SPOT SENSOR MODELS)

- [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- 8MM SOCKET



STEP 1:


DISCONNECT THE NEGATIVE BATTERY TERMINAL



STEP 2:
REMOVE (2) 8MM BOLTS



STEP 3:
UNSEAT TAIL LIGHT

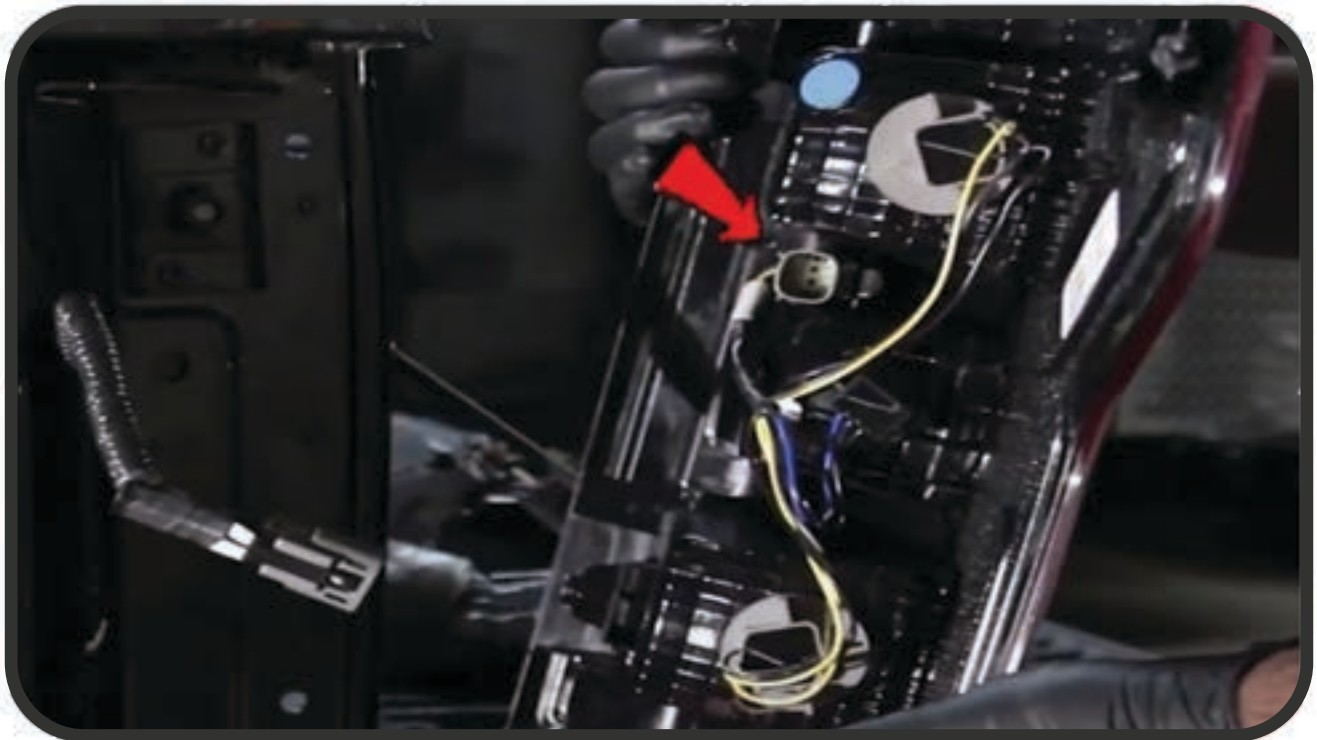


STEP 4:
DISCONNECT FACTORY TAIL LIGHT HARNESS



STEP 5:
CONNECT SPYDER LED TAIL LIGHT HARNESS



STEP 6:
SEAT SPYDER LED TAIL LIGHT ASSEMBLY IN PLACE

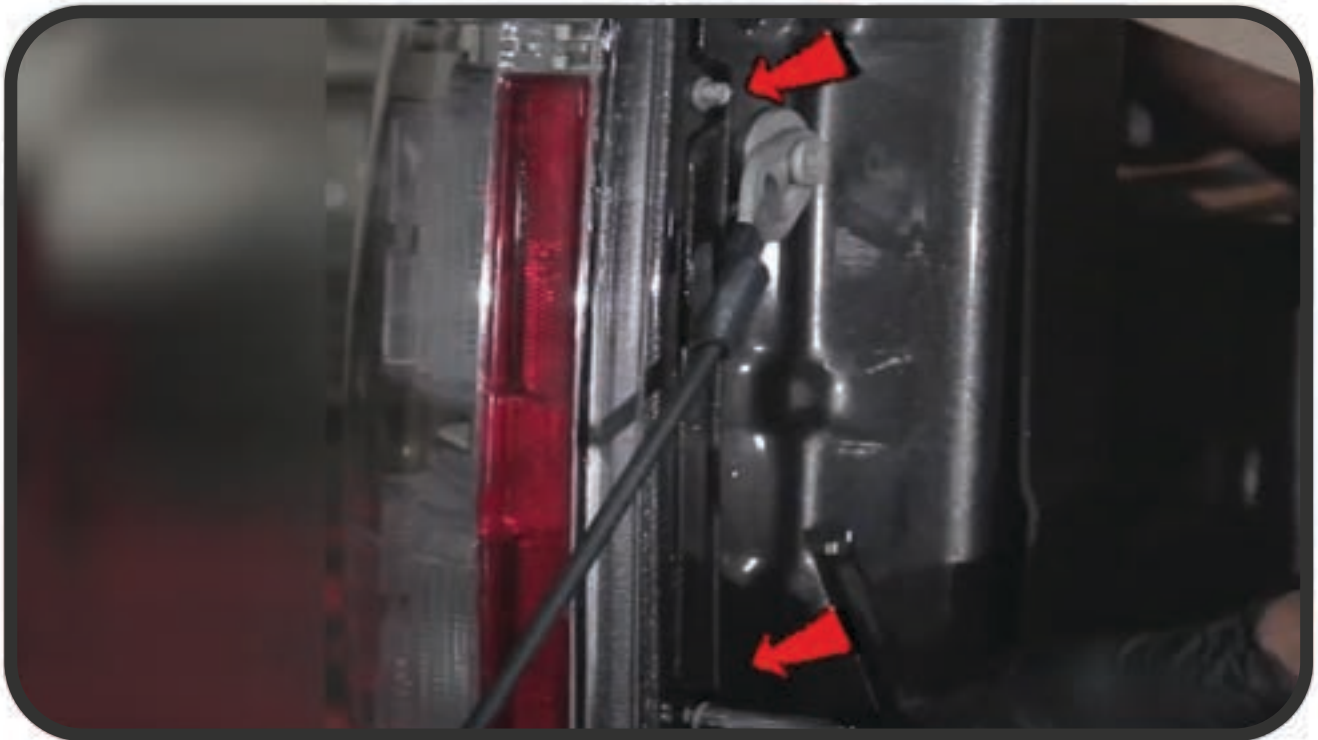

STEP 7:
REINSTALL (2) 8MM BOLTS



STEP 8:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY