



SPYDER™

SKU# 5003461



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 1997-2003 FORD F-150 STYLESIDE
- 1999-2007 FORD F-250/350/450/550 SUPERDUTY

- [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)




SCAN THE QR CODE
TO VISIT OUR WEBSITE


WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- 10MM SOCKET

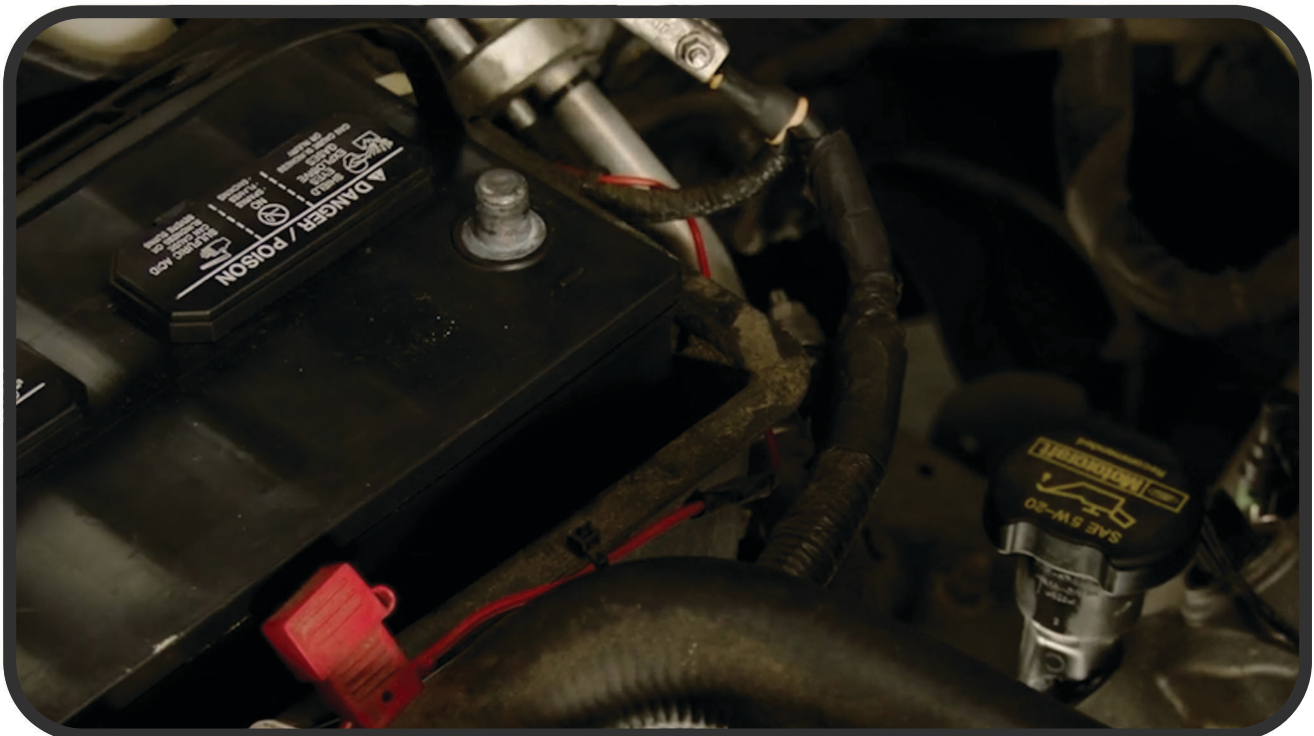


STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL

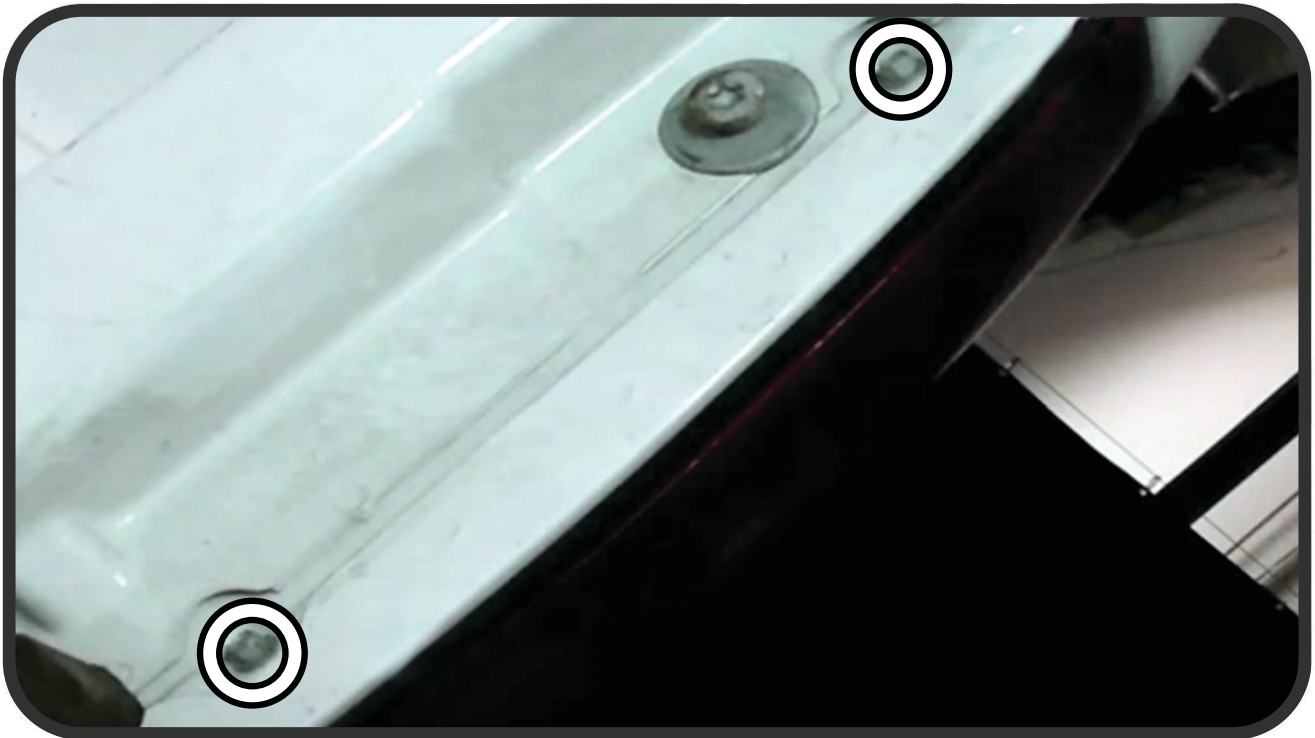

STEP 2:
REMOVE (2) 10MM BOLTS SECURING THE TAIL LIGHT



STEP 3:
UNSEAT THE TAIL LIGHT

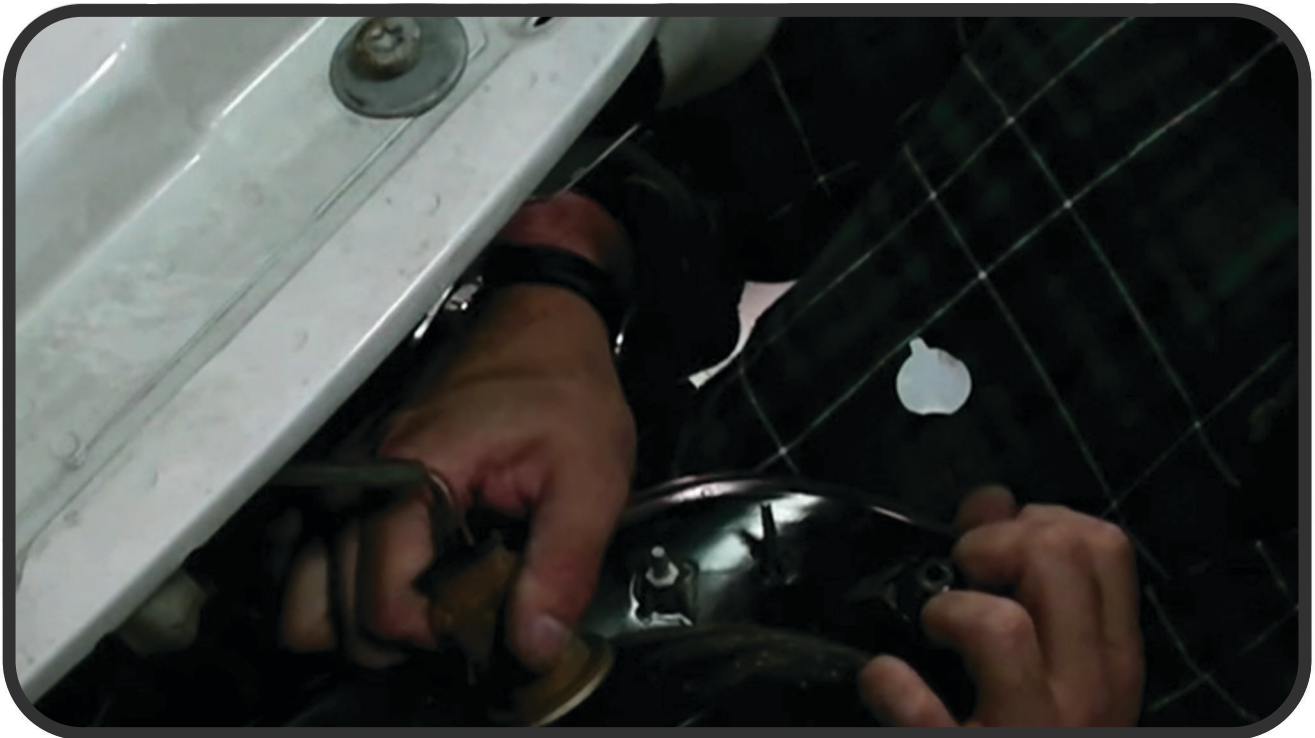

STEP 4:
REMOVE THE BRAKE AND REVERSE LIGHT SOCKETS
(NOTE: MAKE SURE NOT TO TOUCH BULB WITH BARE HANDS)




STEP 5:
REMOVE THE BRAKE BULB FROM SOCKET



STEP 6:

CONNECT THE BRAKE BULB SOCKET TO THE SPYDER TAIL LIGHT ENSURING THE BLACK WIRE FROM THE SOCKET MATCHES THE BLACK WIRE FROM THE SPYDER TAIL LIGHT

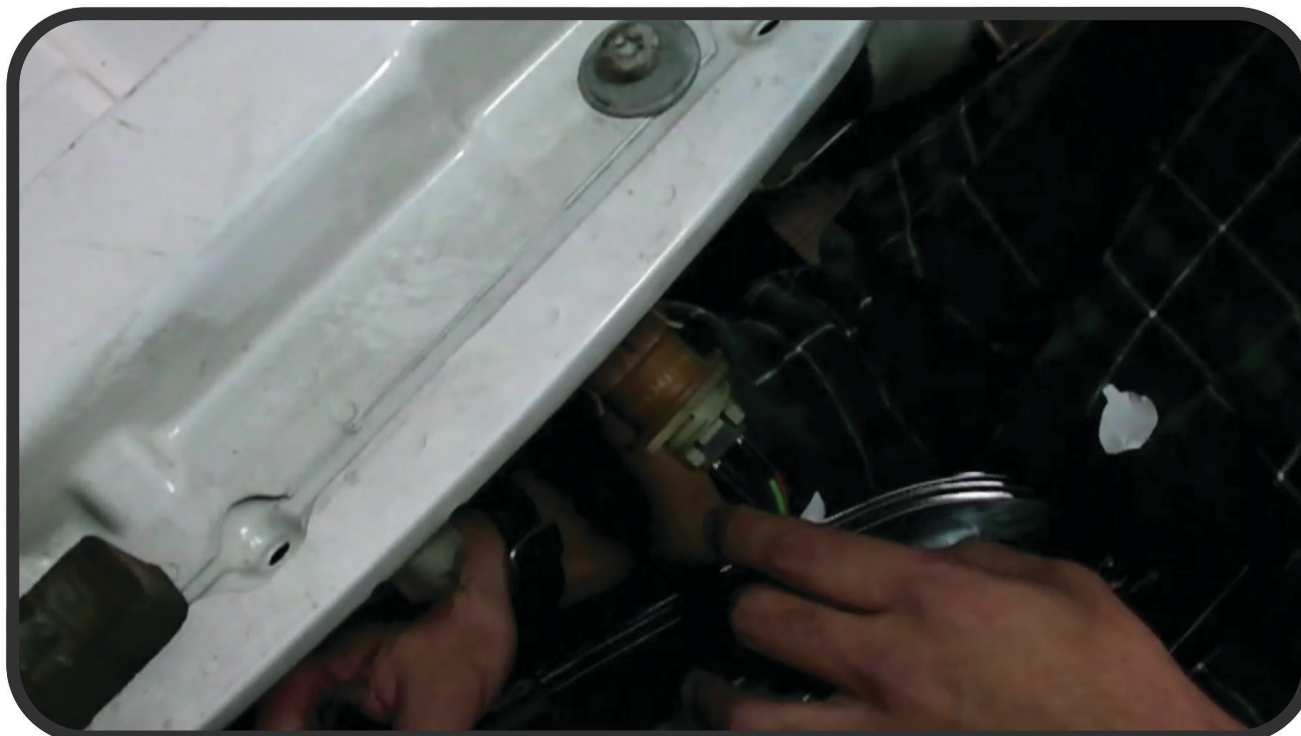


STEP 7:

REINSTALL THE REVERSE SOCKET AND BRAKE SOCKET



STEP 8:
SEAT THE SPYDER TAIL LIGHT

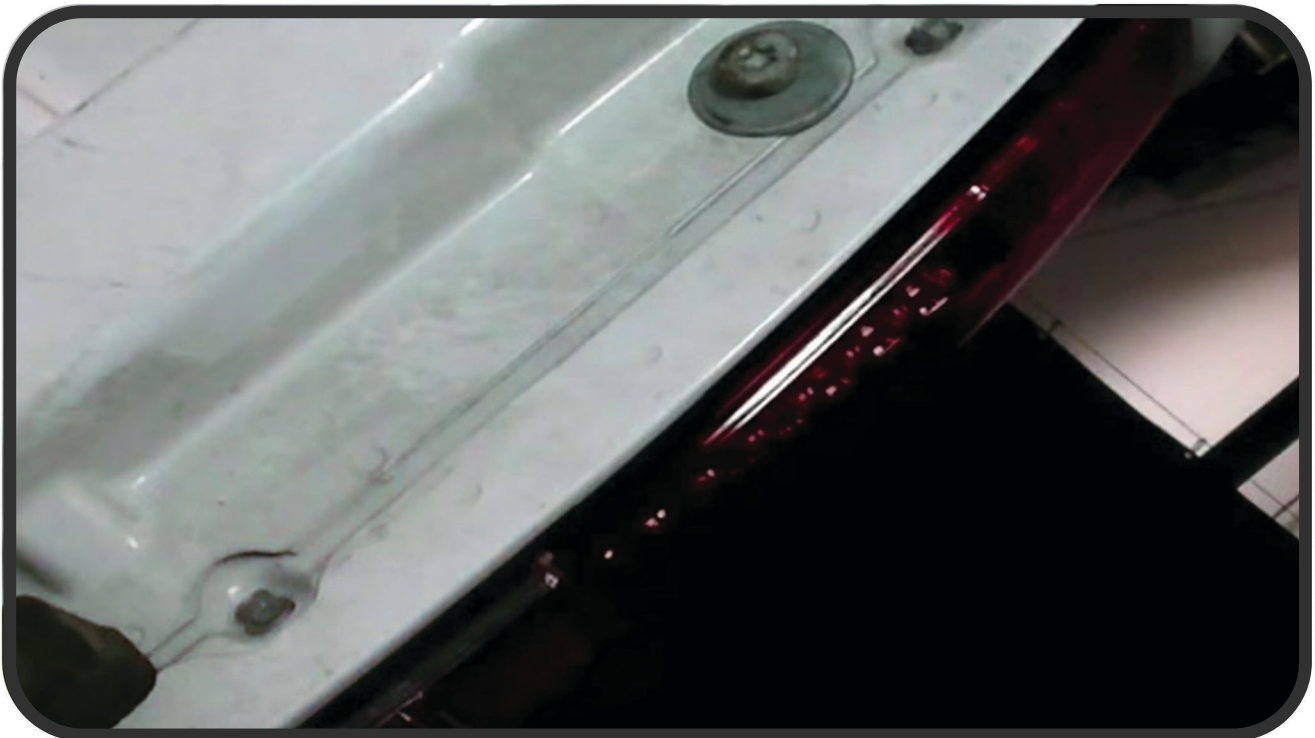

STEP 9:
REINSTALL THE (2) 10MM BOLTS TO SECURE THE TAIL LIGHT



STEP 10:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY