



SPYDER™

SKU# 5003836



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2001-2005 FORD RANGER



FACEBOOK.COM/SPYDERAUTO

LINKEDIN.COM/COMPANY/SPYDER-AUTO

INSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV




TOOLS REQUIRED:

- PHILLIPS SCREWDRIVER

**STEP 1:**

DISCONNECT THE NEGATIVE BATTERY TERMINAL

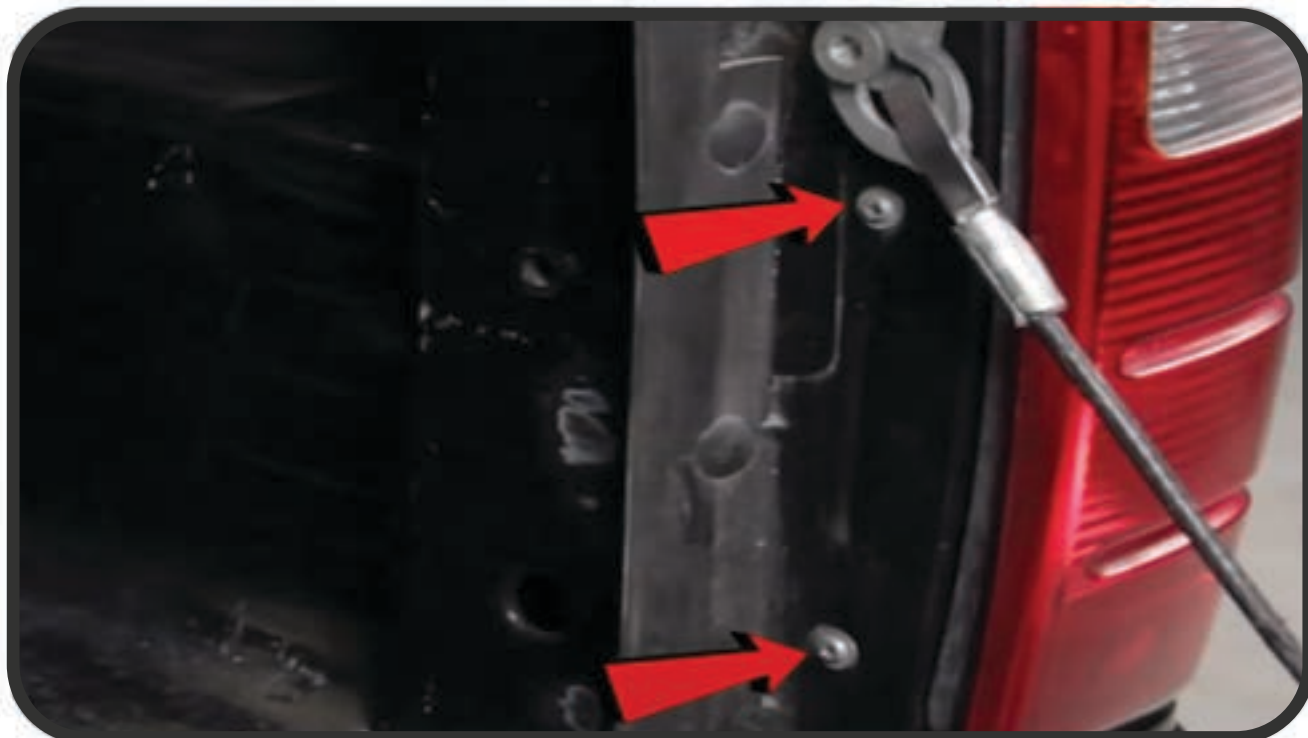

STEP 2:
REMOVE (2) PHILLIPS SCREWS



STEP 3:
2. REMOVE (2) OUTER PHILLIPS SCREWS



STEP 4:
UNSEAT TAIL LIGHT



STEP 5:
DISCONNECT BRAKE AND REVERSE LIGHT HARNESS


STEP 6:

REMOVE BRAKE AND REVERSE LIGHT SOCKETS


STEP 7:

**REMOVE BRAKE BULB FROM SOCKET AND INSERT SPYDER SOCKET
INSERT INTO BRAKE SOCKET. (MAKE SURE TO ALIGN BLACK WIRE OF
SOCKET TO BLACK WIRE OF SOCKET INSERT)**

**STEP 8:**

INSTALL REVERSE SOCKET ONTO SPYDER TAIL LIGHT

**STEP 9:**

CONNECT BRAKE AND REVERSE HARNESS TO SPYDER TAIL LIGHT



STEP 10:
SEAT SPYDER TAIL LIGHT



STEP 11:
REINSTALL (2) OUTER SCREWS AND (2) INNER SCREWS


STEP 12:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY