



# SPYDER™

## SKU# 5003898



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

• 2008-2016 FORD SUPER DUTY F-250/350/450

-  [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
-  [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
-  [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
-  [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
-  [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)




SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

- RATCHET
- 10MM SOCKET

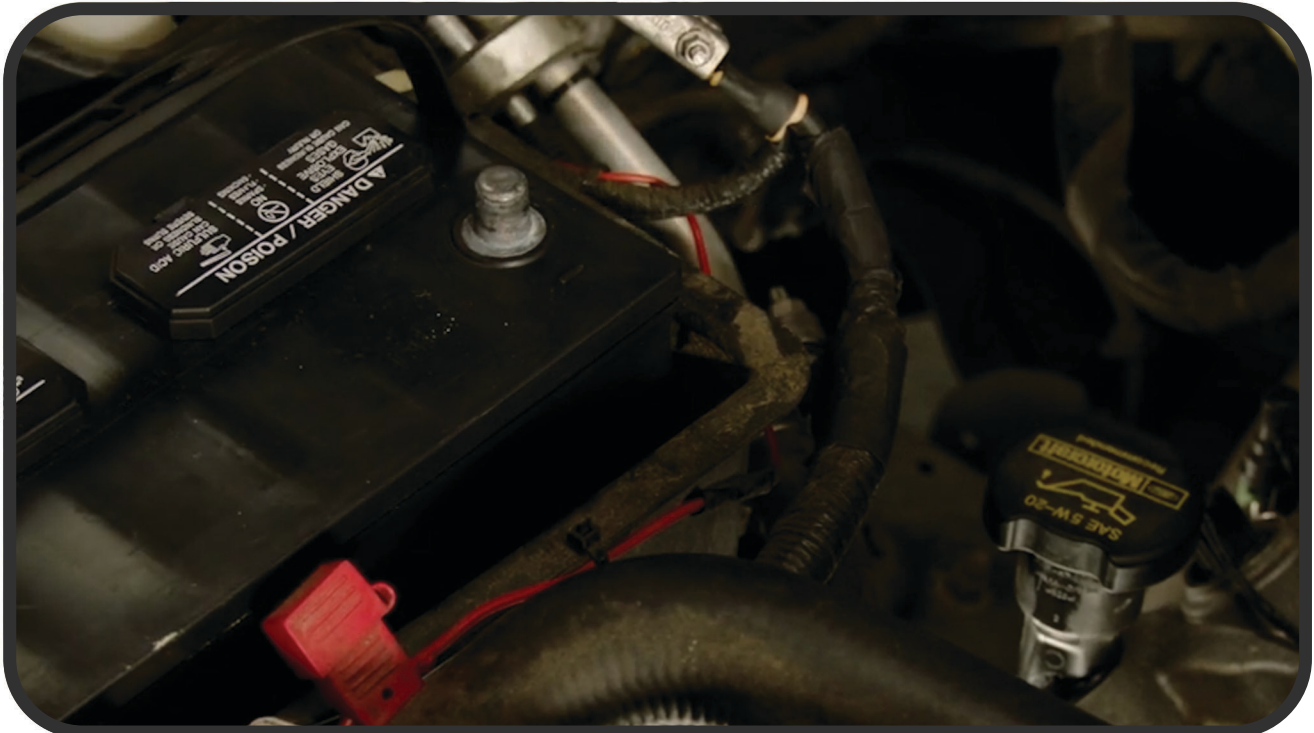

**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**



**STEP 2:**  
REMOVE (2) 10MM BOLTS SECURING THE TAIL LIGHT




**STEP 3:**  
UNSEAT THE TAIL LIGHT



**STEP 4:**  
**REMOVE THE BRAKE AND REVERSE LIGHT SOCKETS**  
**(NOTE: NEVER TOUCH BULB WITH BARE HANDS)**



**STEP 5:**  
**REMOVE THE BRAKE BULB FROM THE SOCKET**

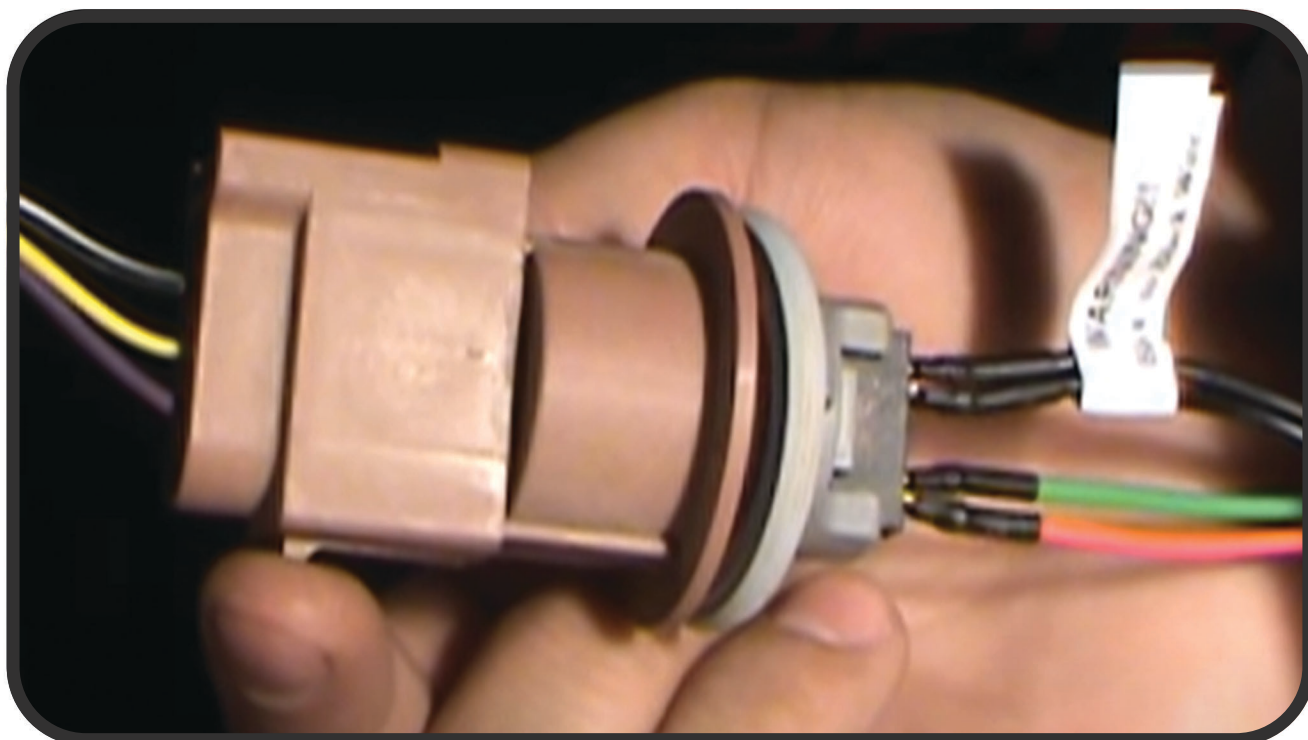

**STEP 6:**

**INSTALL BRAKE SOCKET INSERT INTO THE BRAKE SOCKET AND ENSURE THE BLACK WIRE OF THE SOCKET MATCHES THE BLACK WIRE OF THE SOCKET INSERT**



**STEP 7:**

**INSTALL BRAKE AND REVERSE SOCKET INTO THE SPYDER TAIL LIGHT**



**STEP 8:**  
**SEAT THE TAIL LIGHT**



**STEP 9:**  
**REINSTALL THE (2) 10MM BOLTS TO SECURE THE TAIL LIGHT**



**STEP 10:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**