



SPYDER™

SKU# 5084712



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2008-2016 FORD SUPER DUTY F-250/350/450

-  [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
-  [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
-  [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
-  [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
-  [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)




SCAN THE QR CODE
TO VISIT OUR WEBSITE


WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- 8MM SOCKET

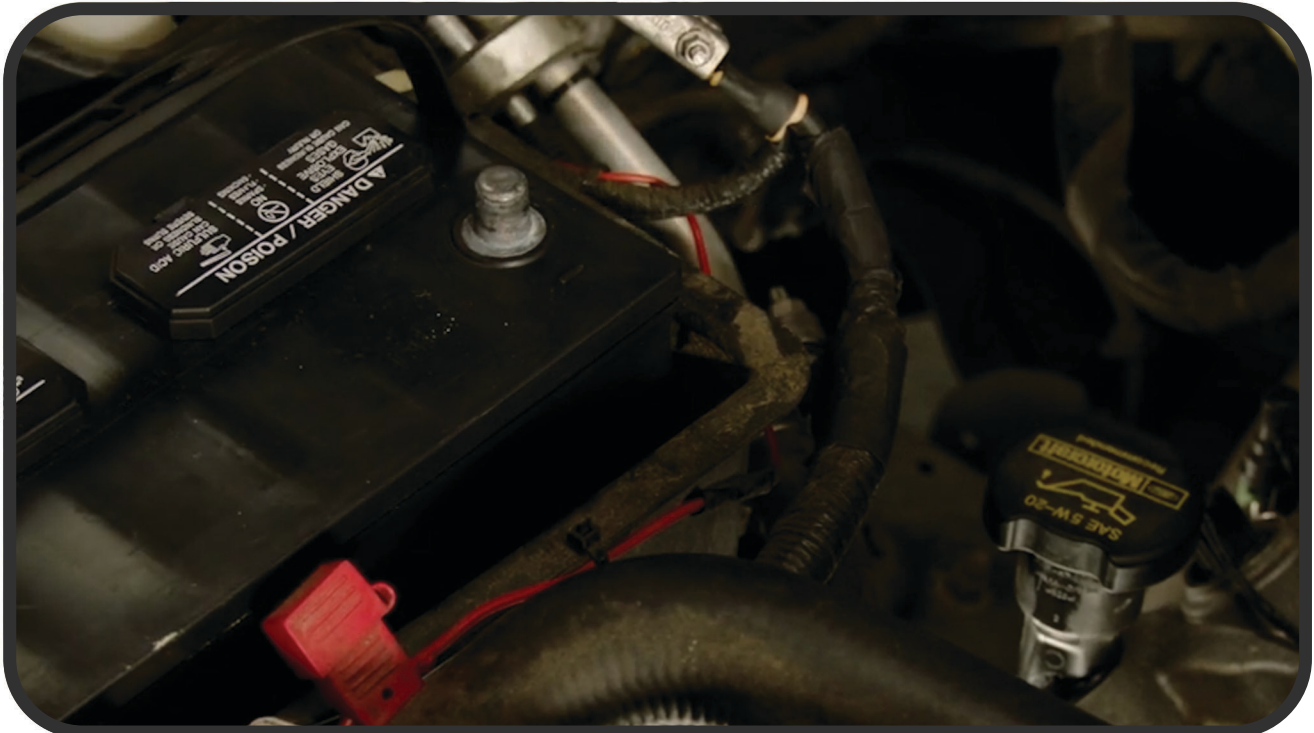

STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL

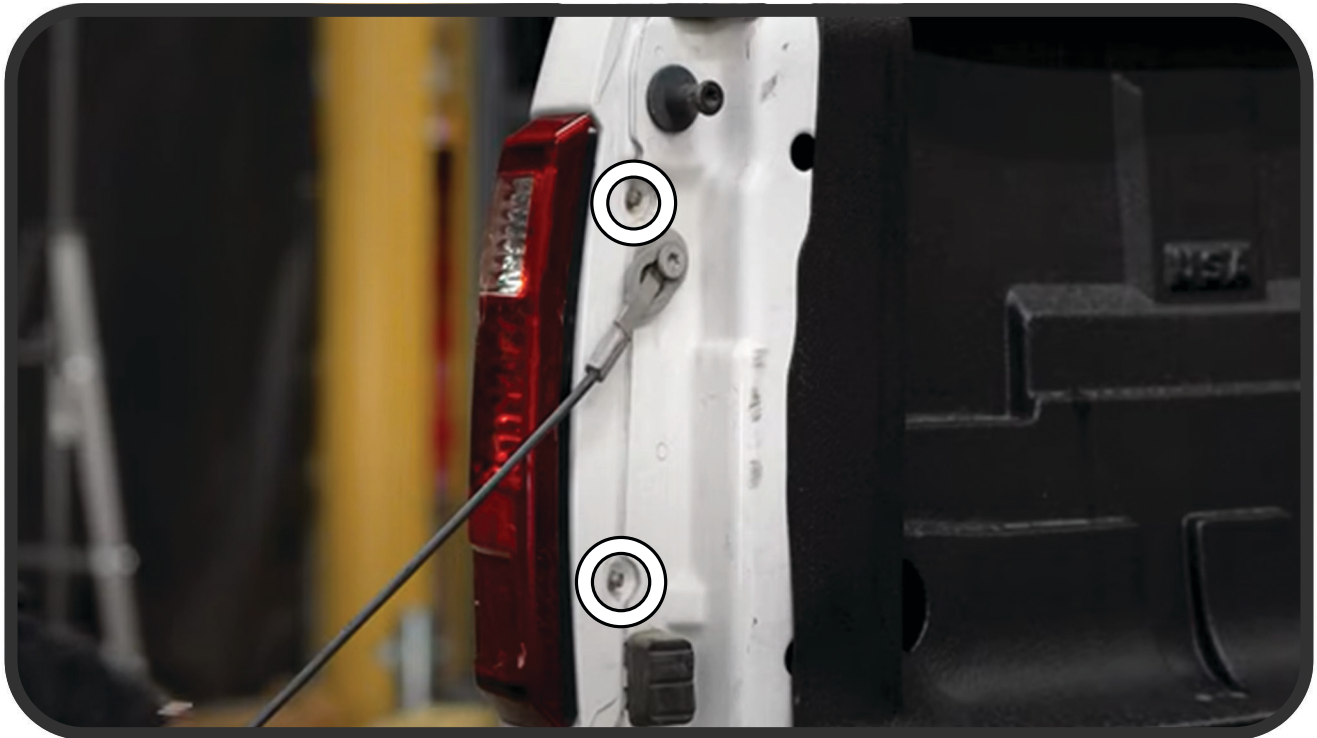


STEP 2:
REMOVE (2) 8MM BOLTS SECURING THE TAIL LIGHT



STEP 3:
UNSEAT THE TAIL LIGHT

**STEP 4:**


**REMOVE THE BRAKE AND REVERSE LIGHT SOCKETS
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)**

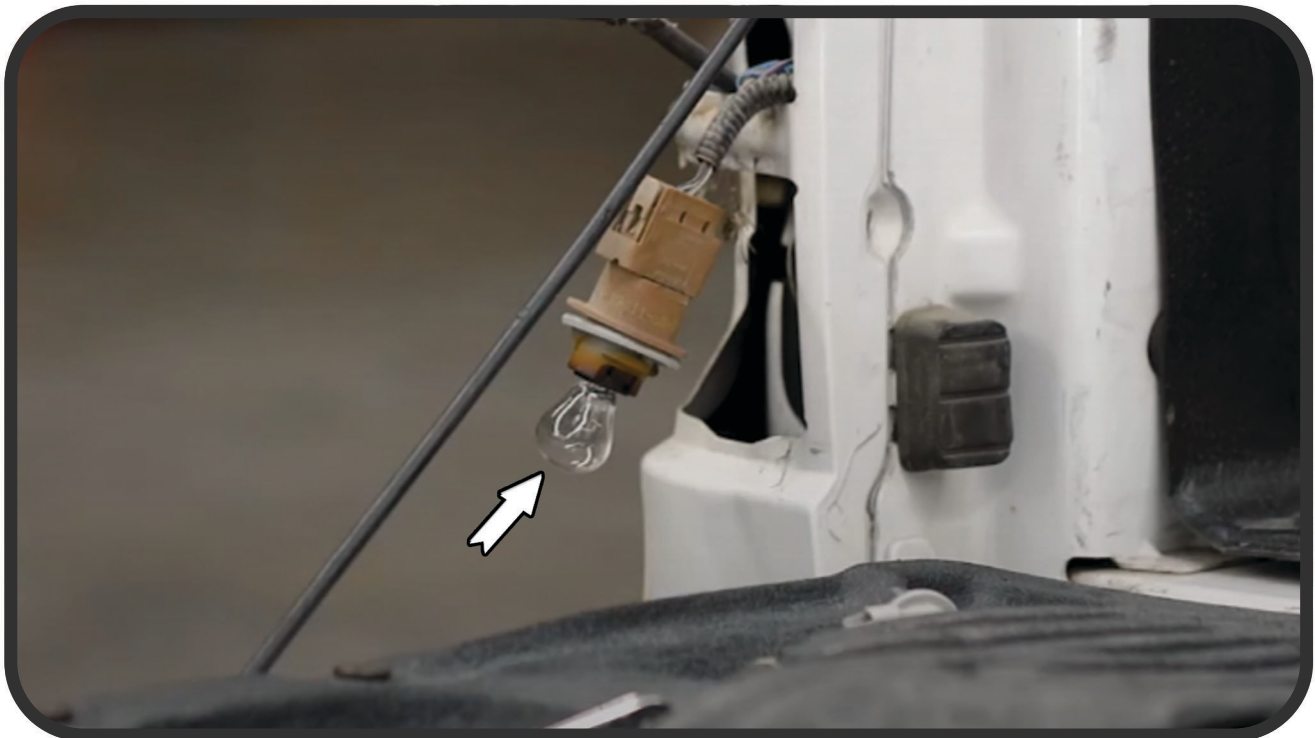**STEP 5:**

REMOVE THE BRAKE BULB FROM THE SOCKET

**STEP 6:**

INSTALL BRAKE SOCKET INSERT INTO THE BRAKE SOCKET AND ENSURE THE BLACK WIRE OF THE SOCKET MATCHES THE BLACK WIRE OF THE SOCKET INSERT

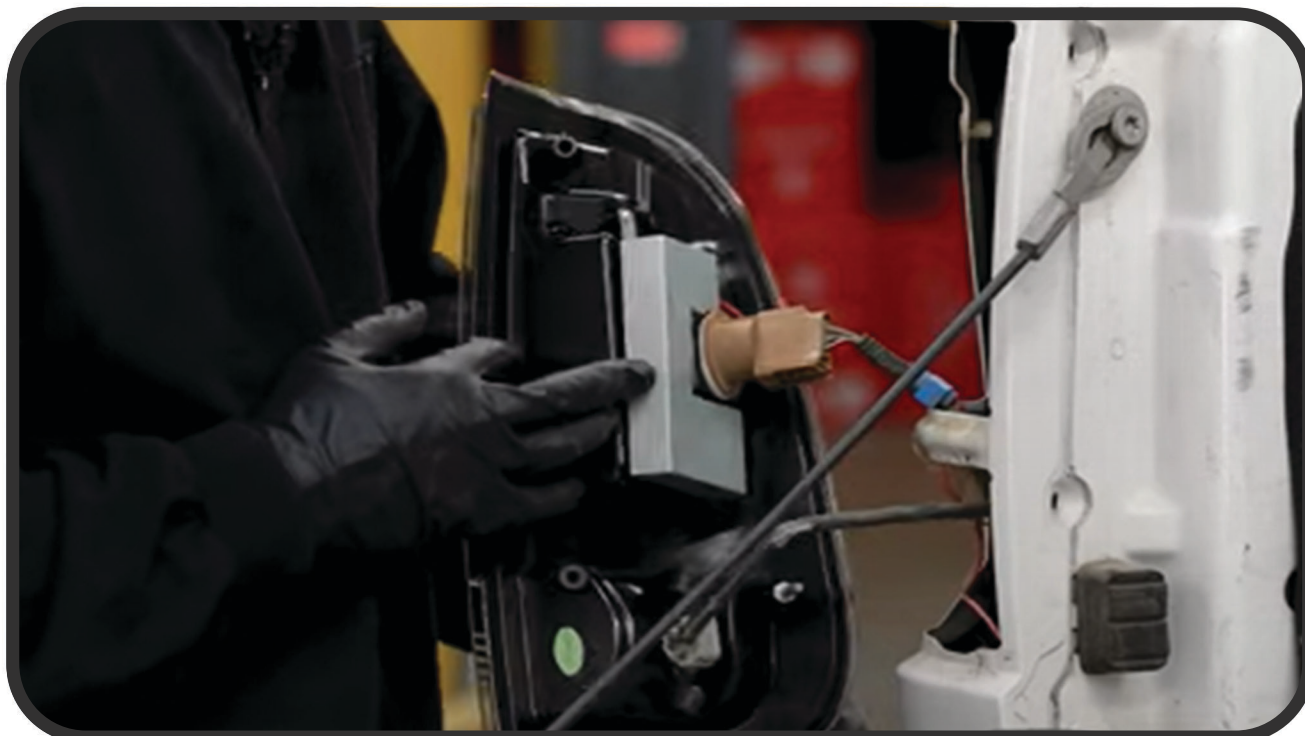**STEP 7:**

INSTALL BRAKE AND REVERSE SOCKET INTO THE SPYDER TAIL LIGHT



STEP 8:
SEAT THE TAIL LIGHT



STEP 9:
REINSTALL THE (2) 8MM BOLTS TO SECURE THE TAIL LIGHT



STEP 10:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY