



SPYDERTM

SKU# 5085580



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2017-2018 FORD F250 SUPERDUTY

(HALOGEN BULB MODEL ONLY. DOES NOT FIT LED MODEL)

 [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
 [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
 [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
 [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
 [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)



SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- 8MM SOCKET

**STEP 1:**

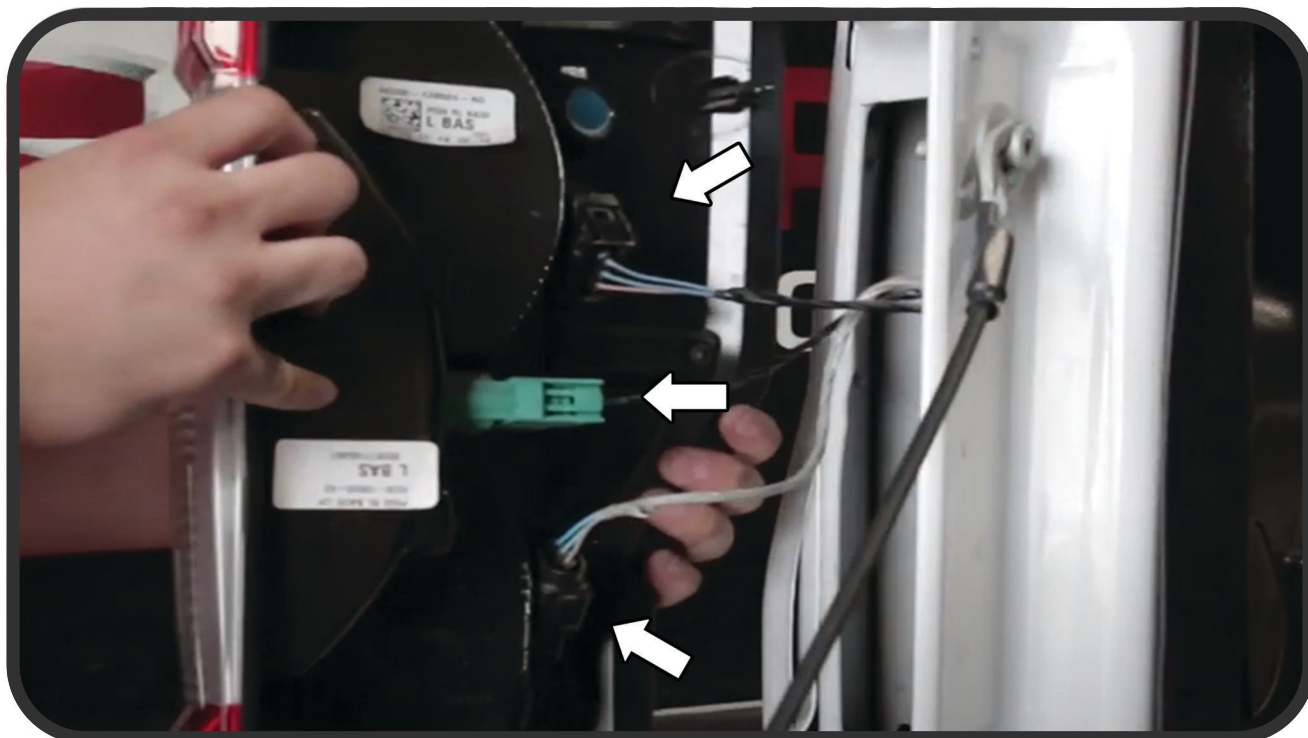
DISCONNECT THE NEGATIVE BATTERY TERMINAL


STEP 2:

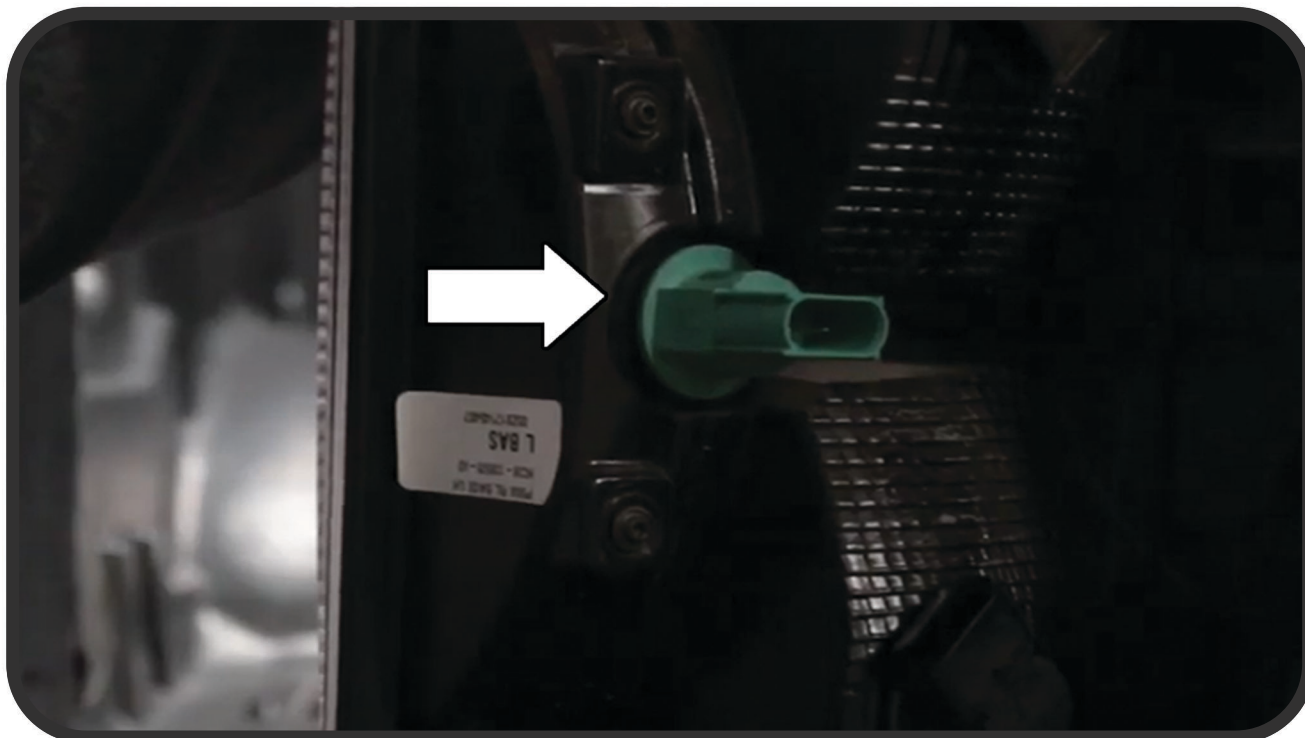
REMOVE (2) 8MM BOLTS SECURING THE TAIL LIGHT


STEP 3:

UNSEAT THE TAIL LIGHT


STEP 4:

DISCONNECT THE (3) HARNESSES ATTACHED TO THE TAIL LIGHT


STEP 5:

**REMOVE THE REVERSE BULB SOCKET AND DISCONNECT THE BULB
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)**


STEP 6:

INSTALL REVERSE SOCKET INSERT INTO THE REVERSE SOCKET AND ENSURE THE BLACK WIRE OF THE SOCKET MATCHES THE BLACK WIRE OF THE SOCKET INSERT


STEP 7:

INSTALL REVERSE SOCKET INTO THE SPYDER TAIL LIGHT

**STEP 8:****CONNECT THE (3) TAIL LIGHT HARNESSES****STEP 9:****SEAT THE TAIL LIGHT**



STEP 10:
REINSTALL THE (2) 8MM BOLTS



STEP 11:
RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY