



# SPYDER™

## SKU# 5080660



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 2014-2018 GMC SIERRA 1500
- 2015-2019 GMC SIERRA 2500HD/3500HD  
(NOT COMPATIBLE ON 2016 MODELS W/FACTORY LED TAIL LIGHTS  
OR 3500 HD DUALY MODELS)

- FACEBOOK.COM/SPYDERAUTO
- LINKEDIN.COM/COMPANY/SPYDER-AUTO
- INSTAGRAM.COM/SPYDERAUTO
- TWITTER.COM/SPYDERAUTO
- TIKTOK.COM/@SPYDERAUTO



SCAN THE QR CODE  
TO VISIT OUR WEBSITE


**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

- RATCHET
- T15 SOCKET




**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**

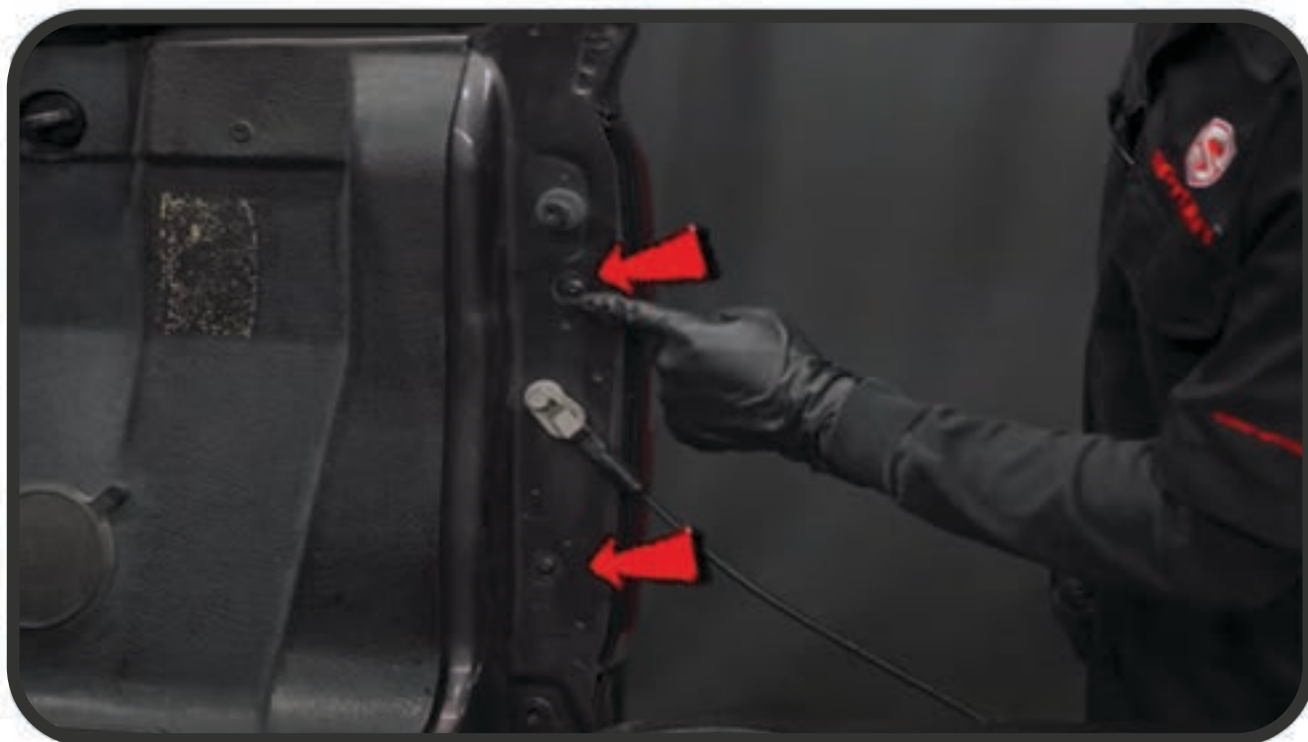

**STEP 2:**  
REMOVE (2) T15 SCREWS



**STEP 3:**  
UNSEAT TAIL LIGHT

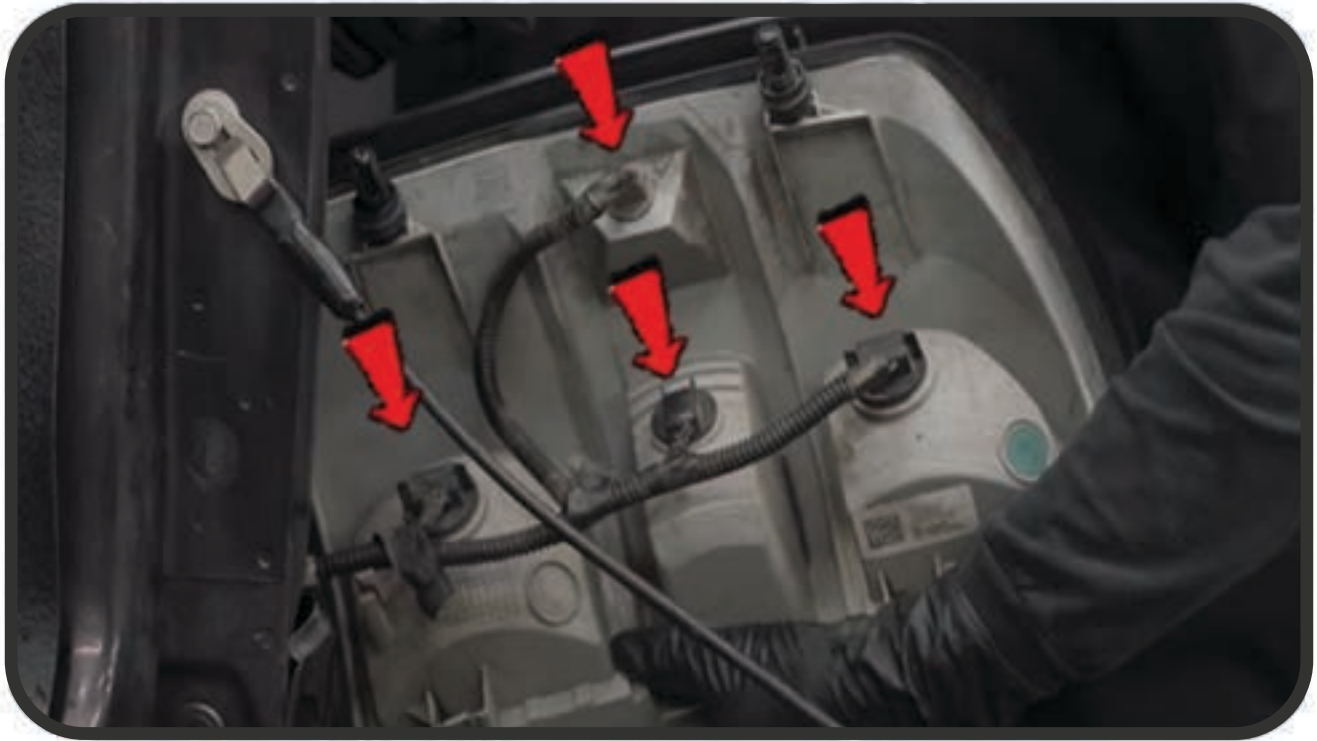

**STEP 4:**  
**REMOVE (4) BULB SOCKETS FROM TAIL LIGHT**



**STEP 5:**  
**REMOVE BULBS FROM TOP AND BOTTOM BRAKE/SIGNAL AND ALSO SIDE MARKER BULB**



## STEP 6:

**INSTALL (2) BRAKE/TURN AND (1) SIDE MARKER SOCKET INSERT ON SPYDER TAIL LIGHT INTO BRAKE SOCKET. (MAKE SURE TO ALIGN BLACK WIRE OF SOCKET TO BLACK WIRE OF SOCKET INSERT)**



## STEP 7:

**SEAT ALL SOCKETS ONTO SPYDER TAIL LIGHT**



**STEP 8:**  
SEAT SPYDER TAIL LIGHT



**STEP 9:**  
REINSTALL (2) T15 SCREWS

**STEP 10:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY.**