



SPYDER™

SKU# 5085702



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2015-2019 GMC YUKON/YUKON XL

 [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
 [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
 [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
 [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
 [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- T15 TORX SOCKET
- PANEL POPPER

**STEP 1:****DISCONNECT THE NEGATIVE BATTERY TERMINAL**


STEP 2:

REMOVE THE TAIL LIGHT TRIM PANEL USING A PANEL POPPER


STEP 3:

REMOVE THE (2) T15 TORX BOLTS SECURING THE TAIL LIGHT

**STEP 4:**

DISCONNECT THE HARNESS UNDERNEATH THE VEHICLE

**STEP 5:**

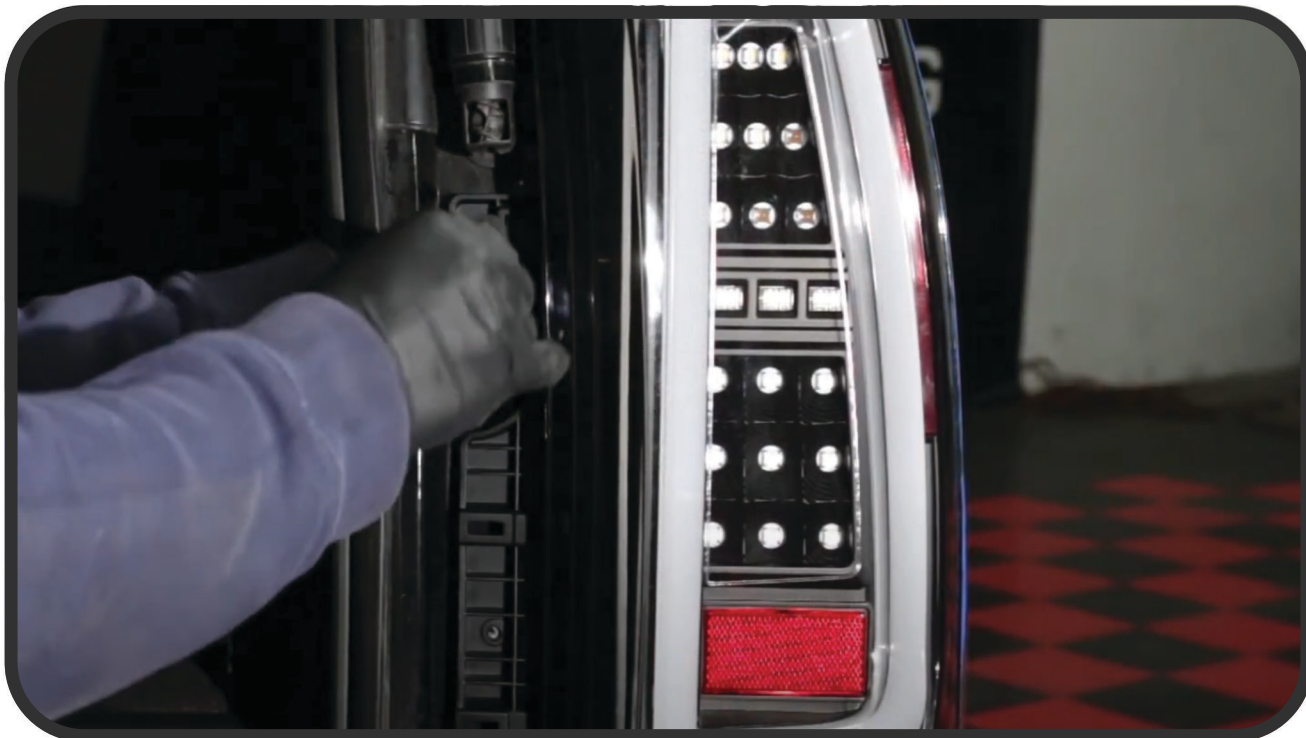
CAREFULLY UNSEAT THE HEADLIGHT AND THREAD THE TAIL LIGHT HARNESS OUT



STEP 6:
FEED SPYDER HARNESS INTO THE VEHICLE



STEP 7:
SEAT THE SPYDER TAIL LIGHT

**STEP 8:**

REINSTALL THE (2) T15 TORX SCREWS TO SECURE THE TAIL LIGHT

**STEP 9:**

REINSTALL THE TRIM PANEL



STEP 10:
CONNECT THE TAIL LIGHT HARNESS



STEP 11:
**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE
THEY FUNCTION PROPERLY**