



SPYDER™

SKU# 5086174



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2019-2024 JEEP WRANGLER

-  [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
-  [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
-  [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
-  [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
-  [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)




SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:




- RATCHET
- 10MM SOCKET
- TRIM REMOVER
- PHILLIPS SCREWDRIVER

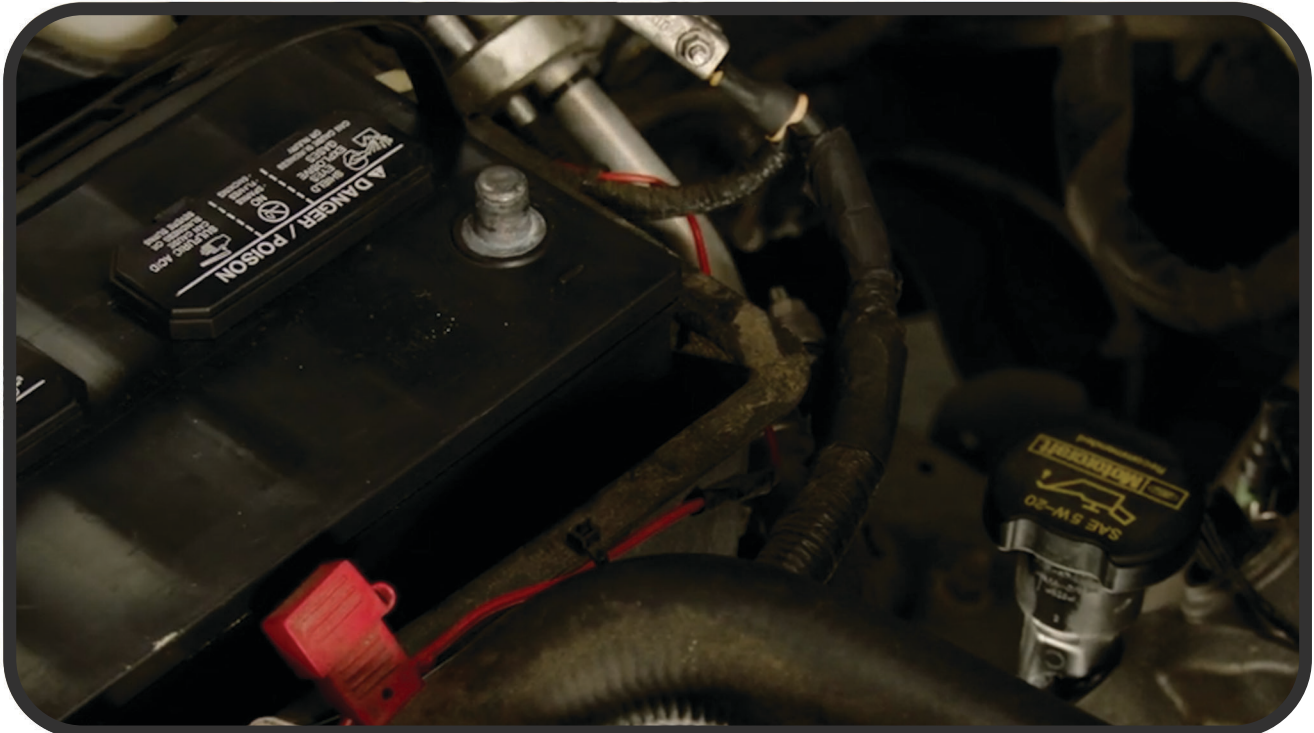

STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL



STEP 2:
OPEN THE TAIL GATE AND REMOVE THE ACCESS PANEL COVER

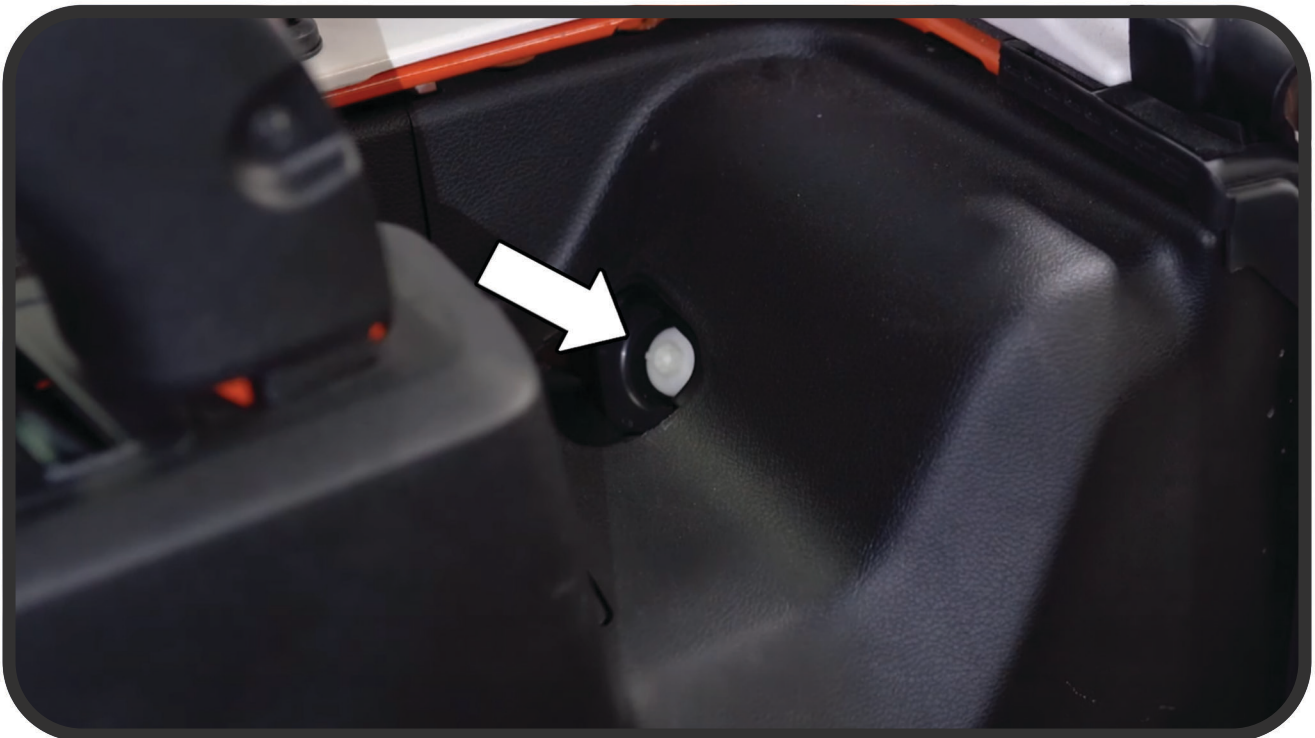

STEP 3:
REMOVE THE 10MM BOLT BEHIND THE ACCESS PANEL



STEP 4:
UNSEAT THE OLD TAIL LIGHT



STEP 5:
DISCONNECT THE TAIL LIGHT HARNESS BY PUSHING UP ON THE RED TAB TO UNLOCK IT



STEP 6:

REMOVE (3) PHILLIPS SCREWS SECURING THE TAIL LIGHT BRACKET




STEP 7:


REMOVE THE TAIL LIGHT BRACKET BY RELEASING THE CLIP

**STEP 8:**

TRANSFER THE TAIL LIGHT BRACKET MAKING SURE TO MOVE THE HARNESS AS NEEDED TO NOT PINCH THE WIRING

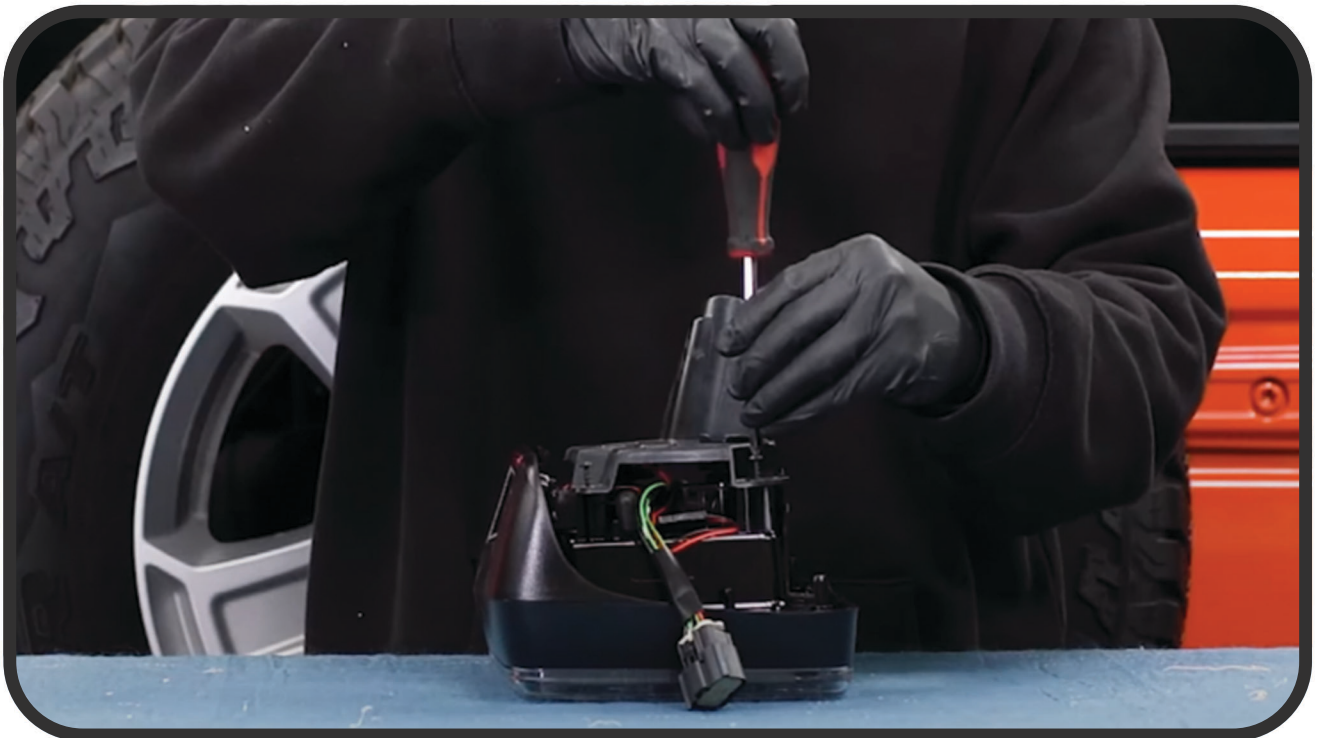**STEP 9:**

REINSTALL THE (3) PHILLIPS SCREWS

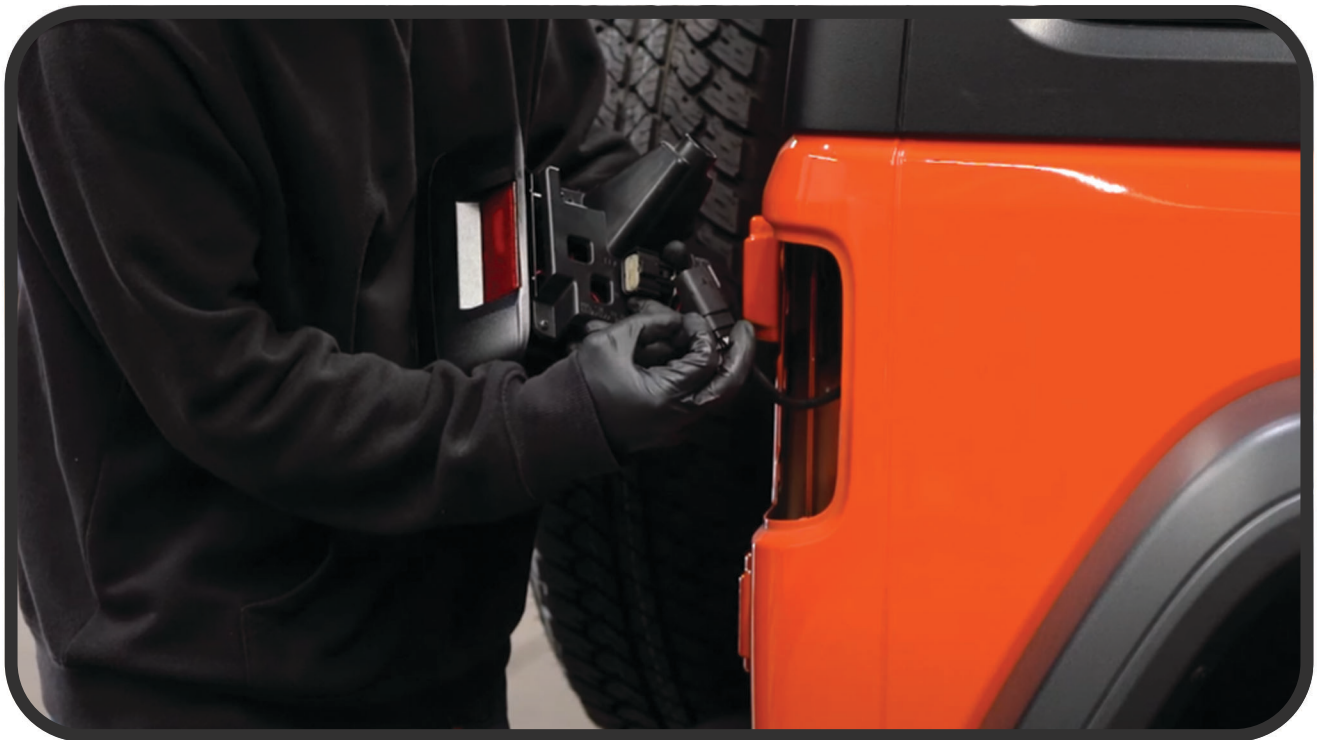

STEP 10:
CONNECT THE TAIL LIGHT HARNESS



STEP 11:
SEAT THE SPYDER TAIL LIGHT



STEP 12:

REINSTALL THE 10MM BOLT TO SECURE THE TAIL LIGHT



STEP 13:

REINSTALL THE TAIL LIGHT ACCESS PANEL COVER



STEP 14:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY