



# SPYDER™

## SKU# 5007025



SCAN THE QR CODE TO  
VIEW OUR CHANNEL

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

• 2004-2015 NISSAN TITAN

-  [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
-  [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
-  [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
-  [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
-  [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

- RATCHET
- 10MM SOCKET
- PANEL POPPER




**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**



**STEP 2:**  
REMOVE (2) 10MM BOLTS



**STEP 3:**  
UNSEAT TAIL LIGHT

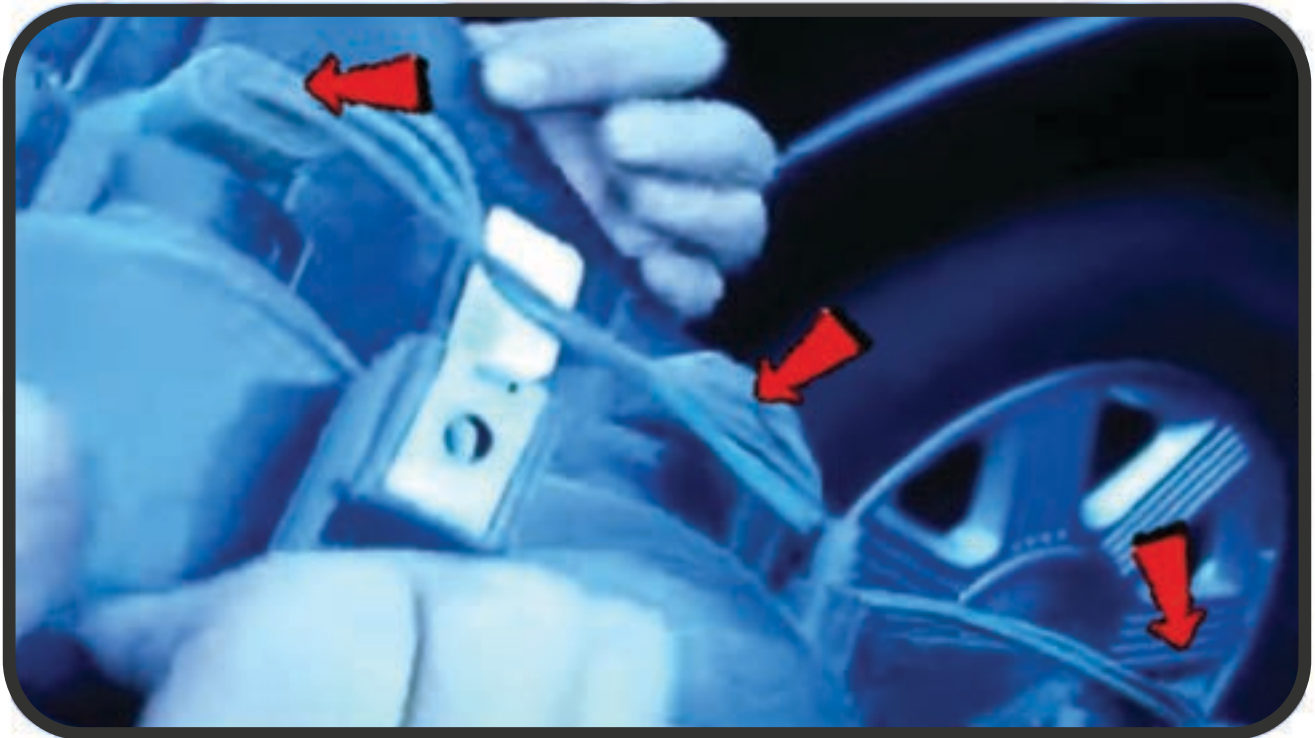

**STEP 4:**  
**REMOVE (3) TAIL LIGHT SOCKETS**



**STEP 5:**  
**USE PANEL POPPER TO REMOVE (2) PLASTIC RETAINERS**




**STEP 6:**  
INSTALL (3) BULB SOCKETS INTO SPYDER TAIL LIGHT



**STEP 7:**  
SEAT SPYDER TAIL LIGHT



**STEP 8:**  
INSTALL (2) 10MM BOLTS

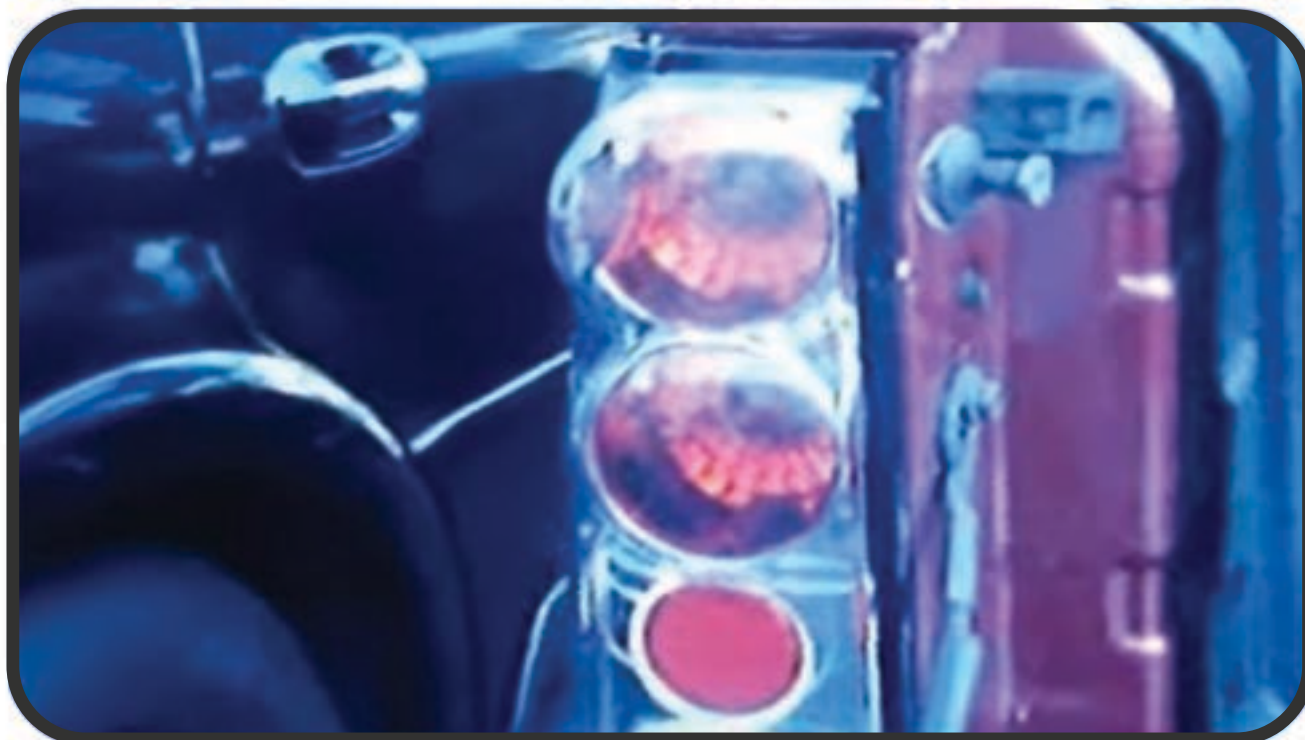

**STEP 9:**  
RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE  
THEY FUNCTION PROPERLY