



SPYDERTM

SKU# 5007063



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2003-2007 PORSCHE CAYENNE

 [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
 [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
 [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
 [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
 [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)

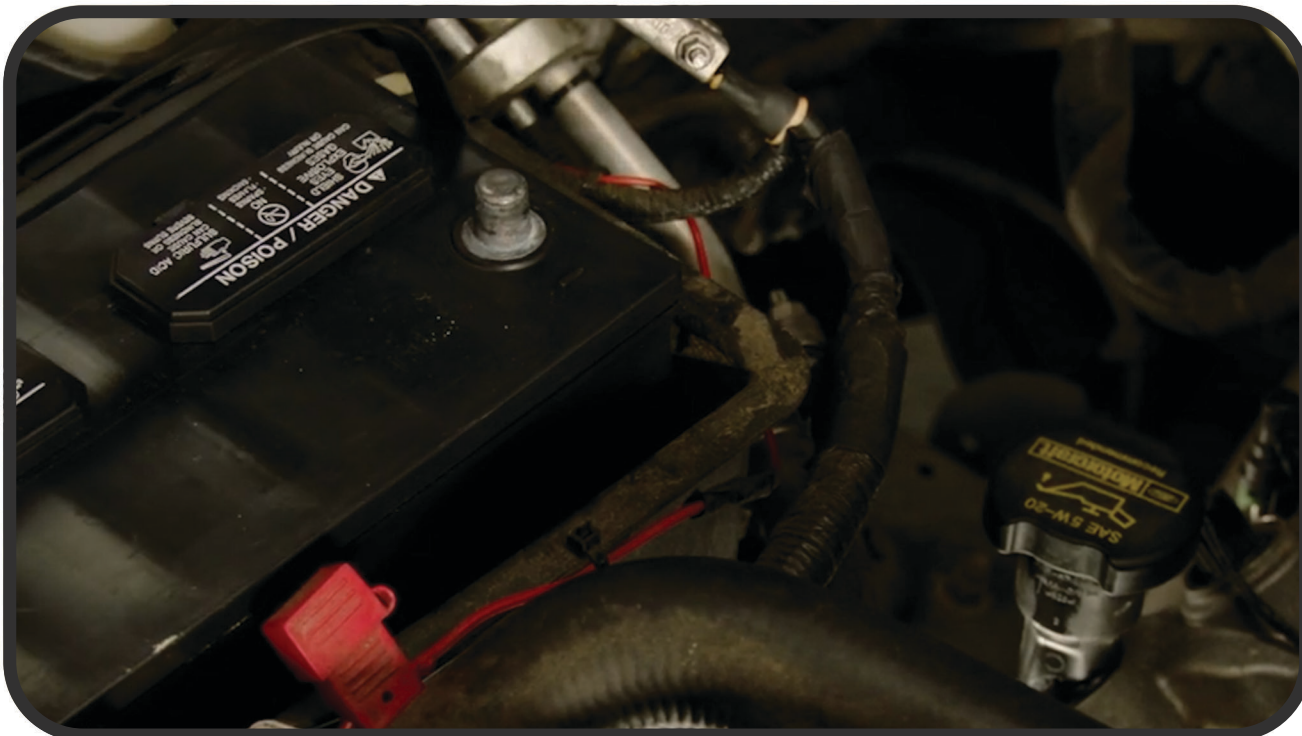


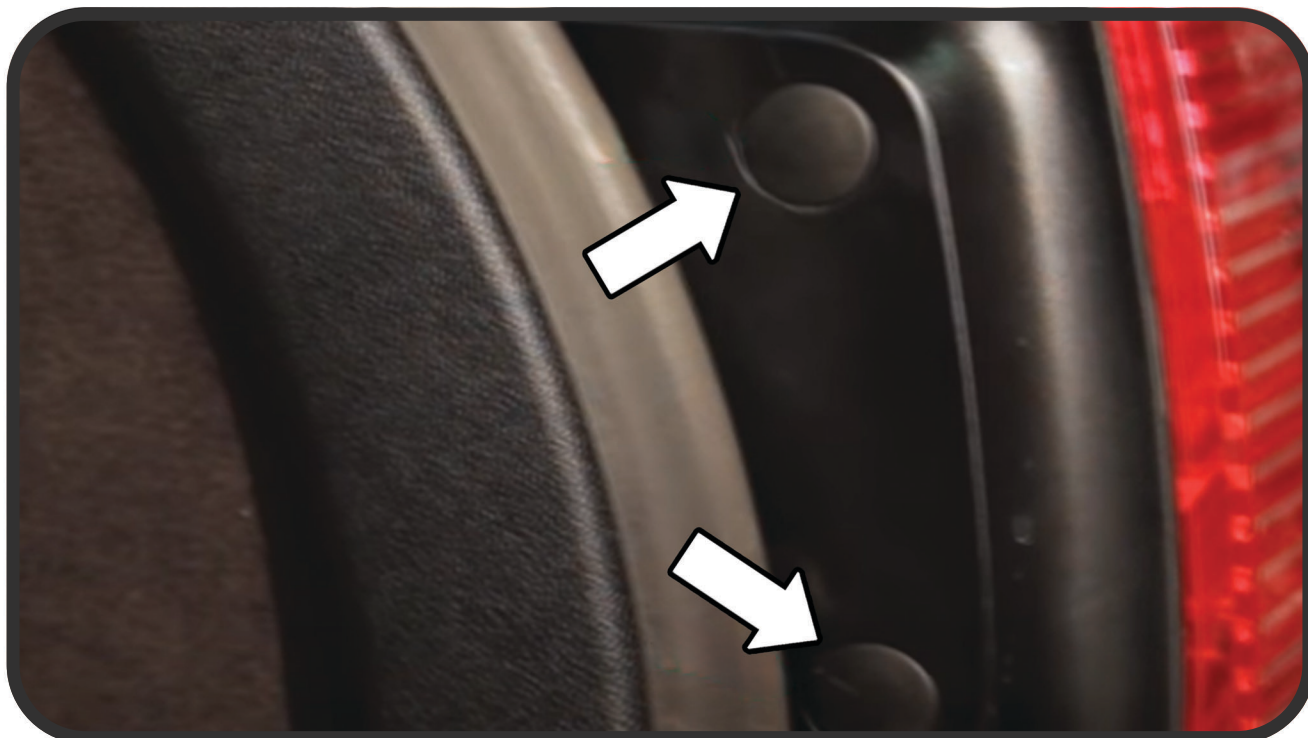
SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

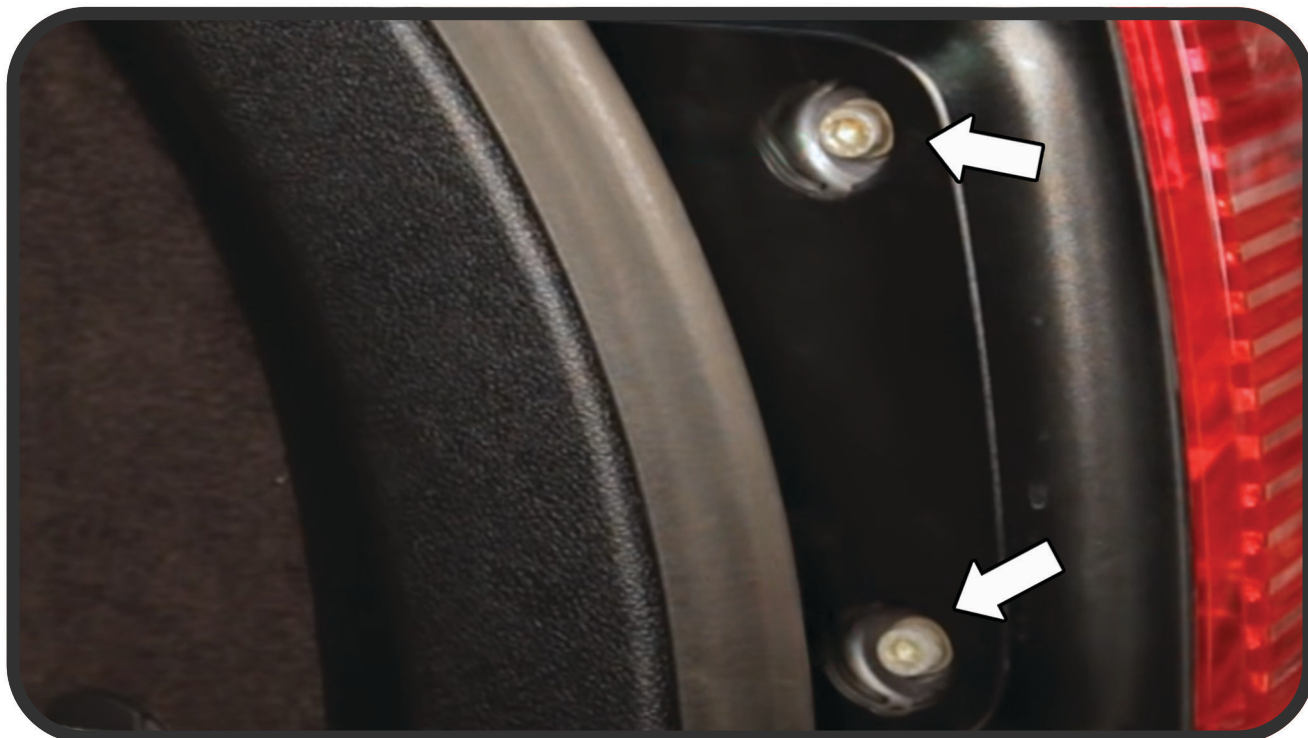
TOOLS REQUIRED:

- RATCHET
- #5 HEX SOCKET
- PANEL POPPER
- PHILLIPS SCREWDRIVER


STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL


STEP 2:

REMOVE THE (2) PLASTIC CAPS TO REVEAL THE BOLTS


STEP 3:

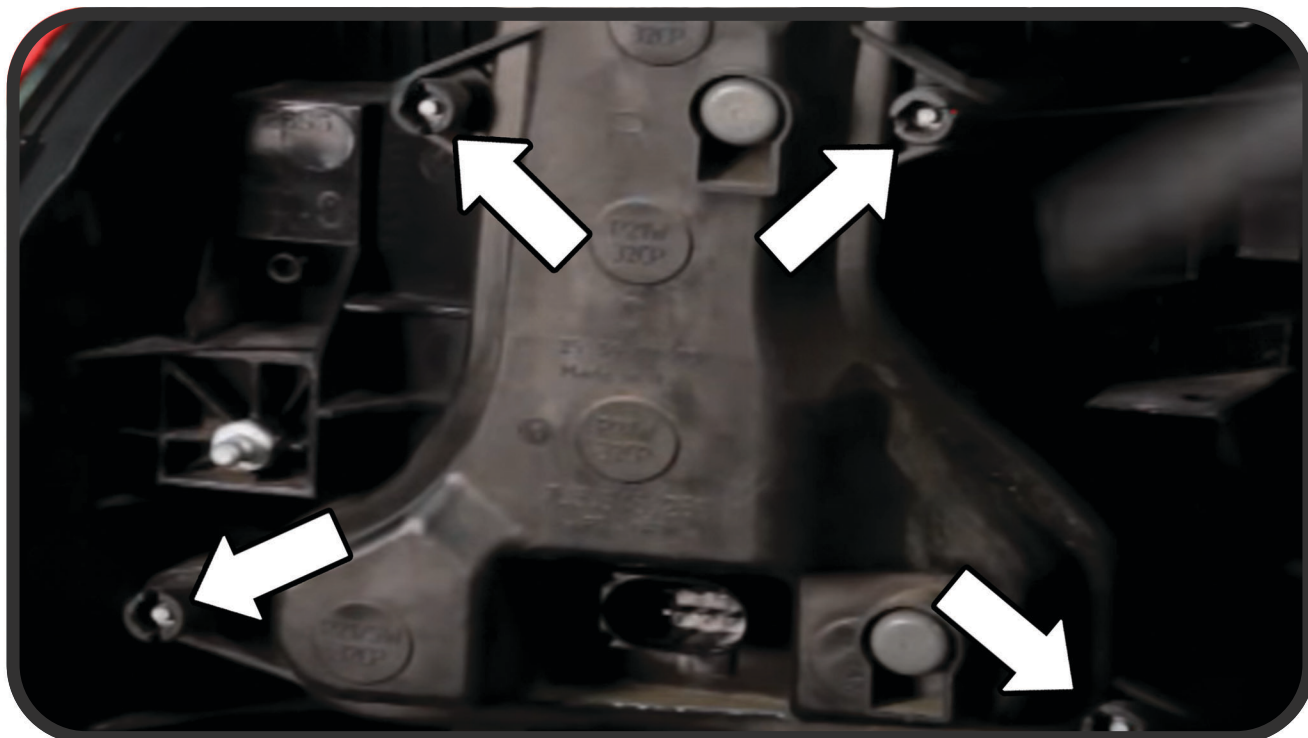
REMOVE (2) #5 HEX BOLTS



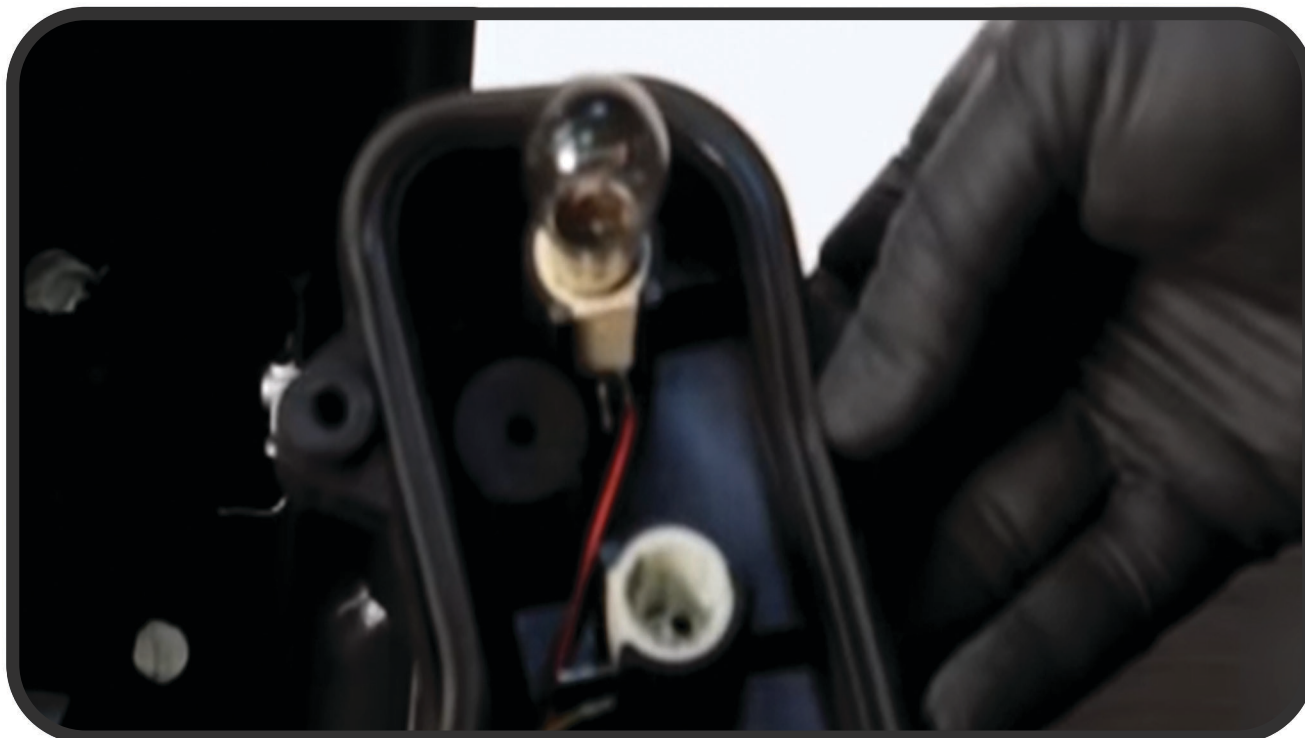
STEP 4:
UNSEAT THE TAIL LIGHT



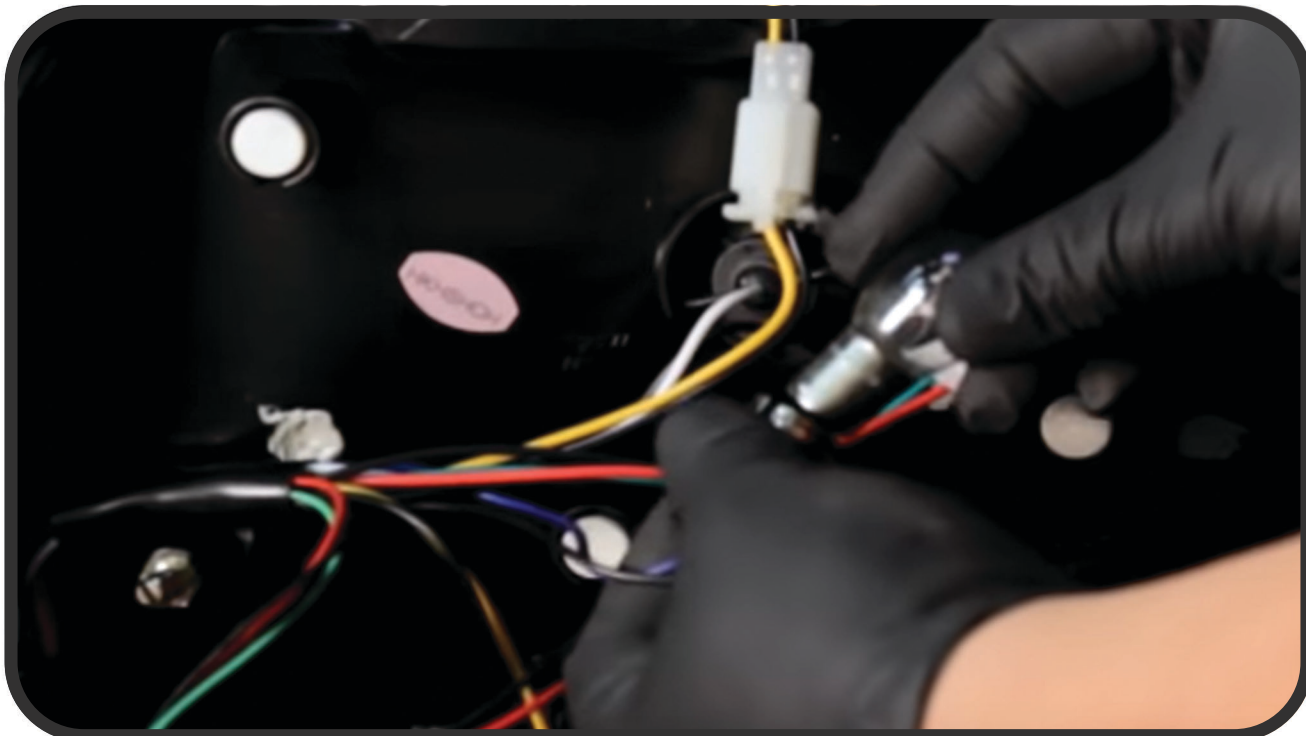
STEP 5:
DISCONNECT THE TAIL LIGHT HARNESS


STEP 6:

REMOVE (4) PHILLIPS SCREWS SECURING THE BULB PLATE


STEP 7:

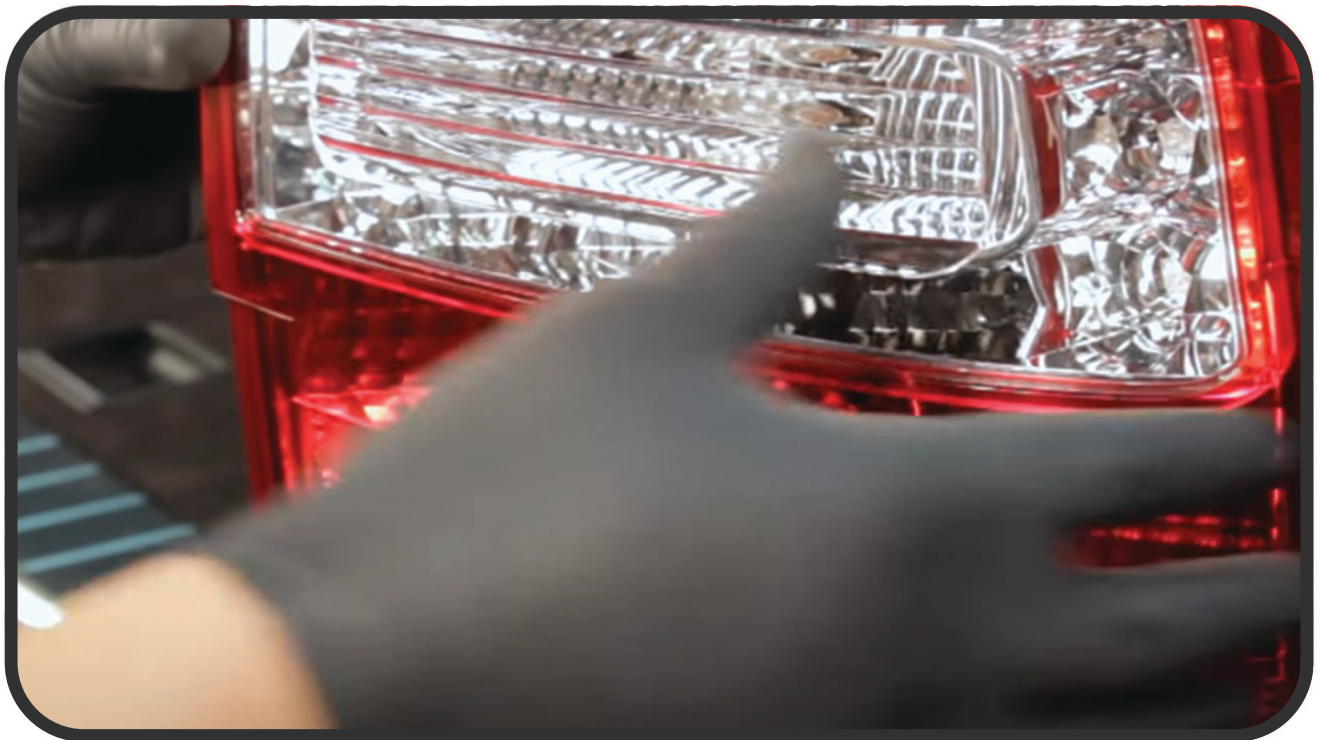
**REMOVE (2) REAR FOG AND REVERSE BULBS
(NOTE: NEVER TOUCH BULBS WITH BARE HANDS)**

**STEP 8:**

TRANSFER THE FOG AND REVERSE BULBS TO THE SPYDER TAIL LIGHT SOCKETS

**STEP 9:**

CONNECT THE SPYDER TAIL LIGHT HARNESS



STEP 10:
SEAT THE SPYDER TAIL LIGHT



STEP 11:
REMOVE THE (2) INCLUDED PLASTIC CAPS

**STEP 12:**

REINSTALL THE (2) #5 HEX BOLTS TO SECURE THE TAIL LIGHT AND RE-INSTALL THE (2) PLASTIC CAPS

**STEP 13:**

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY