



SPYDER™

SKU# 5007759



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2003-2007 SCION XB



FACEBOOK.COM/SPYDERAUTO

LINKEDIN.COM/COMPANY/SPYDER-AUTO

INSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV



TOOLS REQUIRED:

- RATCHET
- 10MM SOCKET

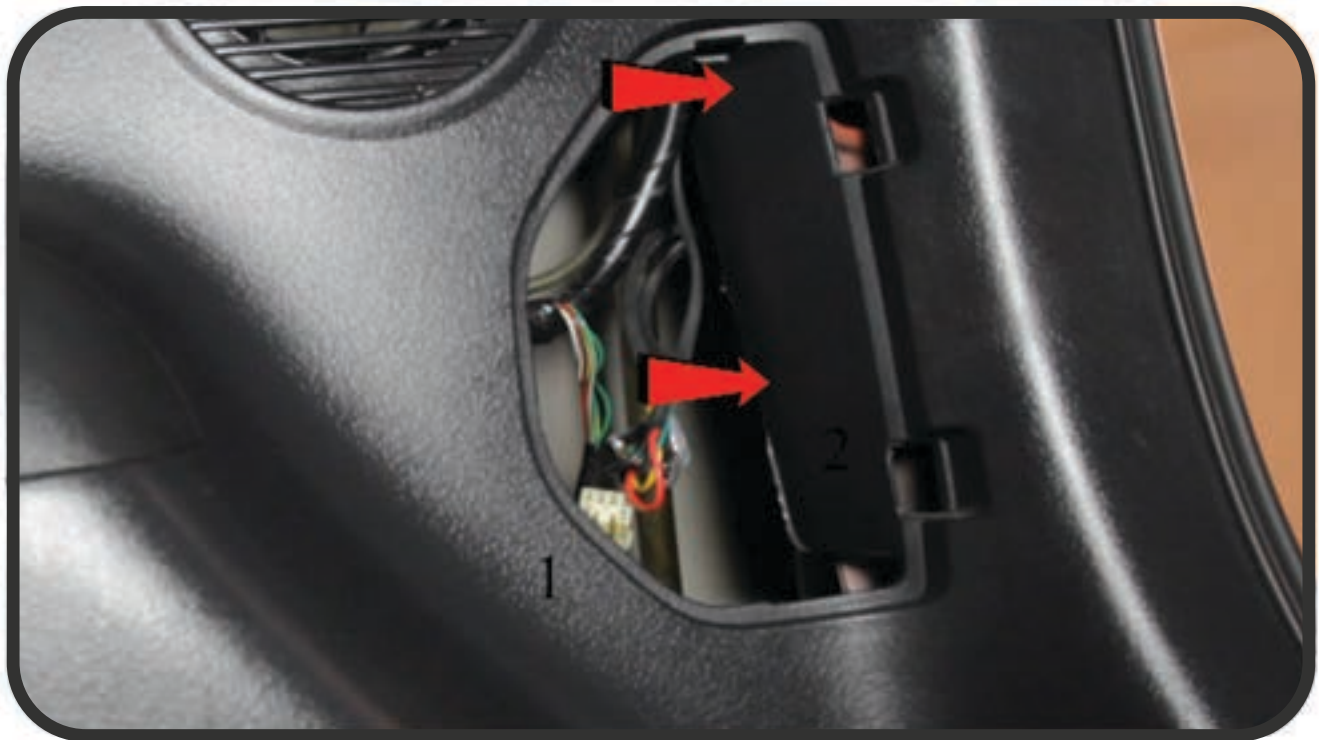

STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL


STEP 2:

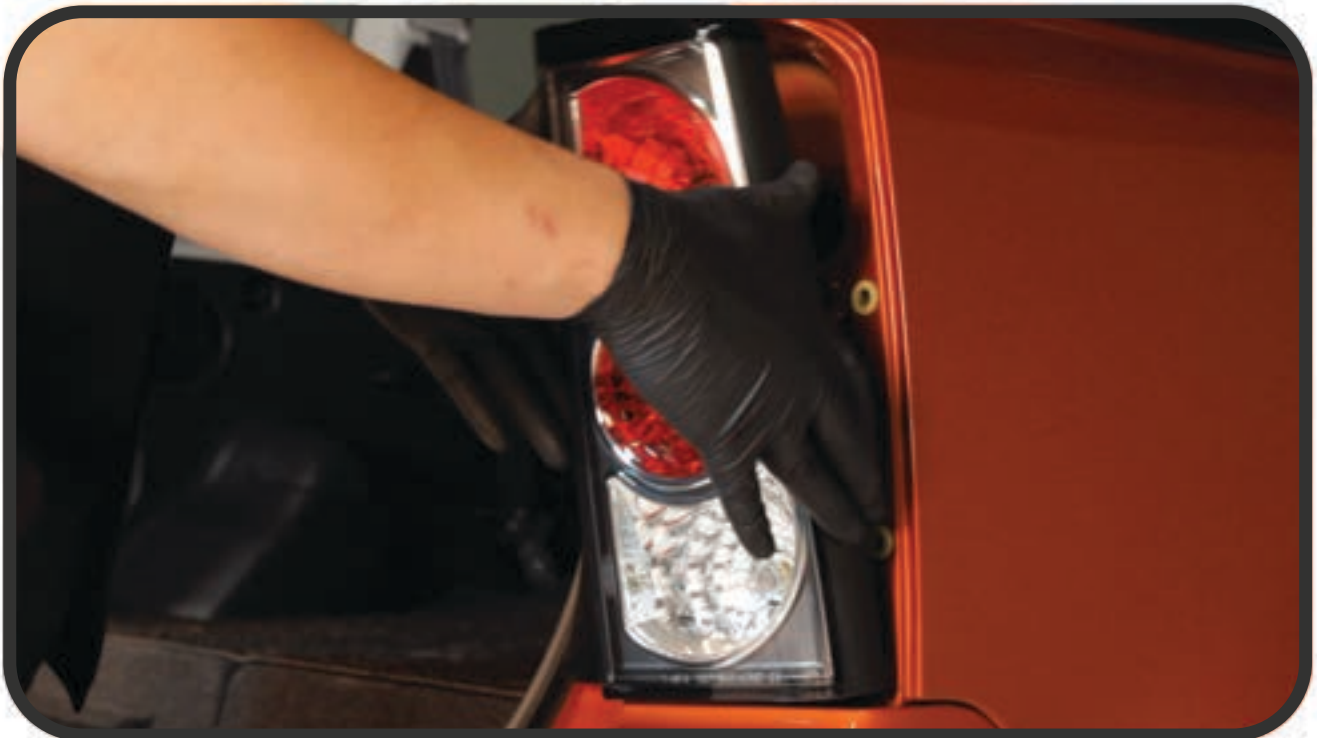
OPEN THE TAIL LIGHT ACCESS PANEL BY RELEASING THE TWO TABS


STEP 3:

DISCONNECT THE TAIL LIGHT WIRING HARNESS


STEP 4:

REMOVE THE TWO 10MM BOLTS HIDDEN BEHIND THE PANEL SECURING THE TAIL LIGHT


STEP 5:

UNSEAT THE OEM TAIL LIGHT


STEP 6:

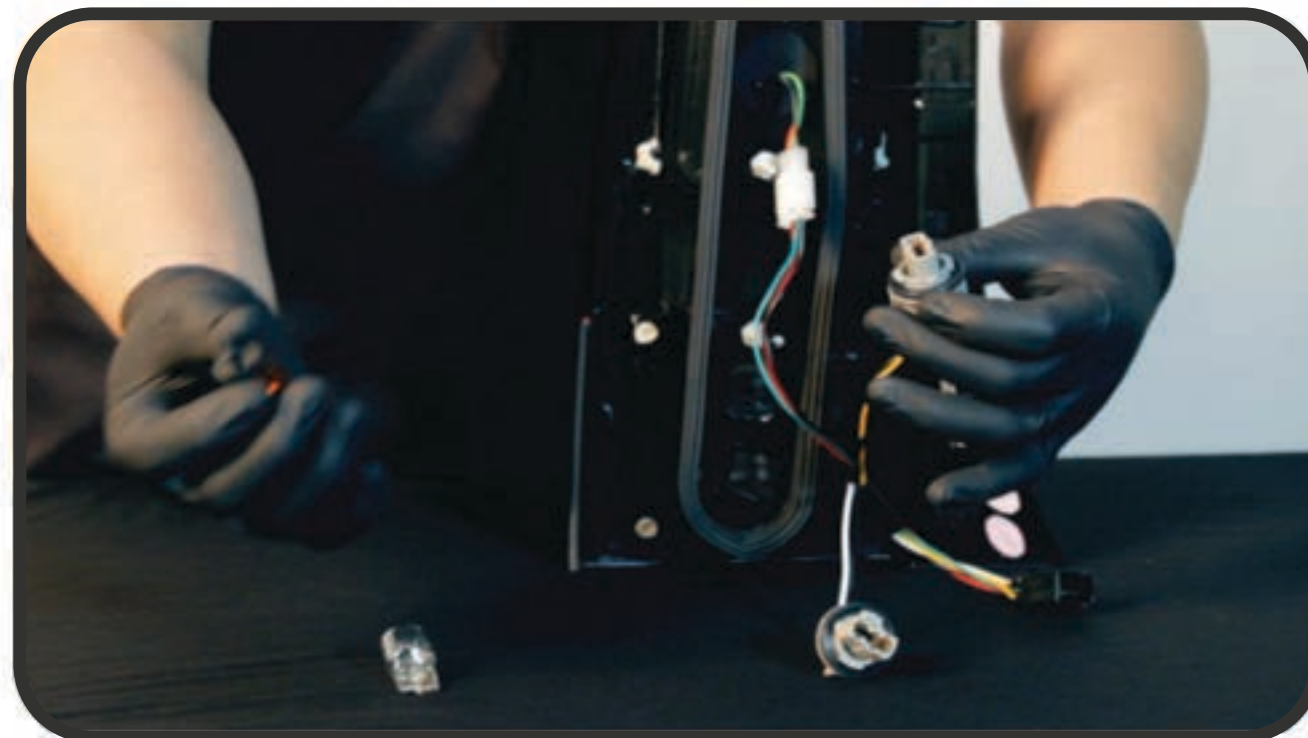
REMOVE ALL THREE BULB SOCKETS FROM THE OEM TAIL LIGHT, THEN REMOVE THE TAIL LIGHT AND SET IT ASIDE. NEVER TOUCH EXPOSED BULBS WITH BARE HANDS


STEP 7:

REMOVE THE OEM TAIL LIGHT BULB HARNESS BY PULLING IT OUT THROUGH THE ACCESS PANEL. REMOVE THE REVERSE LAMP BULB AND TURN SIGNAL BULB FROM THEIR SOCKETS


STEP 8:

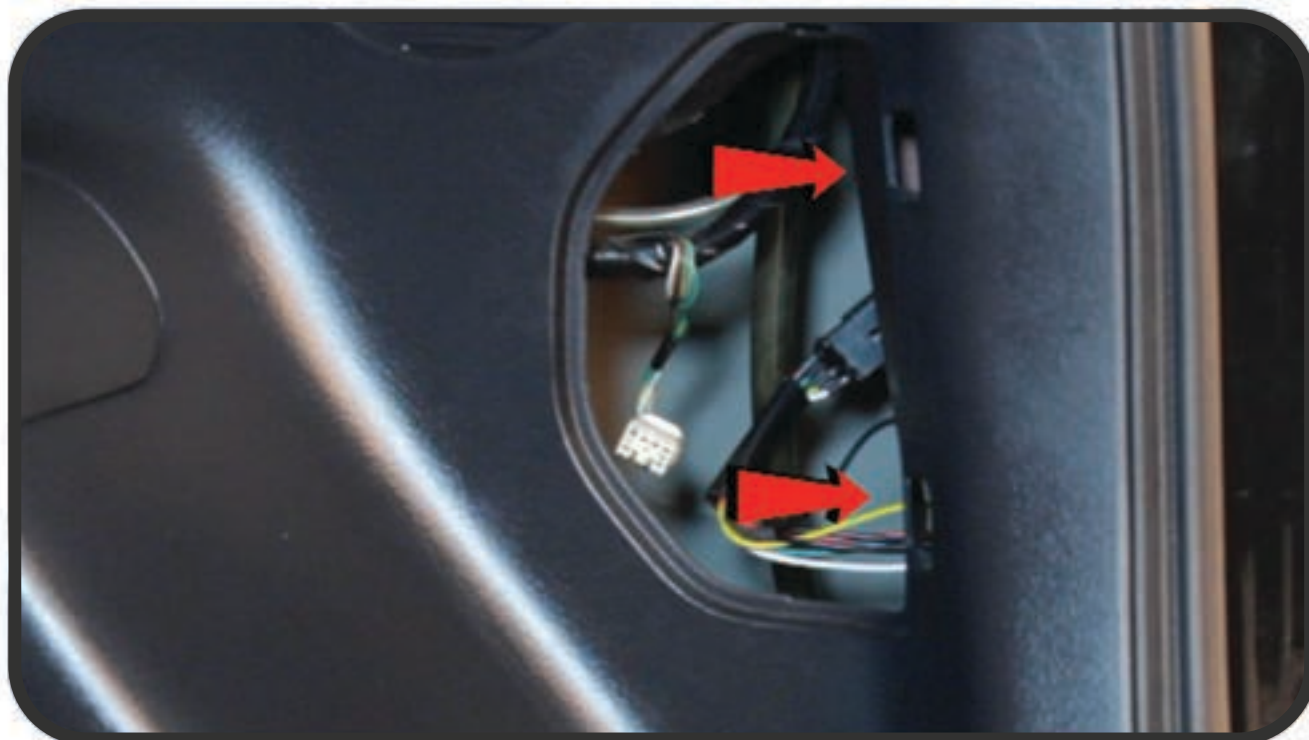
LOCATE SPYDER TAIL LIGHT AND THE REVERSE BULB AND TURN SIGNAL BULB


STEP 9:

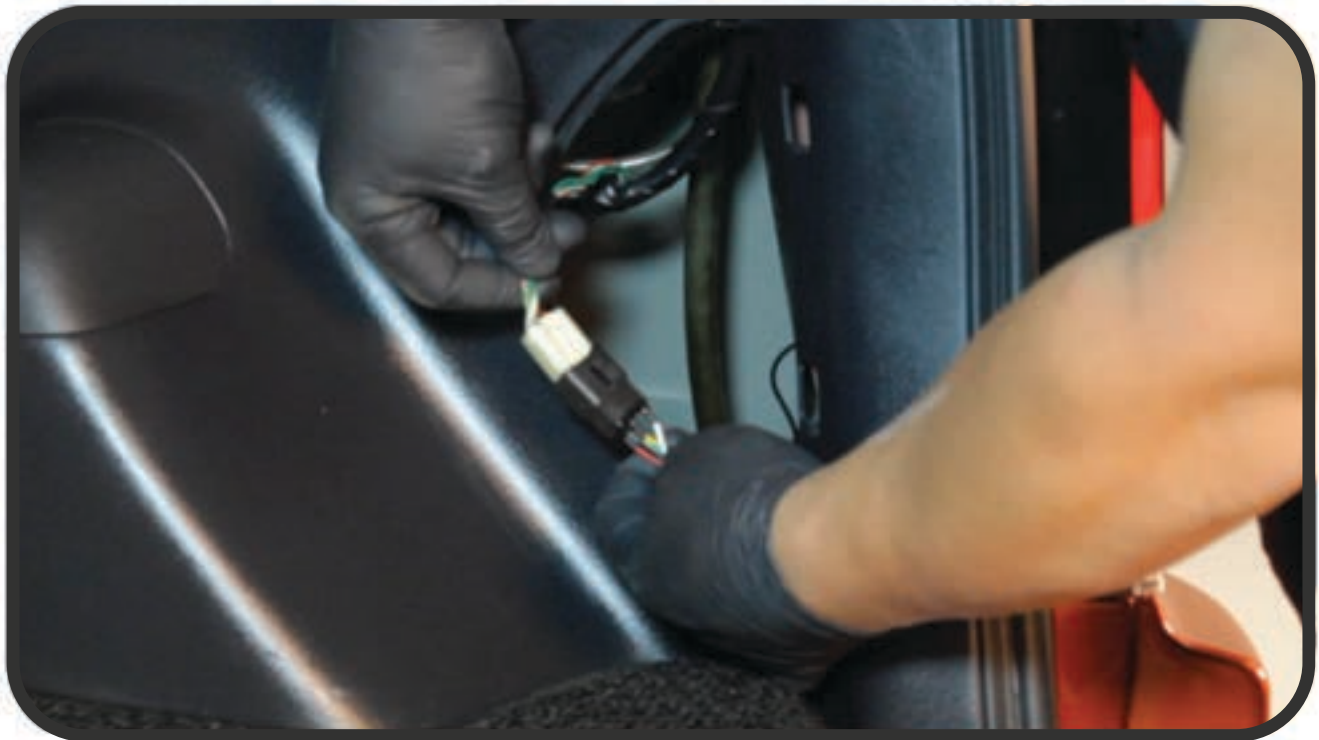
TRANSFER THE TURN SIGNAL BULB TO THE YELLOW AND BLACK WIRE BULB SOCKET. TRANSFER THE REVERSE LAMP BULB TO THE WHITE AND BLACK WIRE BULB SOCKET. REINSTALL THE SOCKETS


STEP 10:

FEED THE SPYDER TAIL LIGHT HARNESS INTO THE BODY THROUGH THE BOTTOM OPENING AS SHOWN, THEN SEAT THE SPYDER TAIL LIGHT


STEP 11:

REINSTALL [2] 10MM/FLATHEAD BOLTS TO SECURE THE TAIL LIGHT TO THE BODY


STEP 12:

**CONNECT THE SPYDER TAIL LIGHT HARNESS TO THE
MAIN WIRING HARNESS**


STEP 13:

REINSTALL THE TAIL LIGHT ACCESS PANEL


STEP 12:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY