



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CCO15-LBDRL-(All)

Tools Needed:

- ¼" ratchet
- 7, 8 and 10mm socket
- T15 Torx
- Panel popper



1. Remove (6x) T15 torx screws securing the grill.




2. Remove (3x) T15 torx screws securing the fender liner.



3. Pull back fender liner and remove (3x) 7mm bolts securing the bumper fascia.



4. Remove (6x) 8mm bolts below the bumper fascia.

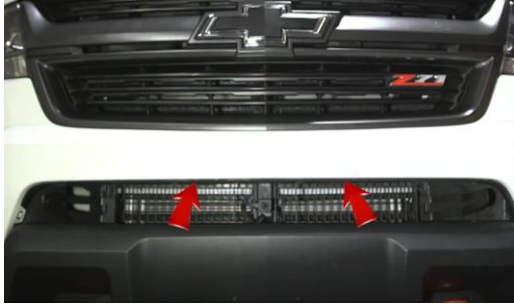

5. Remove (2x) 10mm bolts holding the bumper in place.



6. Unseat bumper fascia.



7. Disconnect fog light harness and set bumper aside.



8. Remove (4x) 7mm bolts securing the headlight.



9. Unseat headlight.



10. Disconnect headlight harness.



11. Connect Spyder headlight harness.



12. Disconnect headlight and turn signal harness.




13. Reinstall (4x) 7mm bolts securing the headlight




14. Reconnect fog light harness.



15. Seat front bumper fascia.

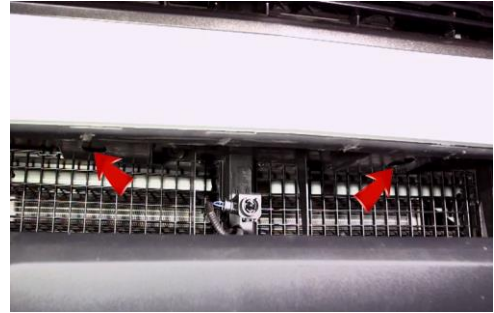

16. Reinstall (2x) 10mm bolts.

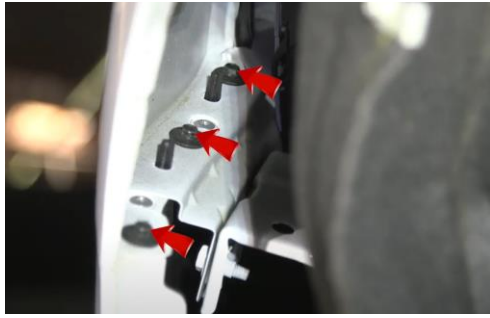

17. Reinstall (3x) 7mm bolts on corner of bumper.



18. Install (3x) T15 torx screws securing fender liner.



19. Reinstall (6x) T15 screws securing grill.



20. Reinstall (6x) 8mm bolts securing bottom of bumper fascia.



21. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.