



This product is designed to be placed on the painted metal surface of the door.

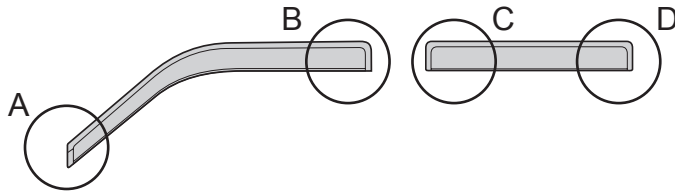


70°-100° F (Install temp.)


- 1 Clean door's painted surface, mirror cap, and mirror cap rubber seal (if applicable) with alcohol pad. If Surface Prep Pads are included, apply one coat of Surface Prep to previously cleaned areas on all doors promptly to prevent evaporation.
- 2 Remove tape liner from front and rear flanges. Peel back 2" from each end of top flange.
- 3 Align front flange to mirror cap. Front end flange may overlap mirror cap depending on vehicle style. (If rubber window seal is present, visor attaches to the door above the trim and seal.) Attach top and rear flanges to doors painted surface.
- 4 Remove tape liner by pulling on free ends. Apply pressure to flanges to secure.
- 5 The rear visor attaches with the same preparation methods as the front visor.

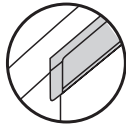


A

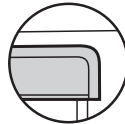

B

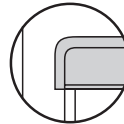

C

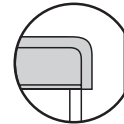

D

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.