



SUPERLIFT®

S U S P E N S I O N

Superlift 4" standard lift system for 2005 and Newer FORD F-250 / F-350 SUPER DUTY 4WD INSTALLATION INSTRUCTIONS

INTRODUCTION

Installation requires a professional mechanic. Prior to beginning, inspect the vehicles steering, driveline, and brake systems, paying close attention to the suspension link arms and bushings, anti-sway bars and bushings, tie rod ends, pitman arm, ball joints and wheel bearings. Also check the steering sector-to-frame and all suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition; repair or replace all worn parts.

Read instructions several times before starting. Be sure you have all needed parts and know where they install. Read each step completely as you go.

NOTES:

- Front end realignment is necessary.
- An arrow on diagrams indicates which direction is toward the front of the vehicle.
- A foot-pound torque reading is given in parenthesis () after each appropriate fastener.
- Do not fabricate any components to gain additional suspension height.
- Prior to drilling or cutting, check behind the surface being worked on for any wires, lines, or hoses that could be damaged.
- After drilling, file smooth any burrs and sharp edges.
- Prior to operating a torch or saw, protect any heat-sensitive components located in the immediate area by covering them with a water-saturated cloth. Most undercoating are flammable but can be extinguished using a water-filled spray bottle. Have a spray bottle and an ABC rated fire extinguisher on hand.
- Paint or undercoat all exposed metal surfaces.
- Prior to attaching components, be sure all mating surfaces are free of grit, grease, undercoating, etc.
- A factory service manual should be on hand for reference.
- Use the check-off box "☐" found at each step to help you keep your place. Two "☐☐" denotes that one check-off box is for the driver side and one is for the passenger side. Unless otherwise noted, always start with the driver side.

PARTS LIST ... The part number is stamped into each part or printed on an adhesive label. Identify each part and place the appropriate mounting hardware with it.

PART NO	DESCRIPTION (Qty.- if more than one)	NEW ATTACHING HARDWARE (Qty.- if more than one)
----------------	--	---

01-294	(2) front coil spring, diesel	
--------------	-------------------------------	--

OR		
-----------	--	--

01-295.....	(2) front coil spring, gas	
-------------	----------------------------	--

55-01-9024	compression stop bracket,.....	(1) 3/8" x 1-1/4" bolt
	front, driver side	(1) 3/8" x 1" bolt

		(1) 3/8" USS washer
--	--	---------------------

		(2) 3/8" nyloc nut
--	--	--------------------

55-02-9024	compression stop bracket,.....	(1) 3/8" x 1-1/4" bolt
	front, passenger side	(1) 3/8" x 1" bolt

		(1) 3/8" USS washer
--	--	---------------------

		(2) 3/8" nyloc nut
--	--	--------------------

66-09-9000.....	radius arm,	(1) 18mm x 130mm bolt
	driver side	(2) 18mm washer

		(2) 18mm nyloc nut
--	--	--------------------

		(1) Cam Bolts
--	--	---------------

		(1) Zip Tie
--	--	-------------

66-10-9000.....	radius arm,	(1) 18mm x 130mm bolt
	driver side	(2) 18mm washer

		(2) 18mm nyloc nut
--	--	--------------------

		(1) Cam Bolt
--	--	--------------

		(1) Zip Tie
--	--	-------------

55-03-9024.....	steering stabilizer drop	(1) 5/8" x 1-1/2" bolt
	bracket	(1) 5/8" SAE washer

		(1) nyloc nut
--	--	---------------

		(2) 7/16" USS washer
--	--	----------------------

		(2) poly bushing half
--	--	-----------------------

66-04-9024.....	(2) anti-sway bar link extension	
-----------------	----------------------------------	--

55-01-9000.....	front track bar bracket	
-----------------	-------------------------	--

55-07-9024.....	(2) brake line extension bracket ..	(1) 1/4" x 3/4" bolt
-----------------	-------------------------------------	----------------------

		(1) 1/4" nyloc nut
--	--	--------------------

		(1) 5/16" x 3/4" bolt
--	--	-----------------------

		(1) 5/16" nyloc nut
--	--	---------------------

55-05-9024.....	(2) track bar key	
-----------------	-------------------	--

(2) shock absorber, front	(2) hardware pack and cable tie
---------------------------------	---------------------------------

(2) shock absorber, rear	(2) hardware pack and cable tie
--------------------------------	---------------------------------

***(Note: Shock boots, if desired, purchased separately)**

00461..... decal, "Warning To Driver"

INSTALLATION PROCEDURE**1) PREPARE VEHICLE...**


- ☐ Prior to raising the vehicle, disconnect the track bar from its attachment point on the frame and let the bar hang. Save all hardware for re-use.
- ☐ Disconnect the anti-sway bar links from their attachment points on the front axle. Save all hardware for re-use.
- ☐ Place vehicle in neutral. Raise front of vehicle with a jack and secure a jack stand beneath each frame rail, behind the radius arm mounts. Ease the frame down onto the stands, place transmission in low gear or "park", and chock rear tires. Remove front tires.

2) CONTINUE DISASSEMBLY...

- ☐ Position a jack so that it supports, but does not raise, the front axle.
- ☐ Remove and discard the front shock absorbers. Save the upper bushings for re-use.
- ☐ Unbolt the stem end of the front steering stabilizer from the frame mount. Save all hardware for re-use.
- ☐ Remove the cotter pin and castellated nut from the drag link where it attaches to the pitman arm. Using the appropriate puller tool, separate the drag link from the pitman arm.
- ☐ Unbolt the brackets securing the front brake hoses to the coil spring tower on the frame. Save all hardware for re-use.
- ☐ Unbolt the lower brake hose brackets securing the hose to the axle. Save all hardware for re-use.
- ☐ Carefully lower the front axle enough to facilitate the removal of the front coil springs. Save the rubber isolators at the top of the coils for re-use.
- ☐ Unbolt the factory track bar bracket from the frame. Save all hardware for re-use.

3) TRACK BAR BRACKET...

NOTE: Inspect the area of the frame crossmember where

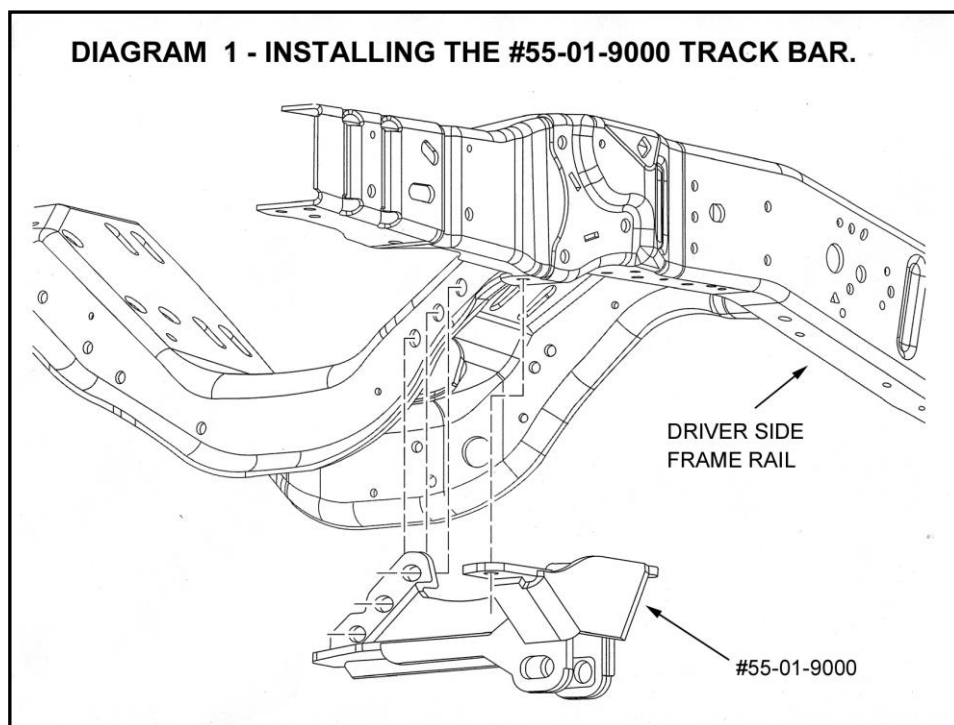

the track bar bracket attaches. Often there is an excessive amount of undercoating build-up on the crossmember, especially on the back (rearward facing) portion of the crossmember where the undercoating has pooled up. Scrape off any excessive undercoating to prevent the track bar bracket from loosening over time.

- ☐ [DIAGRAM 1] Position the Superlift track bar bracket (#55-01-9000) on the frame in the same place as the original and secure using the factory hardware. There are a total of five bolts; three attached to a retaining tab plus two additional bolts. Once all the bolts are started, tighten (136).

4) **RADIUS ARMS...**

NOTE: Perform the following steps one side at a time. Start on the driver side.

- ☐ Unclip the ABS wire from the radius arm and secure it out of the way.
- ☐ Verify once again that the axle is supported by the jack, then unbolt the radius arm from the frame and front axle. Save frame side hardware for re-use.
- ☐ Attach the radius arm to the frame using the factory hardware. Attach the axle end using the 18 x 130MM bolt in the upper mount and the cam bolt in the lower. All hardware should be installed from the outside. Snug, but do not fully tighten at this time.
- ☐ Repeat this procedure on the passenger side. All radius arm hardware will be tightened once the vehicle is on the ground.

5) **COMPRESSION TRAVEL STOP EXTENSIONS...**

- ☐ Pry the front compression travel stops out of their mounting cups, then unbolt the cups from the frame.
- ☐ Drill the existing hole in the frame rail for the bump stop out to 3/8".
- ☐ On each side, position a compression travel stop extension (#55-01-9024 driver side and #55-02-9024 passenger side) on the frame in the location that the stop cup was just removed and secure it to the frame using the supplied 3/8" x 1-1/4" bolt and nyloc nut. Tighten (23).
- ☐ Drill out the mounting hole in the factory compression stop cup to 3/8", then attach the cup to the "01" and "02" brackets using the supplied 3/8" x 1" bolt, washer, and nyloc nut. Tighten (23).
- ☐ Press the factory compression stops back into their mounting cups.

6) **COIL SPRINGS...**

- ☐ Lower the front axle enough to facilitate installing the new coils springs. Position the coil springs (01-294 for trucks with diesel engines and #01-295 or vehicles with gas engines) in the lower coil buckets on the axle and rotate as necessary to be sure that the pigtail of the coil is indexed properly in the bucket. Position the factory rubber isolator on top of each coil, then raise the axle enough to seat the coil springs in the upper spring buckets.

7) **SHOCK ABSORBERS...**

- ☐ ☐ Install the bushings, sleeves, and boots on the front shock absorbers.
- ☐ ☐ Compress the front springs enough to install the front shocks. Secure the lower (body) end of the shock to the axle using the factory hardware and the upper (rod) end using the factory bushing taken from the original shocks. Tighten the lower end (136), then tighten the stem end until the bushings swell slightly.

8) BRAKE HOSE EXTENSIONS...

- ☐ ☐ Factory brackets secure the brake hoses to the front of the coil tower on the frame; these brackets were unbolted from the coil towers during initial disassembly. Attach the brake line drop brackets (#55-07-9024) to the coil towers where the factory brackets were once mounted using the factory hardware (76 in-lb).
- ☐ ☐ Insert the supplied 5/16" x 3/4" bolt through the bracket and coil tower just below the factory bolt and secure using the supplied 5/16" nyloc nut (13).
- ☐ ☐ Carefully reform the metal brake line as necessary in order to line up the factory brake hose bracket with the lower end of the "07" bracket. Attach the factory bracket to the "07" bracket using the supplied 1/4" x 3/4" bolt and nyloc nut (76 in-lb).
- ☐ ☐ Re-attach the lower brake hose brackets to the axle using the factory hardware and tighten (9).

9) STEERING STABILIZER DROP BRACKET...

- ☐ The factory steering stabilizer bracket is attached to the front lip of the engine crossmember (towards the passenger side) via a two-bolt tab. Remove the nuts securing the stabilizer mount to the crossmember. It is not necessary to entirely remove the factory bracket.
- ☐ Position the steering stabilizer drop bracket (#55-03-9024) on the back side of the crossmember lip and secure it using the factory tab bolts and nuts (the crossmember lip should be "sandwiched" between the "03 bracket and the factory stabilizer bracket). Do not tighten at this time.
- ☐ Install the supplied 5/8" x 1-1/2" bolt through the factory bracket (where the stabilizer used to mount) and the "03" bracket. The bolt should be installed from the outside and secured with the supplied 5/8" washer and nyloc nut.
- ☐ Tighten the 5/8" bolt (112) and factory bolts (136).
- ☐ Install a factory washer and supplied bushing half on the stem end of the stabilizer, then position the stem through the remaining hole in the "03" stabilizer drop bracket. Install the remaining bushing half, washer, and factory nut, then tighten until the bushings swell slightly.

10) FINAL ASSEMBLY...

- ☐ ☐ Secure the ABS wires to the radius arms using the factory retaining clips.

- ☐ Reattach the drag link to the pitman arm using the factory castellated nut and the supplied new cotter pin (67).

11) TIRES / WHEELS...

- ☐ [DIAGRAM 3] Tighten the lug nuts (148) in the sequence shown.

WARNING: When the tires / wheels are installed, always check for and remove any corrosion, dirt, or foreign material on the wheel mounting surface, or anything that contacts the wheel mounting surface (hub, rotor, etc.). Installing wheels without the proper metal-to-metal contact at the wheel mounting surfaces can cause the lug nuts to loosen and the wheel to come off while the vehicle is in motion.

WARNING: Retighten lug nuts at 500 miles after any wheel change, or anytime the lug nuts are loosened. Failure to do so could cause wheels to come off while vehicle is in motion.

- ☐ Lower the vehicle to the floor.

12) HARDWARE TIGHTENING SEQUENCE...

- ☐ Tighten the following hardware:
 - ☐ 18mm radius arm hardware (230)
 - ☐ Factory hardware at rear of radius arm (222)

13) TRACK BAR...


- ☐ Line up the track bar with the slotted hole of the new track bar bracket.
- ☐ Observe the two supplied track bar keys and note that the hole in each key is offset to one side. **Position the keys so that the holes are offset to the passenger side** and insert them into the slotted holes of the track bar bracket. Insert the factory track bar bolt through the bracket, keys, and track bar and secure using the factory hardware. Tighten (406).

IMPORTANT: Yes, the proper torque specification for the track bar eye bolt is 406 lb-ft; this is not a typographical error. If the appropriate torque wrench is not available, tighten the bolt as much as possible, then take the vehicle to the Ford Dealer or a heavy equipment repair shop to perform the final torque operation. Proper torque on this bolt is critical.

14) ANTI-SWAY BAR LINK EXTENSIONS...

- ☐ Thread the female end of the anti-sway bar link extensions (44-04-9024) on to the factory sway bar end links and tighten (57).
- ☐ Attach the "04" sway bar link extensions to the axlehousing using the factory bushings and hardware. Tighten until the bushings swell slightly.

DIAGRAM 3 - FACTORY LUG NUT TORQUE SEQUENCE - Torque the factory lug nuts to 148 lb-ft in this sequence.

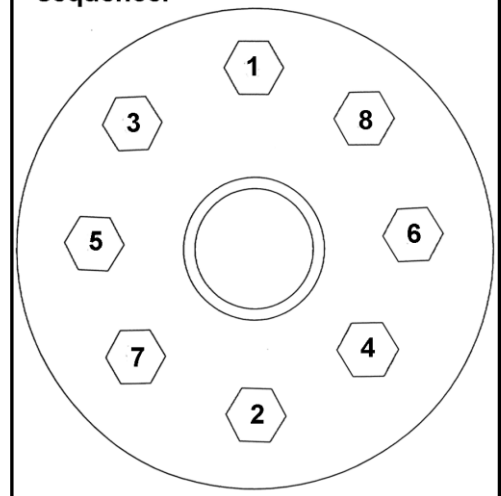

15) CLEARANCE CHECK...

- ☐ Raise the vehicle and place a jack stand under each frame rail just behind the radius arm attaching points. With the suspension “hanging” at full extension travel, cycle steering lock-to-lock and check all components for proper operation and clearances. Pay special attention to the clearance between the tires / wheels and brake hoses, wiring, etc.

- ☐ Lower vehicle to the floor.

16) FINAL CLEARANCE and TORQUE CHECK...

- ☐ With vehicle on floor, cycle steering lock-to-lock and inspect the tires / wheels, and the steering, suspension, and brake systems for proper operation, tightness, and adequate clearance.

17) REAR LIFT...

NOTE: Rear lift is sold separately and includes separate instructions. In addition to what is detailed in that instruction form, perform the following:

- ☐ Verify the vehicle is in Park or Low gear with the parking brake set. Remove and discard the rear shock absorbers.

- ☐ Install the bushings, sleeves, and boots on the new rear shocks.

- ☐ Install the shocks in the factory location using the factory hardware. In some instances it will be necessary to position a 1/2” SAE washer between the shock bushing and lower mount. If necessary the washers are supplied with the shock hardware. All shocks except those equipped with a remote reservoir must be installed with the rod end up. Tighten the upper (85) and lower (85) hardware.

18) Activate four wheel drive system and check front hubs for engagement

19) HEADLIGHTS...

- ☐ Readjust headlights to proper setting.

20) SUPERLIFT WARNING DECAL...

- ☐ Install the WARNING TO DRIVER decal on the inside of the windshield, or on the dash, within driver’s view.

21) ALIGNMENT...

Realign vehicle to factory specifications. Alignment must be performed by a qualified professional.