

# **T-REX**

**Billet Grilles**

55761

**08-12 NISSAN  
PATHFINDER**

55761

**08-12 NISSAN  
PATHFINDER**

## **UPPER CLASS SERIES BUMPER GRILLS**

### **Recommended Tools:**

Phillips Screwdriver  
8mm Socket or Nut Driver

### **Parts List / Hardware:**

1 Upper Class Inserts  
4 ½" X ½" L-Brackets  
4 6/32 Nylon Lock Nuts

## **Read and understand instructions before attempting installation**

### **Step 1**

Remove six plastic fasteners from the top plastic cover to allow access behind grille. Release four plastic clips from the bottom of the grill assembly. Release the clips that hold the outer grille shell. There are two on each side that use a flathead screw driver (1). Remove the complete grille as one unit.




### **Step 2**

Center the grille into the bumper. From the backside of the grille, place a ½" L-Bracket and a 6/32 Nylon Lock Nut on to each stud (2). Make sure that the grille is centered and tighten down

### **Step 3**

Re-install the grille.

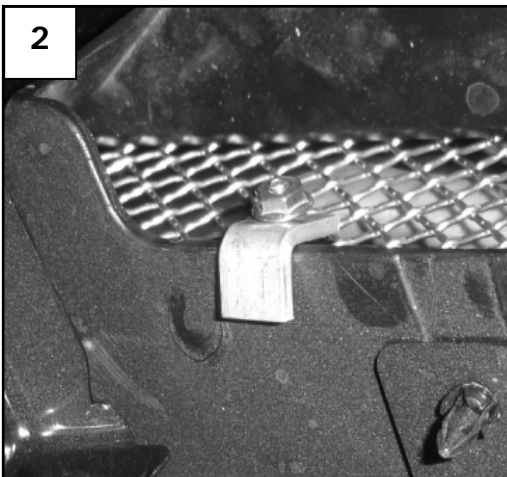

*Thank you for purchasing your T-Rex billet grille.  
9/25/07*