

TORKLIFT

INTERNATIONAL

OVER 40 YEARS OF INNOVATION, QUALITY, SAFETY.



Ford

Step 1: Select Your Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product

HiddenPower Under
Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Front Tie Downs		MFG#
					Standard Front Tie Down	Talon Aluminum Front Tie Down	
1973-1980	F250, F350	All	8ft				A7703 (1) A7727
2000-2011	Ranger	All	6'	No	F2013		
1981-1997	F350	All	8'	No	F2000 (3)		A7703 (1)
				Yes	F4000 (3,4,5)		A7727
Square body							
1981-1997	F350	All	6.5'	No	F2000 (3)		
				Yes	F4000 (3,4,5)		
Square body							
1981-1997	F250	All	8'	No	F2000 (3)		A7703 (1)
				Yes	F4000 (3,4,5)		A7727
Square body							
1981-1997	F250	All	6.5'	No	F4000 (3,4,5,6)		
				Yes	F4000 (3,4,5,6)		
Square body							
1981-1997	F150	All	All	No	F4000 (3,4,5,6)		
				Yes	F4000 (3,4,5,6)		
Square body							
1997-2003	F150, F250 LD	All	8'	No	F2001		
				Yes	F4001 (4,5)		
1997-2003	F150, F250 LD	All	6.5'	No	F2002 (3)		
				Yes	F4002 (3,4,5)		
1998-2003	F150	Super Crew	5.5'	No	F2009		
1999-2004	F250, F350	All	8'	No	F2011	F2011A	A7703 (1)
				Yes	F4006 (4,5)		A7727
Super Duty W/ factory bed							
1999-2004	F250, F350	All	6.75'	No	F2007	F2007A	
				Yes	F4007 (4,5)		
Super Duty W/ factory bed							
2004-2005	F150	All	8'	No	F2003		
No Step Side bed							
2004-2005	F150	All	6.5'	No	F2004		
No Step Side bed							
2004-2005	F150	Super Crew	5.5'	No	F2005		
No Step Side bed							
2005-2007	F250, F350	All	8'	No	F2011	F2011A	A7703 (1)
				Yes	F4006 (4,5)		A7727
Super Duty W/ factory bed							

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Factory	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
Factory	F3004 (15)				Lower	A7311 (2,4)
Aftermarket	R3500 (12)				Upper	A7200 (3)
Factory	(25)	(25)	Original 20k	F1000 (1B)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)			Upper	A7200 (3)
Aftermarket	R3501 (12)					
Factory	(25)	(25)	Original 20k	F1000 (1B)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)			Upper	A7200 (3)
Aftermarket	R3501 (12)					
Factory	(25)	(25)	Original 20k	F1000 (1B)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)			Upper	A7200 (3)
Aftermarket	R3501 (12)					
Factory	(25)	(25)	Original 20k	F1000 (1B)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)			Upper	A7200 (3)
Aftermarket	R3501 (12)					
Factory	(25)	(25)			Lower	A7311 (2,4)
Aftermarket	R3501 (12)				Upper	A7200 (3)
Factory	F3001 (15)	F3001A (15)			Lower	A7311 (2,4)
Aftermarket	R3500 (12)				Upper	A7200 (3)
Factory	F3001 (15)	F3001A (15)			Lower	A7311 (2,4)
Aftermarket	R3500 (12)				Upper	A7200 (3)
Factory	F3001 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
Factory	F3001 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
No Hitch	F3003				Lower	A7311 (2,4)
Factory	F3003				Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3003				Lower	A7311 (2,4)
Factory	F3003				Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3003				Lower	A7311 (2,4)
Factory	F3003				Upper	A7200 (3)
Aftermarket	R3500 (12)					
Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B,5)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					

Ford

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product

HiddenPower Under Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down		Talon Aluminum Front Tie Down	MFG#		
2005-2007	F250, F350	All	6.75'	No	F2007		F2007A			
				Yes	F4007 (4,5)					
				Super Duty W/ factory bed						
2006-2007	F150	Super Crew	5.5'	No	F2010					
2006-2008	F150	All	8'	No	F2003					
2006-2008	F150	All	6.5'	No	F2014		F2014A			
				No Step Side bed						
2008-2010	F250, F350, F450	All	8'	No	F2011		F2011A	A7728		
				Super Duty W/ factory bed						
2008-2010	F250, F350	All	6.75'	No	F2012 (2)		F2012A (2)			
				Super Duty W/ factory bed						
2008	F150	Super Crew	5.5'	No	F2017					
2000-2016	F350, F450, F550	All	N/A	No	F2008 (22)					
				(2005-2015 Only)						
				Cab & Chassis (34" wide Frame)						
2009-2014	F150	All	6.5'	No	F2014		F2014A	A7728 (2010-2014) Extended and Crew Cab Only		
2009-2014	F150	All	8'	No	F2015					

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Standard Rear Tie Down		Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A			Lower	A7311 (2,4)
Factory	F3005	F3005A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A			Lower	A7311 (2,4)
Factory	F3005	F3005A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A			Lower	A7311 (2,4)
Factory	F3005	F3005A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
Factory	F3004 (5)	F3001A (15)	Original 20k	F1002 (1B, 5)	08-09 Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C, 5)	2010 Lower	A7310 (1,4)
SH Magnum	R3504	R3504A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
Factory	F3004 (5)	F3001A (15)	Original 20k	F1002 (1B, 5)	08-09 Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C, 5)	2010 Lower	A7310 (1,4)
SH Magnum	R3504	R3504A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A			Lower	A7311 (2,4)
Factory	F3005	F3005A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
Superhitch	R3503 (23)	R3503A (23)	Original 20k	F1003 (1B, 5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A	Magnum 30k	F1003-30 (1C, 5)		
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A	Hero 15k	F1005H (1A,1H,2) Only works with factory hitch rated to 10,500 lbs	2009 Lower	A7311 (2,4)
Factory	F3005	F3005A			2010 Lower	A7310 (4)
Hero	R3508	R3508A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
No Hitch	F3005	F3005A	Hero 15k	F1005H (1A,1H,2) Only works with factory hitch rated to 10,500 lbs	2009 Lower	A7311 (2,4)
Factory	F3005	F3005A			2010 Lower	A7310 (1,4)
Hero	R3508	R3508A			Upper	A7200 (3)
Aftermarket	R3500 (12)					

Ford

Step 1: Select Your Front Tie Downs

**Step 2: Optional
Select Your Auxiliary
Power Product**
HiddenPower Under
Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Front Tie Downs		MFG#
					Standard Front Tie Down	Talon Aluminum Front Tie Down	
2009-2014	F150	Super Crew	5.5'	No	F2017		
2011-2016	F250, F350	All	6.75'	No	F2012	F2012A	
	Super Duty W/ factory bed						
2011-2016	F250, F350, F450	All	8"	No	F2016 (27)	F2016A (27)	A7728
	Super Duty W/ factory bed						
2015-2016	F150		6.5'	No	F2018	F2018A	
	Regular Cab, Super Cab, Super Crew						
2015-2016	F150	Super Crew	5.5'	No	F2019 (32)		
				Fixed	F2019 (32)		
				Electric	F2019 (32)		
2015-2016	F150	Regular, Super Cab	8"	No	N/A		
1999-2005	Excursion						
2001-2008	E150	Van					
2005-2011	E250, E350	Van					A7729
2012-2013	E250, E350	Van					A7729
All	E450 Frame	RV					A7740 (2)
2016	F250, F350	Super Crew	6.75'	No	F2012	F2012A	
	Super Duty W/ factory bed						
2016	F250, F350	Super Crew	8"	No	F2016 (27)	F2016A (27)	A7728
	Super Duty W/ factory bed						
2016	F250	Super Cab	8"	No	F2016 (27)	F2016A (27)	A7728
	Super Duty W/ factory bed						
2016	F550	Regular	N/A				
	Cab & Chassis (34" wide frame)						

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Standard Rear Tie Down		Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
No Hitch	F3005	F3005A	Hero 15k	F1005H (1A, 1H, 2) Only works with factory hitch rated to 10,500 lbs	2009 Lower	A7311 (2,4)
Factory	F3005	F3005A			2010 Lower	A7310 (4)
Hero	R3508	R3508A			Upper	A7200 (3)
Aftermarket	R3500 (12)					
Factory	F3006 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Lower	A7310 (1,4)
SuperHitch	R3503 (23)	R3503A (23)	Magnum 30K	F1002-30(1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
Factory	F3006 (15)	F3001A (15)	Original 20k	F1002 (1B,5)	Lower	A7310 (4)
SuperHitch	R3503 (23)	R3503A (23)	Magnum 30K	F1002-30 (1C,5)	Upper	A7200 (3)
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
No Hitch	F3007	F3007A				
Factory	F3007	F3007A				
No Hitch	F3007	F3007A			Lower	A7310 (1,4)
Factory	F3007	F3007A				
No Hitch	F3007	F3007A			Lower	A7310 (1,4)
Factory	F3007	F3007A				
			Original 20k	F1006 (1B)	Lower	A7310 (4)
					Lower	A7311 (2,4)
					Lower	A7311 (2,4)
					Lower	A7310 (4)
Factory	F3006 (15)	F3001A (15)	Original 20K	F1002 (1B,5)	Lower	A7310 (4)
SuperHitch	R3503 (23)	R3503A (23)	Magnum 30K	F1002-30 (1C,5)	Upper	A7200 (3)
SuperHitch Mgnum	R3504	R3504A				
Aftermarket	R3500 (12)					
Factory	F3006 (15)	F3001A (15)	Original 20K	F1002 (1B, 5)	Lower	A7310 (4)
SuperHitch	R3503 (23)	R3503A (23)	Magnum 30K	F1002-30 (1C, 5)	Upper	A7200 (3)
SuperHitch Mgnum	R3504	R3504A				
Aftermarket	R3500 (12)					
Factory	F3006 (15)	F3001A (15)	Original 20K	F1002 (1B, 5)	Lower	A7310 (4)
SuperHitch	R3503 (23)	R3503A (23)	Magnum 30K	F1002-30 (1C, 5)	Upper	A7200 (3)
SuperHitch Mgnum	R3504	R3504A				
Aftermarket	R3500 (12)					
SuperHitch	R3503 (23)	R3503A (23)	Original 20K	F1003 (1B, 5)	Upper	A7200 (3)
SuperHitch Mgnum	R3504	R3504A	Magnum 30K	F1003-30 (1C,5)		
Aftermarket	R3500 (12)					

Dodge

Step 1: Select Your Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under
Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#
All	Sprinter	Van	N/A				
1987-1996	Dakota	All	All				
1980-1988	D250, D350	All	8ft				
1989-1993	D250, D350	All	8ft	No Yes	F4000 (3,4,5,6) F4000 (3,4,5,6)		
1989-1993	D150	All	8ft	No Yes	F4000 (3,4,5,6) F4000 (3,4,5,6)		
1994-2001	1500	All	8ft	No Yes	D2100 (3) D4100 (3,4,5)	A7742 (NO Regular Cab)	
1994-2001	1500	All	6.5ft	No Yes	D2110 D4104 (3,4,5)		
1994-2002	2500, 3500	All	8ft	No Yes	D2100 (3) D4100 (3,4,5)	A7742 (No Regular Cab)	
1994-2002	2500, 3500	All	6.5ft	No Yes	D2110 D4104		
1997-2004	Dakota	All	6.5ft	No	D2104		
2002-2003	1500	All	8ft	No	D2107 (3)		
2002-2003	1500 Two Wheel Drive Only	All	6.5ft	No	D2106		
2002-2003	1500 Four Wheel Drive Only	All	6.5ft	No	D2105		
2003-2008	2500, 3500 HD Two Wheel Drive Only	Quad	6.5ft	No	D2103 (3)		
2003-2009	2500, 3500 HD Four Wheel Drive Only	All	6.5ft	No Yes	D2102 D4102 (2,3,4,5)	A7740 (2006-2009 Mega Cab only)	
2003-2009	2500, 3500 HD	All	8ft	No Yes	D2101 D4101 (4,5)	D2101A (Quad Cab ONLY)	
2004-2008	1500	All	8ft	No	D2107 (3)		
2004-2008	1500 Two Wheel Drive Only	Reg, Quad	6.5ft	No	D2106		

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Standard Rear Tie Down		Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
					Lower	A7311 (2,4)
			Original 20K	F1000 (1B,1,3)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (23)	Original 20K	F1000 (1B,1,3)		
Aftermarket	R3501 (12)					
Aftermarket	R3501 (12)					
Factory	D3101 (15)				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
Factory	D3101 (15)				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
Factory	D3101 (15)		Original 20K	D1100 (1B,3)	Upper	A7200 (3)
Superhitch	R3503 (23)	R3503A (23)			Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
Factory	D3101 (15)		Original 20K	D1100 (1B,1,3)	Lower	A7311 (2,4)
Superhitch	R3503 (23)	R3503A (3)				
Aftermarket	R3500 (12)					
Factory	D3105 (15)				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
Factory	D3103				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
Factory	D3103				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3503 (14,20,23)		Original 20K	D1102 (1B,1,3)		
SH Magnum	R3503 (14,20,23)		Magnum 30K	D1102-30 (1C,1,3)		
Aftermarket	R3500 (14,12)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3503 (14,20,23)		Original 20K	D1102 (1B,1,3)		
SH Magnum	R3503 (14,20,23)		Magnum 30K	D1102-30 (1C,1,3)		
Aftermarket	R3500 (14,12)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3503 (14,20,23)		Original 20K	D1102 (1B,1,3)		
SH Magnum	R3503 (14,20,23)		Magnum 30K	D1102-30 (1C,1,3)		
Aftermarket	R3500 (14,12)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)			Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)			Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)				
Aftermarket	R3500 (12)					

Dodge

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product HiddenPower Under Vehicle Battery Mount

				Front Tie Downs			
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#
2004-2008	1500	Reg, Quad	6.5ft	No	D2105		
	Four Wheel Drive Only						
2005	Dakota	Quad	5.5ft	No	D2114		
2005	Dakota	Ext	6.5ft	No	D2109		
2006-2010	Dakota	Ext / Club	6.5ft	No	D2109		
2006-2008	1500	Mega	6.5ft	No	D2111		
	Two Wheel Drive Only						
2006-2008	1500	Mega	6.5ft	No	D2102		
	Four Wheel Drive Only						
2006-2009	2500, 3500	Mega	6.5ft	No	D2111		A7740
	Two Wheel Drive Only						
2007-2015	3500, 4500, 5500	All Cab & Chassis	N/A	No	D2112		
2009-2012	1500	Quad	6.5ft	No	D2121		
	Four Wheel Drive Only (No Laramie Edition)						
2010-2012	2500, 3500	All	8ft	No	D2115	D2115A	A7740
				Yes	D4101 (4,5)		(Crew Cab ONLY)
2010-2012	2500, 3500	All	6.5ft	No	D2119		A7740
				Yes	D4106 (4,16)		(Mega Cab Only)
Four Wheel Drive Only (Single Rear Wheel)							
2010-2012	3500	All	6.5ft	No	D2120		A7740
				Yes	D4106 (4,16)		(Mega Cab Only)
Dual Rear Wheel							
2013	2500	All	8ft	No	D2118		A7740
				Yes	D4105 (4,5)		(Crew Cab Only)

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs			SuperHitch		StableLoad	
Standard Rear Tie Down		Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)			Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)				
Aftermarket	R3500 (12)					
Aftermarket	R3500 (12)				Lower	A7311 (2,4)
Aftermarket	R3500 (12)				Lower	A7311 (2,4)
Factory	D3106				Lower	A7311 (2,4)
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)			Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)			Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3503 (14,20,23)		Original 20K	D1102 (1B,2,3)		
SH Magnum	R3503 (14,20,23)		Magnum 30K	D1102-30 (1C,3)		
Aftermarket	R3500 (12,14)		(For Welded On Factory Receiver)			
SH Magnum	R3504 (14,20)	R3504A (14,20)	Magnum 30K	D1103-30 (1C,2,3)	Upper	A7200 (3)
Aftermarket	R3500 (12)				(4500 & 5500 ONLY)	
No Hitch	D3107 (15,26)		Hero	D1106H (1A,2H)		
Factory	D3107 (15,26)					
SH Hero	D3107 (15,26)		With Factory Welded Factory Hitch			
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
SH Magnum	R3505 (14,20,23)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,3)		
Aftermarket	R3500 (12,14)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
SH Magnum	R3505 (14,20,23)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,3)		
Aftermarket	R3500 (12,14)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	(For Bolted On Factory Receiver)		Lower	A7311 (2,4)
Superhitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
SH Magnum	R3505 (14,20,23)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,3)		
Aftermarket	R3500 (12,14)		(For Welded On Factory Receiver)			
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Lower	A7311 (2,4)
Superhitch	R3507 (14,20,21)	R3507A (14,20,21)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20,21)	R3507A (14,20,21)				
Aftermarket	R3500 (12)					

Dodge

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product

HiddenPower Under Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down		Talon Aluminum Front Tie Down	MFG#
2013	2500	All	6.5ft	No	D2119			
				Yes	D4106 (4,16)			
2013	3500	Crew	6.5ft	No	D2120			
				Yes	D4106 (4,16)			
Dual Rear Wheel								
2013-2016	1500	All	6.5ft	No	D2121			
2013-2015	3500	Crew, Mega	6.5ft	No	D2130	D2130A		
				Yes	D2132	D2132A		
Single Rear wheel								
2013-2015	3500	Mega	6.5ft	No	D2131	D2131A		
				Yes				
Dual Rear Wheel								
2013-2016	3500	Crew	8ft	No	D2124 (31)	D2124A (31)	A7740	
				Yes	D2127 (29)	D2127A (29)		
2014-2016	1500	Reg	8ft					
2014-2015	1500	Crew	5.5ft					
2014	2500	Reg	8ft	No running boards	D2126 (28)	D2126A (28)		
				Factory running boards	D2127 (29)	D2127A (29)		
Gas Engine								

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Standard Rear Tie Down			Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Upper	A7200 (3)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Lower	A7311 (2,4)
Superhitch	R3507 (14,20,21)	R3507A (14,20,21)	R3507A (14,20,21)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20,21)	R3507A (14,20,21)	R3507A (14,20,21)				
Aftermarket	R3500 (12)						
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper	A7200 (3)
Superhitch	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)				
Aftermarket	R3500 (14,12)						
No Hitch	D3107			Hero	D1106H (1A,2H)		
Factory	D3107			(With Factory Welded Hitch)			
Hero	D3107						
Aftermarket	R3500 (12)						
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper	A7200 (3)
Superhitch	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)						
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower	A7311 (2,4)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper	A7200 (3)
Superhitch	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)						
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower	A7311 (2,4,8)
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper	A7200 (3,8)
Superhitch	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12,14)						
No Hitch	D3107						
Factory	D3107						
Aftermarket	R3500 (12)						
No Hitch	D3107			Hero	D1106H (1A,2H)		
Factory	D3107			(With Factory Welded Hitch)			
Hero	D3107						
Aftermarket	R3500 (12)						
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Original 20K	D1107 (1B,2,3)		
Factory	D3109 (11,14,20)	D3109A (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1107-30 (1C,2,3)		
Superhitch	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)						

Dodge

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product

Front Tie Downs

HiddenPower Under Vehicle Battery Mount

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#
2014-2015	2500	Crew, Mega	6.5ft	No running boards	D2126 (28)	D2126A (28)	
				Factory running boards	D2127 (29)	D2127A (29)	
2014-2016	2500	Crew	8ft	No running boards	D2126 (28)	D2126A (28)	A7740
				Factory running boards	D2127 (29)	D2127A (29)	
2015	3500	Crew, Mega	6.5ft	No	D2130	D2130A	
				Yes	D2132	D2132A	
Single Rear Wheel							
2015	3500	Reg	8ft	No	D2129 (30)		A7740
				(Diesel Engine)			
				No	D2124 (31)	D2124A (31)	
				(Gas Engine)			
2014-2015	4500	All	N/A				
				With Factory Bed			
2014-2015	4500, 5500	All	N/A				
				Cab and Chassis			
2016	2500	Crew	6.5ft	No	D2126 (28)	D2126A	
				Factory running boards	D2127 (29)	D2127A	
2016	3500	Crew, Mega	6.5ft	No	D2130	D2130A	
				Yes	D2132	D2132A	
Single Rear Wheel							

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Rear Tie Downs			SuperHitch		StableLoad	
Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#	
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1107 (1B,2,3)		
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1107-30 (1C,2,3)		
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original	D1107 (1B,2,3)		
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1107-30 (1C,2,3)		
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower A7311 (2,4)	
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper A7200 (3)	
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower A7311 (2,4)	
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper A7200 (3)	
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					
					Lower A7311 (2,4)	
					Upper A7200 (3)	
			Magnum 30K	D1103-30 (1C,2,3)	Upper A7200 (3)	
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20k	D1107 (1B,2,3)		
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30k	D1107-30 (1C,2,3)		
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					
No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20k	D1104 (1B,2,3)	Lower A7311 (2,4)	
Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30k	D1104-30 (1C,2,3)	Upper A7200 (3)	
Superhitch	R3507 (14,20)	R3507A (14,20)	(With Factory Welded Hitch)			
SH Magnum	R3507 (14,20)	R3507A (14,20)				
Aftermarket	R3500 (12)					

Chevrolet

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product

HiddenPower Under Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down		Talon Aluminum Front Tie Down	MFG#
1982-1987	2500	All	8ft					
1982-1990	3500	All	8ft					
1988-1994	2500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
1988-1994	1500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
1988-1994	2500	All	6.5ft	No	C4201 (3,4,5,6)			
				Yes	C4201 (3,4,5)			
1988-1994	1500	All	6.5ft	No	C4201 (3,4,5,6)			
				Yes	C4201 (3,4,5)			
1991-1994	3500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
1995-2000	2500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
	C/K Body Style							
1995-2000	1500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
	C/K Body Style							
1995-2000	2500	All	6.5ft	No	C4201 (3,4,5,6)			
				Yes	C4201 (3,4,5)			
	C/K Body Style							
1995-2000	1500	All	6.5ft	No	C4201 (3,4,5,6)			
				Yes	C4201 (3,4,5)			
	C/K Body Style							
1995-2000	3500	All	8ft	No	C2201 (3)			
				Yes	C4201 (3,4,5)			
	C/K Body Style							
2000-2013	Suburban 2500, Yukon XL							
ALL	Express,Savana(2500, 3500)							
1999-2007	1500, 2500	Ext. Regular	6.5	No	C2202 (3,10)			
				Yes	C4203 (3,4,5)			
	Silverado 5.5" Frame 2007 Is Classic Model							
1999-2007	1500, 2500	Regular, Extended	8	No	C2202 (3,10)			
				Yes	C4203 (3,4,5)			
	Silverado 5.5" Frame 2007 Is Classic Model							
2004-2007	1500	Crew	5.5	No	C2211			
				Yes				
	Silverado 5.5" Frame 2007 Is Classic Model							
1999-2007	1500HD, 2500HD	All	6.5'	No	C2205 (10)	C2205A (10)	A7730	
				Yes	C4203 (3,4,5)			
	SilveradoHD 8" Frame 2007 Is Classic Model						2001-2007 2500HD Crew Cab Only	

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	SuperHitch		StableLoad	
			Hitch Type	MFG#	Type	MFG#
			Original 20k	C1200 (1B,1)		
			Original 20k	C1200 (1B,1)		
Factory	C3201 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
Factory	C3201 (15)				Lower	A7310 (1,4)
Aftermarket	R3500 (12)					
Factory	C3201 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
Factory	C3201 (15)				Lower	A7310 (1,4)
Aftermarket	R3500 (12)					
Factory	C3201 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4,5)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
Factory	C3202 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
Factory	C3202 (15)				Lower	A7310 (1,4)
Aftermarket	R3500 (12)					
Factory	C3202 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4,5)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
Factory	C3202 (15)				Lower	A7310 (1,4)
Aftermarket	R3500 (12)					
Factory	C3202 (15)		Original 20k	C1201 (1B,1)	Lower	A7310 (1,4,5)
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
No Hitch	C3203				Lower	A7310 (1,4)
Factory	C3203					
Aftermarket	R3500					
No Hitch	C3204		Original 20k	C1202 (1B)	Lower	A7310 (1,4)
Factory	C3204					
Superhitch	R3503 (23)	R3503A (23)				
Aftermarket	R3500 (12)					
No Hitch	C3203				Lower	A7310 (1,4)
Factory	C3203					
Aftermarket	R3500 (12)					
No Hitch	C3205	C3205A	Original 20k	C1204 (1B,4)	Lower	A7310 (1,4)
Factory	C3205	C3205A	Magnum 30k	C1204-30 (1C,4)		
Superhitch	R3503 (23)	R3503A (23)				
SH Magnum	R3504	R3504A				
Aftermarket	R3500 (12)					
				2001-2007 2500HD Only		

Chevrolet

Step 1: Select Your Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under
Vehicle Battery Mount

Front Tie Downs

Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down		Talon Aluminum Front Tie Down	MFG#
2007-2007	2500HD, 3500	All	8	No	C2204 (10)	C2204A (10)	A7730	
				Yes	C4203 (3,4,5)		Extended and Crew Cab Only	
	Silverado HD 8" Frame 2007 Is Classic Model							
2007-2010	2500,3500	All	6.5ft	No	C2205	C2205A	A7730	
				Yes	C4203 (3,4,5)		Crew Cab Only	
	New Body							
2007-2010	2500,3500	All	8ft	No	C2204	C2204A	A7730	
				Yes	C4203 (3,4,5)		Extended & Crew Cab Only	
	New Body							
2007-2013	1500	Reg	6.5ft	No	C2208			
	New Body							
2007-2013	1500	Reg	8ft	No	C2212			
	New Body							
2007-2013	1500	Ext	6.5ft	No	C2207			
	New Body							
2007-2013	1500	Ext	8ft	No	C2207			
	New Body							
ALL	Canyon, Colorado, S10, Sonoma							
2007-2013	1500	Crew	5.5ft	No	C2211			
	New Body							
2011-2014	2500, 3500	Crew, Ext	6.5ft	No	C2213/C2220	C2220A		
	New Body							
2011-2014	2500, 3500	Crew, Ext	8ft	No	C2214/C2219	C2214A	A7732	
				Yes	C4204 (4,5)			
	New Body							

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs

SuperHitch

StableLoad

Standard Rear Tie Down			Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#
No Hitch	C3206	C3206A	Original 20k	C1205 (1B)	Lower	A7310 (1,4)	
Factory	C3206	C3206A	Magnum 30k	C1205-30 (1C)			
Superhitch	R3503 (23)	R3503A (23)					
SH Magnum	R3504	R3504A					
Aftermarket	R3501 (12)						
No Hitch	C3206	C3206A	Original 20k	C1206 (1B)	Lower	A7310 (1,4)	
Factory	C3209 (15)	C3206A	Magnum 30k	C1206-30 (1C)			
Superhitch	R3502	C3206A					
SH Magnum	R3502	C3206A					
Aftermarket	R3500 (12)						
No Hitch	C3206	C3206A	Original 20k	C1205 (1B)	Lower	A7310 (1,4)	
Factory	C3209 (15)	C3206A	Magnum 30k	C1205-30 (1C)			
Superhitch	R3503 (23)	R3503A (23)					
SH Magnum	R3504	R3504A					
Aftermarket	R3501 (12)						
No Hitch	C3203		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)	
Factory	C3203						
SH Hero	R3507	R3507A					
Aftermarket	R3500 (12)						
No Hitch	C3204		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)	
Factory	C3204						
SH Hero	R3507	R3507A					
Aftermarket	R3500 (12)						
No Hitch	C3203		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)	
Factory	C3203						
SH Hero	R3507	R3507A					
Aftermarket	R3500 (12)						
No Hitch	C3204		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)	
Factory	C3204						
SH Hero	R3507	R3507A					
Aftermarket	R3500 (12)						
					Lower	A7311 (2,4)	
No Hitch	C3203		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)	
Factory	C3203						
SH Hero	R3507	R3507A					
Aftermarket	R3500 (12)						
No Hitch	C3212	C3212A	Original 20k	C1209 (1B,1,6)	Upper	A7202 (3) (3500 ONLY)	
Factory	C3212	C3212A	Magnum 30k	C1209-30 (1C,1,6)	Lower	A7310 (1,4,5)	
Superhitch	C3212	C3212A					
SH Magnum	C3212	C3212A					
Aftermarket	R3500 (12)						
No Hitch	C3212	C3212A	Original 20k	C1208 (1B)	Upper	A7202 (3) (3500 ONLY)	
Factory	C3212	C3212A	Magnum 30k	C1208-30 (1C)	Lower	A7310 (1,4,5)	
Superhitch	C3212	C3212A					
SH Magnum	C3212	C3212A					
Aftermarket	R3500 (12)						

Chevrolet

Step 1: Select Your Front Tie Downs

Step 2: Optional Select Your Auxiliary Power Product

Year	Model	Cab	Bed	Do running boards extend past the cab?	Front Tie Downs		MFG#
					Standard Front Tie Down	Talon Aluminum Front Tie Down	
2011-2014	2500, 3500	Reg	8ft	No	C2215		
2014-2016	1500	Reg	8ft	No	C2212		
2014-2016	1500	Crew	5.5ft	No	C2218		
2014-2015	1500	All	6.5ft	No	C2217		
2015-2016	2500, 3500	Crew, Double	6.5ft	No	C2220	C2220A	
				Single Rear Wheel			
2015-2016	2500, 3500	Crew, Double	8ft	No	C2219	C2214A	A7732
				Yes	C4204 (4,5)		(3500 Crew Only)
2015-2016	2500, 3500	Reg	8ft	No	C2215		
				Single Rear Wheel			
2015-2016	3500	Crew, Double	8ft	No	C2219	C2214A	A7732
				Yes	C4204 (4,5)		(3500 Crew Only)
2015-2016	3500	Reg	8ft	No	C2215		
				Dual Rear Wheel			
2016	1500	Crew, Double	6.5ft	No	C2217		
2016	Colorado	Crew	6.5ft	No	C2221		

Superhitch

Superhitch

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs			SuperHitch		StableLoad	
Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#	
No Hitch	C3212	C3212A	Original 20k	C1208 (1B)	Upper	A7202 (3)
Factory	C3212	C3212A	Magnum 30k	C1208-30 (1C)		(3500 ONLY)
Superhitch	C3212	C3212A			Lower	A7310 (1,4,5)
SH Magnum	C3212	C3212A				
Aftermarket	R3500 (12)					
Factory	C3214		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)
SH Hero	R3509	R3509A				(2015 Trucks) (7)
Aftermarket	R3500 (12)					
Factory	C3214		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)
SH Hero	R3509	R3509A				(2015 Trucks) (7)
Aftermarket	R3500 (12)					
Factory	C3215	C3215A	Original 20k	C1212 (1B)	Upper	A7202 (3)
Superhitch	C3216	C3216A	Magnum 30k	C1212-30 (1C)		(3500 ONLY)
SH Magnum	C3216	C3216A			Lower	A7310 (1,4)
Aftermarket	R3500 (12)					(2500 ONLY)
Factory	C3215	C3215A	Original 20k	C1211 (1B)	Upper	A7202 (3)
Superhitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		(3500 ONLY)
SH Magnum	C3216	C3216A			Lower	A7310 (1,4)
Aftermarket	R3500 (12)					(2500 ONLY)
Factory	C3215	C3215A	Original 20k	C1211 (1B)	Upper	A7202 (3)
Superhitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		(3500 ONLY)
SH Magnum	C3216	C3216A			Lower	A7310 (1,4)
Aftermarket	R3500 (12)					(2500 ONLY)
Factory	C3217	C3217A	Original 20k	C1211 (1B)	Upper	A7202 (3)
Superhitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		
SH Magnum	C3216	C3216A				
Aftermarket	R3500 (12)					
Factory	C3217	C3217A	Original 20k	C1211 (1B)	Upper	A7202 (3)
Superhitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		
SH Magnum	C3216	C3216A				
Aftermarket	R3500 (12)					
Factory	C3214		Hero 15k	C1210H (1A)	Lower	A7310 (1,4)
SH Hero	R3509	R3509A				
Aftermarket	R3500 (12)					
Factory	C3218				Lower	A7310 (1,4)

Toyota

Step 1: Select Your Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under
Vehicle Battery Mount

				Front Tie Downs				MFG#
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down		
1998-2004	Tacoma	All	6ft	No	T2306			
2000-2006	Tundra	All	6.5ft	No	T2301			
	Standard Tow Package							
2000-2006	Tundra	All	8ft	No	T2302			
	Standard Tow Package							
2000-2006	Tundra	All	8ft	No	T2302			
	HD Tow Package							
2003-2006	Tundra	All	6.5ft	No	T2301			
	HD Tow Package							
2005-2014	Tacoma	All	All	No	T2303 (18)			
	4x4 only							
2005-2014	Tacoma	All	All	No	T2308 (18)			
	2x4 only							
2007	Tundra	All	6.5ft	No	T2304			
2007	Tundra	All	8ft	No	T2305			
2007	Tundra	Crew Max	5.5ft	No	T2307			
	4x4 Only							
2008-2011	Tundra	All	6.5ft	No	T2304			
2008-2012	Tundra	All	8ft	No	T2305			
2008-2013	Tundra	Crew Max	5.5ft	No	T2307			
	4x4 Only							
2012-2013	Tundra	Double	6.5ft	No	T2309			
2013	Tundra	Double	8ft	No	T2305			
2014-2015	Tundra	Crew Max	5.5ft	No	T2307			
	4x4 only							
2014-2015	Tundra	Double	6.5ft	No	T2309			
	4x4 only							
2014-2015	Tundra	Double	8ft	No	T2305			
2015	Tacoma	Double	6.5ft	No	T2308 (18)			
	4x4 only							
2015	Tacoma	Double	5ft					
	4x4 only							
2016	Tacoma	Access	6.5ft	No	T2303			
	4x4 only							
2016	Tacoma	Double	5.5ft	No	T2303			
	4x4 only							

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs		SuperHitch		StableLoad			
Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#		
No Hitch	T3305			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
No Hitch	T3301 (9)			Lower	A7311 (2,4)		
Factory	T3301 (9)						
Aftermarket	R3500 (12)						
No Hitch	T3301 (9)			Lower	A7311 (2,4)		
Factory	T3301 (9)						
Aftermarket	R3500 (12)						
Factory	T3302 (9)			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3302 (9)			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3303			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3303			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3304			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3304			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3304			Lower	A7311 (2,4)		
Aftermarket	R3500 (12)						
Factory	T3304	R3507A	Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)	
Aftermarket	R3500 (12)					Double cab and crew max only	
Factory	T3304			Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Aftermarket	R3500 (12)	R3507A					Double cab and crew max only
Factory	T3304			Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Aftermarket	R3500 (12)						
Factory	T3304	R3507A					
Aftermarket	R3500 (12)			Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Factory	T3304						
Aftermarket	R3500 (12)						
Factory	T3306			Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Aftermarket	R3500 (12)						
Factory	T3306	R3507A		Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Aftermarket	R3500 (12)						
Factory	T3306			Hero 15k	T1300H (1A,2,3,7)	Lower	A7311 (2,4)
Aftermarket	R3500 (12)						
Factory	T3306	R3507A					
Aftermarket	R3500 (12)						
Factory	T3303						
Aftermarket	R3500 (12)						
Factory	T3307 (20)						
Aftermarket	R3500 (12)						
Factory	T3307 (20)						
Aftermarket	R3500 (12)						

Step 6: Select Your Turbuckles

Basic
SpringLoad
Kit
MFG# S9000

SpringLoad XL
MFG# S9050A

FastGun

SS Polished MFG# S9526
SS Powder Coated Grey MFG# S9522
SS Powder Coated Black MFG# S9529
SS Bright White MFG# S9530



Tie Down Footnotes

- Drilling may be required into the Spring Hanger Bracket which is welded to the frame.
- Drilling may be required for installation.
- May require modifications to the running board/access step brackets to install Tie Downs.
- Additional labor required for installation of Tie Downs.
- Front Tie Down is available in adjustable Tie Down style only.
- The Toyota HD Tow Package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow Package attaches to the bottom of the vehicles frame only.
- To determine the correct fit: 1500 & 2500 model/classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5' tall it requires the LD application, if the frame is 8" tall it requires the HD application.
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame.
- Tie Down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling four holes per side is required for install.
- Dually applications may require the use of #A7004 Dually Adapter Kit. Measure from front of camper side in point to the rear anchor point.
- Requires a Factory installed hitch receiver with an open ended cross tube.
- Designed to work with the factory installed running board that extends past the cab and onto the bed. Tie Down is not adjustable in height.
- Toyota Tacoma models with a 5' bed & running boards under the cab will need to remove the running boards to install this tie down.
- Will not work with aftermarket rear mounted kick out steps that are mounted under the bumper.
- This Tie Down mounts to the cab mount. You will need to remove the running boards to install this Tie Down.
- If you are using an older one piece SuperHitch.
- There were no factory options for a factory hitch for this vehicle. Hitches that were installed on this truck were dealer installed aftermarket hitch options. Select aftermarket hitch on app guide main page step 3.
- Will not work with HiddenPower due to Tie Down design.
- Works with NO running boards, including the ones that are just under the cab. If you have running boards under your cab, you will need front tie down D2127/D2127A.
- Works with any factory running boards/access steps, including the ones that are only under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags.
- If your truck is equipped with factory airbags and no running boards, use D2126/D2126A. If your truck is equipped with factory airbags and running boards of any length, use D2127/D2127A.

Nissan

Step 1: Select Your Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under
Vehicle Battery Mount

				Front Tie Downs			
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#
2000-2004	Frontier	Crew	4.5ft	No	N2407		
		4x4					
2000-2004	Frontier	King, Crew	6ft	No	N2408		
2004-2015	Titan	Crew	5.5ft	No	N2401		
2004-2014	Titan	King	6.5ft	No	N2402 (16)		
2005-2012	Frontier	King, Crew	6ft	No	N2409		
2008	Titan	King	8ft	No	N2405		
2008-2012	Titan	Crew	7ft	No	N2406		
2013-2014	Frontier	King	6ft	No	N2409		
2014	Frontier	Crew	6ft				
		4x4					
2014-2016	Frontier	Crew	5'				
		4x4					
2015-2016	Frontier	King	6ft	No	N2409		
All	NV2500, NV3500	Van	N/A				
All	Xterra	SUV	N/A				

Step 6: Select Your Turnbuckles

Basic SpringLoad Kit


MFG# S9000

SpringLoad XL

MFG# S9050A

FastGun

SS Polished MFG# S9526
 SS Powder Coated Grey MFG# S9522
 SS Powder Coated Black MFG# S9529
 SS Bright White MFG# S9530

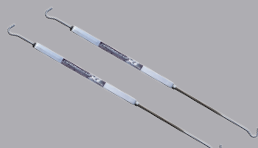

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

Rear Tie Downs			SuperHitch		StableLoad	
Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Type	MFG#	
No Hitch	N3402			Lower	A7311 (2,4)	
Aftermarket	R3500 (12)					
No Hitch	N3402			Lower	A7311 (2,4)	
Aftermarket	R3500 (12)					
No Hitch	N3401			Lower	A7311 (2,4,6)	
Factory	N3401					
Aftermarket	R3500 (12)					
No Hitch	N3401			Lower	A7311 (2,4,6)	
Factory	N3401					
Aftermarket	R3500 (12)					
No Hitch	N3403			Lower	A7311 (2,4)	
Factory	N3403					
Aftermarket	R3500 (12)					
No Hitch	N3401			Lower	A7311 (2,4,6)	
Factory	N3401					
Aftermarket	R3500 (12)					
No Hitch	N3401			Lower	A7311 (2,4,6)	
Factory	N3401					
Aftermarket	R3500 (12)					
No Hitch	N3403			Lower	A7311 (2,4)	
Factory	N3403					
Aftermarket	R3500 (12)					
No Hitch	N3403			Lower	A7311 (2,4)	
Factory	N3403					
Aftermarket	R3500 (12)					
Aftermarket	R3500 (12)			Lower	A7311 (2,4)	
				Lower	A7311 (2,4)	
				Lower	A7311 (2,4)	

Tie Down Footnotes

- Drilling may be required into the Spring Hanger Bracket which is welded to the frame.
- Drilling may be required for installation.
- May require modifications to the running board/bed access step brackets to install Tie Downs.
- Additional labor required for installation of Tie Downs.
- Front Tie Down is available in adjustable Tie Down style only.
- The Toyota HD Tow Package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow Package attaches to the bottom of the vehicles frame only.
- To determine the correct fit: 1500 & 2500 model/classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, if the frame is 6" tall it requires the HD application.
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame.
- Tie Down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling four holes per side is required for install.
- Dually applications may require the use of #A7004 Dually Adapter Kit. Measure from front of camper side in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit.
- Requires a Factory installed hitch receiver with an open ended cross tube.
- Designed to work with the factory installed running board that extends past the cab and onto the bed. Tie Down is not adjustable in height.
- Toyota Tacoma models with a 5' bed & running boards under the cab will need to remove the running boards to install this tie down.
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper.
- This Tie Down mounts to the cab mount. You will need to remove the running boards to install this Tie Down.
- If you are using an older one piece SuperHitch
- There were no factory options for a factory hitch for this vehicle. Hitches that were installed on this truck were dealer installed aftermarket hitch options. Select aftermarket hitch on app guide main page step 3.
- Will not work with HiddenPower due to Tie Down design.
- Works with NO running boards, including the ones that are just under the cab. If you have running boards under your cab, you will need front tie down D2127/D2127A.
- Works with any factory running boards/bed access steps, including the ones that are only under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags.
- If your truck is equipped with factory airbags and no running boards, use D2126/D2126A. If your truck is equipped with factory airbags and running boards of any length, use D2127/D2127A.



YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
07-15	Chevrolet 1500	All	C1210H (1a)	A7310 (30)	-
09-14	Ford F 150	All bed lengths with factory hitch	F1005H (1,1a,2)	A7311 (30)	A7200 (31)
09-15	Dodge 1500	All bed lengths with factory hitch	D1106H (1a)	-	-
08-15	Toyota Tundra Crew Max, Double Cab	All bed lengths with factory hitch	T1300H (1a,2,3)	A7311 (30)	-
YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
FORD					
80-97	F250/F350	All bed lengths	F1000 (1b)	A7311 (30)	A7200 (31)
99-05	Excursion	All bed lengths	F1006 (1b)	A7310 (30)	-
99-16	F250/F350/F450 Factory Bed	All bed lengths	F1002 (1b,5)	A7311 (30)	A7200 (31)
00-16	F350/F450/F550 Cab and chassis	NA	F1003 (1b,5)	-	A7200 (31)
DODGE					
80-93	D250/D350	Long bed	F1000 (1b,1)	-	A7200 (31)
94-02	2500/3500	Long bed	D1100 (1b,1)	A7311 (30)	A7200 (31)
94-02	2500/3500	Short bed	D1100 (1b,1)	A7311 (30)	A7200 (31)
03-12	2500 HD/3500HD	Long bed and short without factory hitch	D1101 (1b,2)	A7311 (30)	A7200 (31)
03-12	2500 HD/3500 HD	Long bed and short with factory hitch	D1102 (1b,2,3)	A7311 (30)	A7200 (31)
2013	2500HD/3500 HD	Long bed and short with factory hitch	D1104 (1b,2,3)	A7311 (30)	A7200 (31)
14-15	2500	Long bed and short with factory hitch	D1107 (1b,2,3)	-	-
14-16	3500 HD	Long bed and short with factory hitch	D1104 (1b,2,3)	A7311 (30)	A7200 (31)
CHEV/GMC					
82-87	2500	Long bed	C1200 (1b,2)	-	-
82-90	3500	Long bed	C1200 (1b,2)	-	-
88-98	2500	All bed lengths	C1201 (1b,1)	A7310 (30)	-
91-00	3500	All bed lengths	C1201 (1b,1)	A7310 (30)	-
99-00	2500 LD	Long bed	C1202 (1b)	A7310 (30)	-
01-07	2500 HD/3500 HD classic	Short bed	C1204 (1b,4)	A7310 (30)	-
01-10	2500 HD/3500 HD classic & new body	Long bed	C1205 (1b)	A7310 (30)	-
07-10	2500 HD/3500 HD new body	Short bed	C1206 (1b)	A7310 (30)	-
11-14	2500/3500 HD	Long bed	C1208 (1b)	A7310 (30)	A7202 (31)
11-14	2500/3500 HD	Short bed	C1209 (1b,1,6)	A7310 (30)	A7202 (31)
15-16	2500/3500 HD	Long bed	C1211 (1b)	-	A7202 (31)
15-16	2500/3500 HD	Short bed	C1212 (1b)	-	A7202 (31)
YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
FORD					
99-15	F250/F350/F450 Factory Bed	All bed lengths	F1002-30 (1c,5)	A7311 (30)	A7200 (31)
00-15	F350/F450/F550 cab and chassis	N/A	F1003-30 (1c,5)	-	A7200 (31)
DODGE					
03-12	2500 HD/3500 HD	Long and short bed with factory hitch	D1102-30 (1c,2,3)	A7311 (30)	A7200 (31)
07-15	STERLING / 3500 /4500 / 5500 HD CAB & CHASSIS/ QUAD CAB & REG	Long and short bed with factory hitch	D1103-30 (1c,2,3)	A7311 (30)	A7200 (31)
2013	2500HD/3500 HD	Long and short bed with factory hitch	D1104-30 (1c,2,3)	A7311 (30)	A7200 (31)
14-15	2500 HD	Long and short bed with factory hitch	D1107-30 (1c,2,3)	-	-
14-15	3500 HD	Long and short bed with factory hitch	D1104-30 (1c,2,3)	A7311 (30)	A7200 (31)
CHEV/GMC					
01-07	2500 HD/3500 HD classic	Short bed	C1204-30 (1c,4)	A7310 (30)	-
01-10	2500 HD/3500 HD classic & new body	Long bed	C1205-30 (1c)	A7310 (30)	-
07-10	2500 HD/3500 HD new body	Short bed	C1206-30 (1c)	A7310 (30)	-
11-14	2500/3500 HD	Long bed	C1208-30 (1c)	A7310 (30)	A7202 (31)
11-14	2500/3500 HD	Short bed	C1209-30 (1c,1,6)	A7310 (30)	A7202 (31)
2015	2500/3500 HD	Long bed	C1211-30 (1c)	-	A7202 (31)
2015	2500/3500 HD	Short bed	C1212-30 (1c)	-	A7202 (31)

LENGTH	MFG#	DEAD WEIGHT	WEIGHT DISTRIBUTING
21"	E1521	750 / 7,500	1,400 / 14,000
24"	E1524	750 / 7,500	1,400 / 14,000
28"	E1528	750 / 7,500	1,200 / 12,000
32"	E1532	650 / 6,500	1,200 / 12,000
36"	E1536	650 / 6,500	1,200 / 12,000
42"	E1542	600 / 6,000	1,200 / 12,000
48"	E1548	600 / 6,000	1,200 / 12,000
60"	E1560	500 / 5,000	1,000 / 10,000
MFG#		SuperTruss Extension SkidWheel	
A7100		SuperTruss Extension SkidWheel	

MFG#	ITEM DESCRIPTION
WD1000	Industry's highest ratings of 3,000lbs tongue weight and 30,000lbs towing
WP1001	Friction plate replacement kit: Prevents friction between yoke and ballmount.
WP1002	Separate set of hook up clips for hydraulic assist.
WP1003	Separate set of cam over leverage arms for engaging hook up clips

MFG#	ITEM DESCRIPTION	MAX CAPACITY
M9000	Magnum Drop Shank	30,000 lbs.
M9001	Magnum Drop Shank XL	30,000 lbs.
M9005	Magnum Ballmount Adapter	20,000 lbs.
M9002	Magnum Pintle Adapter	20,000 lbs.
M9003	Magnum Pintle Shank	17,000 lbs.
M9004	Magnum Ballmount Adapter	17,000 lbs.
M9006	Magnum 2.5" To 2" Adapter Sleeve	N/A
M9008	Magnum 30K Trailer Ball	30,000 lbs.
M9010	Everest 30K Shank	30,000 lbs.
M9011	Everest 30K Shank XL	30,000 lbs.

- SuperHitch Footnotes**
- 1A Rated at 1,500 lbs tongue weight distributing and 15,000 lbs pulling capacity weight distributing.
 - 1B Rated at 2,000 lbs tongue weight distributing and 20,000 lbs pulling capacity weight distributing.
 - 1C Rated at 3,000 lbs tongue weight distributing and 30,000 lbs pulling capacity weight distributing.
 - 1 Spare tire hanger and tailpipe modification may be necessary.
 - 2 May require modification to spare tire hanger.
 - 3 Will only work with factory welded on receiver hitch .
 - 4 2007 fits only classic body style.
 - 5 Trucks with 3/4" cab and chassis frame use F1003; trucks with a 3/7" regular pickup frame use F1002.

- StableLoad Footnotes**
- 30 Uses lower overload and is no-drill on most applications. StableLoad is the preferred suspension upgrade for all trucks. Lower overload required. Caution: A7311 is only required if there is no pre-drilled hole in the lower overload, otherwise use A7310 for pre-drilled lower overloads. Not required for SuperHitch installation. One set per truck is necessary.
 - 31 Uses upper overload and is no-drill. StableLoad is the preferred suspension upgrade for all trucks. Upper overload required. Not required for SuperHitch installation.