
## **Gruckling** Wiring Diagram for Adapter Installation Instructions for No. 95846

1. Unplug main connection from sealed beam



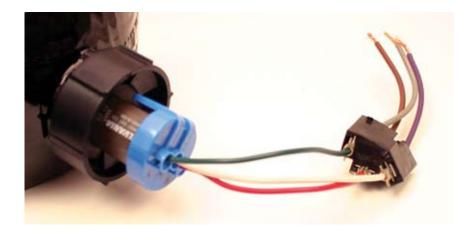

2. Replace sealed beam with 27007

3. The blue connection plugs into 27007 lamp

White (Ground)

4. The exposed terminals of adapter will be plugged to vehicle connection as show in diagram. NOTE: Terminal should be pushed in until seeded as shown. CAUTION: Terminals are sharp, use of pliers is recommended.

