

TUFF-BAR®

TRUCK, SUV AND JEEP ACCESSORIES

NERF STEPS • BULL BARS • GRILLE GUARDS • BUMPERS • LED LIGHTING • WINCHES • HITCHES







TABLE OF CONTENTS

STEP BAR 3" ROUND.....	4
WTW STEP 3" BAR.....	7
OVAL 4" STRAIGHT.....	8
OVAL 4" STEP BAR.....	10
OVAL 4" W/30° BEND	12
OVAL 5" STRAIGHT.....	14
OVAL 5" W/ 30° BEND	16
OVAL 5" W2W STEP BAR.....	17
OVAL 6" STRAIGHT.....	18
BULL BARS	20
GRILLE GUARDS.....	22
HD GRILLE GUARDS	24
CLASS I HITCHES	25
CLASS III/IV HITCHES.....	25
STUBBY BUMPER.....	26
FULL WIDTH BUMPER	26
9,500 LBS WINCH.....	26
12,000 LBS WINCH.....	26
REAR BUMPER W/ TIRE CARRIER OPTION	27
REAR BUMPER W/ TIRE CARRIER INCLUDED	27
BOLT-ON TIRE CARRIER	27
OVERSIZED TIRE CARRIER	27
LED LIGHTS	28



STEP BAR 3" ROUND

FEATURES AND BENEFITS

- 3 inch round step
- Vehicle specific applications
- UV resistant step pad
- Easy, bolt-on installation - no drilling required
- Hardware and mount kit included
- Available for a variety of vehicles
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

FORD EXPEDITION



DODGE RAM 1500



NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.



STEP BAR 3" ROUND APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2007	2010	Acura	MDX	1-0863	1-5863
2001	2006	Acura	MDX	1-0522	1-5522
2001	2018	Cadillac	Escalade	1-0003	1-5003
2002	2006	Chevy	Avalanche 1500 (2002-2006 w/out Cladding)	1-0992	1-5992
2002	2013	Chevy	Avalanche 1500 (2002-2006 w/out Cladding; 2002-2013 w/Cladding)	1-0992	1-5992
1992	1994	Chevy	Blazer Fullsize 2Dr	1-0050	1-5050
1988	1998	Chevy	C/K 1500 Reg Cab	1-0050	1-5050
1988	1998	Chevy	C/K 1500/2500/3500 Ext Cab 2Dr (Incl Z71)	1-0360	1-5360
1988	2000	Chevy	C/K 2500/3500 Reg Cab	1-0050	1-5050
1996	1998	Chevy	C/K Series 1500 Ext Cab 3dr	1-5880	1-0980
1996	1998	Chevy	C/K Series 2500/3500 Ext Cab 3dr	1-5880	1-0980
2015	2018	Chevy	Colorado Crew Cab	1-0104	1-5104
2004	2012	Chevy	Colorado Crew Cab	1-0513	1-5513
2015	2018	Chevy	Colorado Ext Cab	1-0004	1-5004
2004	2012	Chevy	Colorado Ext Cab	1-0413	1-5413
2004	2012	Chevy	Colorado Reg Cab	1-0313	1-5313
2014	2018	Chevy	Sierra/Silverado 1500 Reg Cab	1-0083	1-5083
2001	2013	Chevy	Silverado 1500 Crew Cab	1-0591	1-5591
2014	2018	Chevy	Silverado 1500 Crew Cab	1-0283	1-5283
2014	2018	Chevy	Silverado 1500 Double Cab	1-0183	1-5183
1999	2013	Chevy	Silverado 1500/2500LD Ext Cab	1-0861	1-5861
1999	2013	Chevy	Silverado 1500/2500LD Reg Cab	1-0041	1-5041
2001	2018	Chevy	Silverado 2500/3500 Crew Cab	1-0591	1-5591
2015	2018	Chevy	Silverado 2500/3500 Crew Cab (Body Mount)	1-0683	1-5683
2015	2018	Chevy	Silverado 2500/3500 Double Cab (Body Mount)	1-0583	1-5583
2015	2018	Chevy	Silverado 2500/3500 Reg Cab (Body Mount)	1-0483	1-5483
2001	2018	Chevy	Silverado 2500HD/3500 Ext/Double Cab	1-0861	1-5861
2001	2018	Chevy	Silverado 2500HD/3500 Reg Cab	1-0041	1-5041
2000	2014	Chevy	Suburban	1-0992	1-5992
1992	1999	Chevy	Suburban (Excl 3/4 Ton 4WD)	1-0460	1-5460
2000	2014	Chevy	Suburban 3/4 Ton	1-0103	1-5103
1995	1999	Chevy	Tahoe 2Dr	1-0050	1-5050
2000	2014	Chevy	Tahoe 4Dr 1/2 Ton (Excl 04-07 Z71)	1-0003	1-5003
1995	1999	Chevy	Tahoe/Yukon 4Dr	1-0770	1-5770
2002	2009	Chevy	Trailblazer (Excl SS)	1-0312	1-5312
2002	2008	Chevy	Trailblazer Ext	1-0422	1-5422
1992	1999	Chevy	Yukon 2Dr	1-0050	1-5050
2000	2014	Chevy	Yukon XL 1/2 Ton (Excl 04-07 Z71)	1-0992	1-5992
2000	2014	Chevy	Yukon XL 3/4 Ton (Excl 01-10 Z71)	1-0103	1-5103
2005	2011	Dodge	Dakota Club Cab	1-0082	1-5082
2000	2004	Dodge	Dakota Quad Cab	1-0771	1-5771
2005	2011	Dodge	Dakota Quad Cab	1-0972	1-5972
1998	2003	Dodge	Durango 4Dr	1-0521	1-5521

STEP BAR 3" ROUND APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2004	2008	Dodge	Durango 4Dr	1-0362	1-5362
2007	2012	Dodge	Nitro	1-0043	1-5043
2009	2018	Dodge	Ram 1500 Crew Cab	1-0653	1-5653
2006	2008	Dodge	Ram 1500 Mega Cab	1-0092	1-5092
1998	2001	Dodge	Ram 1500 Quad Cab	1-0421	1-5421
2002	2008	Dodge	Ram 1500 Quad Cab	1-0132	1-5132
2009	2018	Dodge	Ram 1500 Quad Cab	1-0553	1-5553
1994	2001	Dodge	Ram 1500 Reg Cab	1-0560	1-5560
2002	2008	Dodge	Ram 1500 Reg Cab	1-0232	1-5232
2009	2018	Dodge	Ram 1500 Reg Cab	1-0453	1-5453
1994	2002	Dodge	Ram 1500/2500/3500 Club Cab (Excl Ram 1500 2002)	1-0421	1-5421
2010	2018	Dodge	Ram 2500/3500 (Excl Cab Chassis w/Def Tanks)	1-0653	1-5653
2010	2018	Dodge	Ram 2500/3500 Mega Cab (Excl Cab Chassis w/Def Tanks)	1-0753	1-5753
1998	2002	Dodge	Ram 2500/3500 Quad Cab	1-0421	1-5421
2003	2009	Dodge	Ram 2500/3500 Quad Cab	1-0132	1-5132
1994	2002	Dodge	Ram 2500/3500 Reg Cab	1-0560	1-5560
2003	2009	Dodge	Ram 2500/3500 Reg Cab	1-0232	1-5232
2010	2018	Dodge	Ram 2500/3500 Reg Cab	1-0453	1-5453
1980	1998	Ford	F-Series Pickup Reg Cab (Excl 97-98 F-150/F-250LD)	1-0350	1-5350
1980	1996	Ford	Bronco (Fullsize)	1-0350	1-5350
2007	2010	Ford	Edge (Excl Sport)	1-0443	1-5443
2001	2007	Ford	Escape	1-0791	1-5791
2008	2012	Ford	Escape	1-0633	1-5633
2003	2017	Ford	Expedition (Excl EL model)	1-5290	1-0390
2011	2018	Ford	Explorer 4Dr	1-0063	1-5063
2002	2005	Ford	Explorer 4Dr	1-0702	1-5702
2006	2010	Ford	Explorer 4Dr	1-0403	1-5403
2001	2006	Ford	Explorer Sport Trac	1-0981	1-5981
2007	2010	Ford	Explorer Sport Trac	1-0533	1-5533
2009	2014	Ford	F-150 Reg Cab	1-0053	1-5053
2004	2008	Ford	F-150 Reg Cab (Excl Heritage)	1-0432	1-5432
2015	2018	Ford	F-150 Regular Cab	1-0293	1-5293
2009	2014	Ford	F-150 Super Cab	1-0153	1-5153
2004	2008	Ford	F-150 Super Cab (Excl Heritage)	1-0532	1-5532
2015	2018	Ford	F-150 SuperCab	1-0393	1-5393
2009	2014	Ford	F-150 SuperCrew	1-0253	1-5253
2001	2003	Ford	F-150 Supercrew	1-0881	1-5881
2004	2008	Ford	F-150 Supercrew	1-0632	1-5632
2015	2018	Ford	F-150 SuperCrew	1-0493	1-5493
1997	2004	Ford	F-150/250LD Reg Cab (Heritage)	1-0011	1-5011
1997	1998	Ford	F-150/250LD SuperCab	1-0341	1-5341
1999	2004	Ford	F-150/250LD SuperCab 4Dr	1-0341	1-5341
2017	2018	Ford	F-250/350/450/550 Crew Cab	1-0493	1-5493
1999	2016	Ford	F-250/350/450/550 Crew Cab	1-0331	1-5331
1999	2016	Ford	F-250/350/450/550 Reg Cab	1-0231	1-5231
2017	2018	Ford	F-250/350/450/550 Regular Cab	1-0293	1-5293
2017	2018	Ford	F-250/350/450/550 SuperCab	1-0393	1-5393
1999	2016	Ford	F-250/350/450/550 SuperCab 4Dr	1-0131	1-5131
1998	2012	Ford	Ranger Reg Cab	1-0012	1-5012
1998	2012	Ford	Ranger SuperCab 2Dr	1-0112	1-5112
1998	2012	Ford	Ranger SuperCab 4Dr	1-0551	1-5551
2007	2016	GMC	Acadia (Excl Denali)	1-0833	1-5833
2004	2012	GMC	Canyon Crew Cab	1-0513	1-5513
2015	2018	GMC	Canyon Crew Cab	1-0104	1-5104
2004	2012	GMC	Canyon Ext Cab	1-0413	1-5413
2015	2018	GMC	Canyon Ext Cab	1-0004	1-5004
2004	2012	GMC	Canyon Reg Cab	1-0313	1-5313
2002	2009	GMC	Envoy	1-0312	1-5312
2002	2008	GMC	Envoy XL	1-0422	1-5422
2005	2009	GMC	Equinox	1-0113	1-5113
2001	2013	GMC	Sierra 1500 Crew Cab	1-0591	1-5591
2014	2018	GMC	Sierra 1500 Crew Cab	1-0283	1-5283
2014	2018	GMC	Sierra 1500 Double Cab	1-0183	1-5183
1999	2013	GMC	Sierra 1500/2500LD Ext Cab	1-0861	1-5861
1999	2013	GMC	Sierra 1500/2500LD Reg Cab	1-0041	1-5041
2001	2018	GMC	Sierra 2500/3500 Crew Cab	1-0591	1-5591
2015	2018	GMC	Sierra 2500/3500 Crew Cab (Body Mount)	1-0683	1-5683
2015	2018	GMC	Sierra 2500/3500 Double Cab (Body Mount)	1-0583	1-5583
2015	2018	GMC	Sierra 2500/3500 Reg Cab (Body Mount)	1-0483	1-5483
2001	2018	GMC	Sierra 2500HD/3500 Ext/Double Cab	1-0861	1-5861
2001	2018	GMC	Sierra 2500HD/3500 Reg Cab	1-0041	1-5041
2014	2018	GMC	Sierra/Silverado 1500 Reg Cab	1-0083	1-5083
2000	2014	GMC	Yukon	1-0003	1-5003
2002	2006	Honda	CR-V	1-0222	1-5222
2007	2011	Honda	CR-V	1-0843	1-5843
2016	2018	Honda	Pilot	1-0404	1-5404
2017	2018	Honda	Ridgeline	1-0304	1-5304

STEP BAR 3" ROUND APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2006	2014	Honda	Ridgeline	1-0882	1-5882
2003	2010	Hummer	H2	1-0301	1-5301
2006	2010	Hummer	H3	1-0682	1-5682
2001	2006	Hyundai	Santa Fe	1-0722	1-5722
2007	2012	Hyundai	Santa Fe	1-0243	1-5243
1984	2000	Jeep	Cherokee 4Dr	1-0311	1-5311
2005	2010	Jeep	Commander (w/ 5 Passenger Seating w/o Rear A/C)	1-0792	1-5792
2005	2010	Jeep	Grand Cherokee	1-0792	1-5792
1999	2004	Jeep	Grand Cherokee 4Dr	1-0741	1-5741
2008	2012	Jeep	Liberty	1-0823	1-5823
2005	2007	Jeep	Liberty (w/o Mudflaps)	1-0723	1-5723
2015	2016	Jeep	Renegade	1-0504	1-5504
2018	2018	Jeep	Wrangler Unlimited JL 4dr (Excl JK)	1-0704	1-5704
1996	2006	Jeep	Wrangler	1-0790	1-5790
1987	1995	Jeep	Wrangler	1-0690	1-5690
2007	2018	Jeep	Wrangler 2Dr (Excl. JL)	1-0133	1-5133
2004	2006	Jeep	Wrangler Unlimited	1-0582	1-5582
2007	2018	Jeep	Wrangler Unlimited (Excl. JL)	1-0923	1-5923
2003	2010	Kia	Sorento	1-0442	1-5442
1999	2003	Lexus	RX300	1-0201	1-5201
2004	2009	Lexus	RX300	1-0463	1-5463
2006	2009	Lexus	RX400H	1-0463	1-5463
2005	2018	Nissan	Frontier Crew Cab	1-0572	1-5572
1999	2004	Nissan	Frontier Crew Cab	1-0101	1-5101
2005	2018	Nissan	Frontier King Cab	1-0372	1-5372
1999	2004	Nissan	Pathfinder	1-0581	1-5581
2004	2018	Nissan	Titan Crew Cab	1-0852	1-5852
2004	2018	Nissan	Titan King Cab	1-0552	1-5552
2016	2018	Nissan	Titan XD Crew Cab	1-0204	1-5204
2005	2014	Nissan	Xterra	1-0743	1-5743
2019	2019	Ram	Ram 1500 Crew Cab	1-0804	1-5804
2009	2018	Ram	Ram 1500 Crew Cab	1-0653	1-5653
2009	2018	Ram	Ram 1500 Quad Cab	1-0553	1-5553
2009	2018	Ram	Ram 1500 Reg Cab	1-0453	1-5453
2010	2018	Ram	Ram 2500/3500 (Excl Cab Chassis w/Def Tanks)	1-0653	1-5653
2010	2018	Ram	Ram 2500/3500 Mega Cab (Excl Cab Chassis w/Def Tanks)	1-0753	1-5753
2010	2018	Ram	Ram 2500/3500 Reg Cab	1-0453	1-5453
2005	2014	Suzuki	Equator Crew Cab	1-0101	1-5101
2010	2018	Toyota	4Runner Limited (Excl Trail)	1-0853	1-5853
2010	2013	Toyota	4Runner SR5 (Excl Trail)	1-0853	1-5853
2007	2014	Toyota	FJ Cruiser	1-0213	1-5213
2001	2007	Toyota	Highlander	1-0463	1-5463
2016	2018	Toyota	RAV4	1-0013	1-5013
2013	2015	Toyota	RAV4	1-0604	1-5604
2006	2012	Toyota	RAV4	1-0903	1-5903
2001	2005	Toyota	RAV4	1-0902	1-5902
2005	2018	Toyota	Tacoma Access Cab	1-0762	1-5762
1995	2004	Toyota	Tacoma Access Cab 4WD Or Prerunner 2/4WD	1-0570	1-0380
2001	2004	Toyota	Tacoma Double Cab	1-0102	1-5102
2005	2018	Toyota	Tacoma Double Cab	1-0772	1-5772
2007	2018	Toyota	Tundra CrewMax	1-0523	1-5523
2004	2006	Toyota	Tundra Double Cab	1-0042	1-5042
2000	2006	Toyota	Tundra Ext Cab	1-0152	1-5152
2007	2018	Toyota	Tundra Double Cab (Cradle Mount)	1-0423	1-5423
2007	2018	Toyota	Tundra Reg Cab	1-0623	1-5623



WTW STEP 3" BAR

FEATURES AND BENEFITS

- 3 inch round tube
- Vehicle specific applications
- Wheel-to-Wheel length
- UV resistant step pad
- Easy, bolt-on installation - no drilling required
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish


FORD F-250



DODGE RAM 1500




NOTE: Because every vehicle is different, your exact TUFF-BAR Step may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

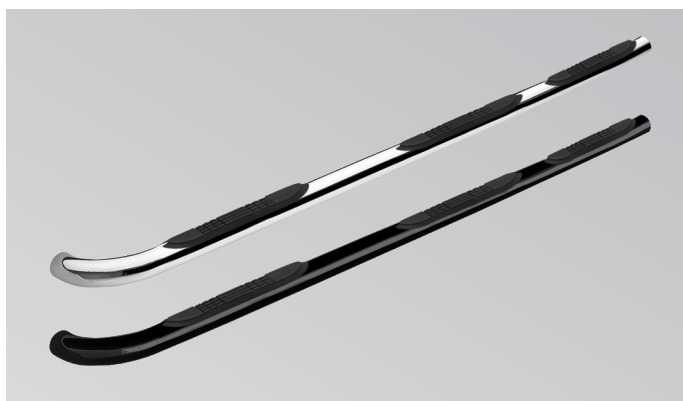

WTW STEP 3" BAR APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2014	2018	Chevy	Silverado 1500 Crew Cab (6.5 ft Bed)(Excl HD)	1-30554	1-35554
2014	2018	Chevy	Silverado 1500 Crew Cab (5.5 ft Bed)(Excl HD)	1-30254	1-35254
2004	2013	Chevy	Silverado 1500 Crew Cab Short Bed (5.5ft Bed)	1-30514	1-35514
2014	2018	Chevy	Silverado 1500 Dbl Cab (6.5 ft Bed)	1-30454	1-35454
2001	2013	Chevy	Silverado 1500 Ext Cab 4dr Short Bed (6.5 ft Bed)	1-30304	1-35304
2001	2014	Chevy	Silverado 2500/3500 Crew Cab (6.5 ft Bed)	1-30024	1-35024
2001	2014	Chevy	Silverado 2500/3500 Ext Cab Short Bed (6.5 ft Bed)	1-30304	1-35304
2009	2018	Dodge	Ram 1500 Quad Cab (6.4 ft Bed)	1-01343	1-51343
2010	2018	Dodge	Ram 2500/3500 Mega Cab (6.4ft Bed)	1-30274	1-35274
2003	2009	Dodge	Ram 2500/3500 Quad Cab (6.25 ft Bed)	1-30804	1-35804
2004	2008	Ford	F-150 SuperCab 4dr (Excl Heritage)	1-30214	1-35214
2009	2014	Ford	F-150 SuperCab Short Bed	1-30153	1-35153
2009	2014	Ford	F-150 SuperCrew (6.5 ft Bed)	1-30924	1-35924
2004	2008	Ford	F-150 SuperCrew (6.5 ft bed)(Excl Heritage)	1-30314	1-35314
1999	2016	Ford	F-250/350 SuperCab (6.5 ft Bed)	1-30524	1-35524
2014	2018	GMC	Sierra 1500 Crew Cab (6.5 ft Bed)(Excl HD)	1-30554	1-35554
2014	2018	GMC	Sierra 1500 Crew Cab (5.5 ft Bed)(Excl HD)	1-30254	1-35254
2004	2013	GMC	Sierra 1500 Crew Cab (5.5ft Bed)	1-30514	1-35514
2014	2018	GMC	Sierra 1500 Double Cab (6.5 ft Bed)	1-30454	1-35454
2001	2013	GMC	Sierra 1500 Ext Cab 4dr (6.5 ft Bed)	1-30304	1-35304
2001	2014	GMC	Sierra 2500/3500 Crew Cab (6.5 ft Bed)	1-30024	1-35024
2001	2014	GMC	Sierra 2500/3500 Ext Cab (6.5 ft Bed)	1-30304	1-35304
2009	2018	Ram	Ram 1500 Quad Cab (6.4 ft Bed)	1-01343	1-51343
2010	2018	Ram	Ram 2500/3500 Mega Cab (6.4ft Bed)	1-30274	1-35274
2007	2018	Toyota	Tundra Double Cab (6.5 ft Bed)	1-30714	1-35714

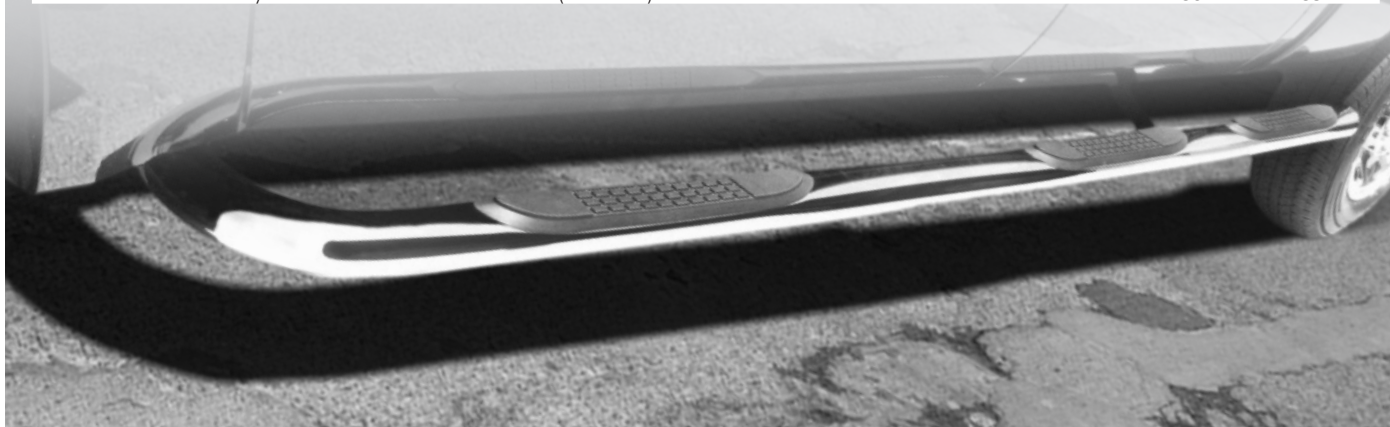


OVAL 4" STRAIGHT


FEATURES AND BENEFITS

- 4 inch oval shaped straight bar
- Seam free ends
- Wide step area
- Vehicle specific applications
- UV resistant step pad
- Available for a variety of vehicles
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

HONDA CRV

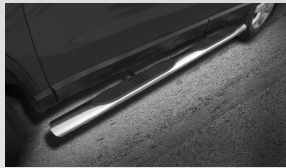

NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

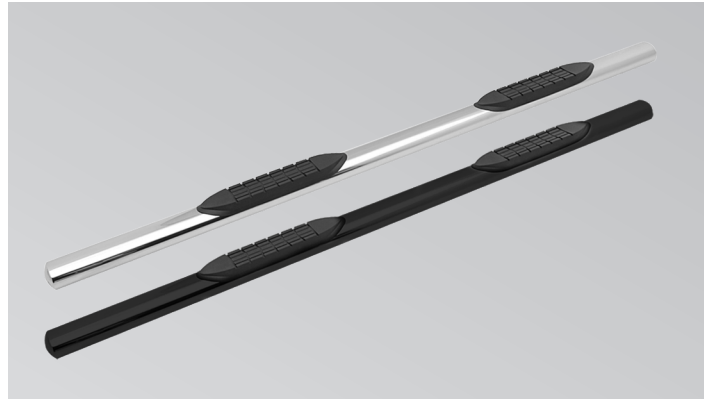


OVAL 4" STRAIGHT TUBE APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2007	2014	Buick	Acadia	5-40833	5-45833
2007	2009	Buick	Enclave	5-40833	5-45833
2007	2010	Buick	Outlook	5-40833	5-45833
2007	2014	Buick	Traverse	5-40833	5-45833
2001	2014	Chevy	2500HD/3500 Crew Cab	5-40591	5-45591
2002	2012	Chevy	Avalanche 1500 w/Cladding	5-40203	5-45203
2004	2012	Chevy	Colorado Crew Cab	5-40513	5-45513
2015	2018	Chevy	Colorado Crew Cab	5-40104	5-45104
2015	2018	Chevy	Colorado Ext Cab	5-40004	5-45004
2004	2013	Chevy	Silverado 1500 Crew Cab	5-40591	5-45591
2014	2018	Chevy	Silverado 1500 Crew Cab	5-40273	5-45273
2014	2018	Chevy	Silverado 1500 Double Cab	5-40173	5-45173
2014	2018	Chevy	Silverado 1500 Reg Cab	5-40073	5-45073
1999	2013	Chevy	Silverado 1500/2500LD Ext Cab	5-40861	5-45861
2001	2008	Chevy	Silverado 1500HD Crew Cab	5-40591	5-45591
2015	2018	Chevy	Silverado 2500/3500 Double Cab	5-40173	5-45173
2015	2018	Chevy	Silverado 2500/3500 Crew Cab (Excl Diesel)	5-40273	5-45273
2015	2018	Chevy	Silverado 2500/3500 Reg Cab (Excl Diesel)	5-40073	5-45073
2001	2014	Chevy	Silverado 2500HD/3500 Ext Cab	5-40861	5-45861
2000	2014	Chevy	Tahoe	5-40003	5-45003
2000	2014	Chevy	Yukon 4dr (Excl 04-07 Z71)	5-40003	5-45003
2009	2018	Dodge	Ram 1500 Crew Cab	5-40653	5-45653
2002	2008	Dodge	Ram 1500 Quad Cab	5-40132	5-45132
2009	2018	Dodge	Ram 1500 Quad Cab	5-40553	5-45553
2010	2018	Dodge	Ram 2500/3500 Crew Cab	5-40653	5-45653
2006	2009	Dodge	Ram 2500/3500 Mega Cab	5-40092	5-45092
2010	2018	Dodge	Ram 2500/3500 Mega Cab	5-40753	5-45753
2002	2009	Dodge	Ram 2500/3500 Quad Cab	5-40132	5-45132
2010	2018	Dodge	Ram 2500/3500 Reg Cab	5-40453	5-45453
2007	2011	Ford	Edge (Excl 2009-2010 Sport)	5-40443	5-45443
2009	2014	Ford	F-150 Reg Cab	5-40053	5-45053
2015	2018	Ford	F-150 Reg Cab	5-40293	5-45293
2004	2008	Ford	F-150 Reg Cab (Excl Heritage)	5-40432	5-45432
2015	2018	Ford	F-150 SuperCab	5-40393	5-45393
2009	2014	Ford	F-150 SuperCab	5-40153	5-45153
2004	2008	Ford	F-150 SuperCab (Excl Heritage)	5-40532	5-45532
2015	2018	Ford	F-150 SuperCrew	5-40493	5-45493
2009	2014	Ford	F-150 SuperCrew	5-40253	5-45253
2004	2008	Ford	F-150 SuperCrew (Excl Heritage)	5-40632	5-45632
2001	2003	Ford	F-150 SuperCrew 4dr	5-40881	5-45881
1999	2004	Ford	F-150/F-250LD SuperCab Heritage	5-40341	5-45341
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-40493	5-45493
2017	2018	Ford	F-250/350/450/550 Reg Cab	5-40293	5-45293

OVAL 4" STRAIGHT TUBE APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2017	2018	Ford	F-250/350/450/550 SuperCab	5-40393	5-45393
1999	2016	Ford	F-250/350/450/550 SuperCab	5-40131	5-45131
1999	2016	Ford	F-250/350/450/550 SuperCrew	5-40331	5-45331
2001	2014	GMC	2500LD Crew Cab	5-40591	5-45591
2001	2014	GMC	2500HD/3500 Crew Cab	5-40591	5-45591
2015	2018	GMC	Canyon Crew Cab	5-40104	5-45104
2015	2018	GMC	Canyon Ext Cab	5-40004	5-45004
2004	2013	GMC	Sierra 1500 Crew Cab	5-40591	5-45591
2014	2018	GMC	Sierra 1500 Crew Cab	5-40273	5-45273
2014	2018	GMC	Sierra 1500 Double Cab	5-40173	5-45173
2014	2018	GMC	Sierra 1500 Reg Cab	5-40073	5-45073
1999	2013	GMC	Sierra 1500/2500LD Ext Cab	5-40861	5-45861
2001	2008	GMC	Sierra 1500HD Crew Cab	5-40591	5-45591
2015	2018	GMC	Sierra 2500 /3500 Double Cab	5-40173	5-45173
2015	2018	GMC	Sierra 2500/3500 Crew Cab (Excl Diesel)	5-40273	5-45273
2015	2018	GMC	Sierra 2500/3500 Reg Cab (Excl Diesel)	5-40073	5-45073
2001	2014	GMC	Sierra 2500HD/3500 Ext Cab	5-40861	5-45861
2007	2011	Honda	CR-V	5-40843	5-45843
2017	2018	Honda	Ridgeline	5-40304	5-45304
2006	2010	Hummer	H3	5-40682	5-45682
2004	2009	Hyundai	Sportage	5-40442	5-45442
2004	2009	Hyundai	Tucson	5-40442	5-45442
2018	2018		Wrangler Unlimited JL 4dr (Excl JK)	5-40704	5-45704
2007	2018	Jeep	Wrangler 2dr (Excl JL)	5-40133	5-45133
2007	2018	Jeep	Wrangler 4dr (Excl JL)	5-40923	5-45923
2005	2018	Nissan	Frontier Crew Cab	5-40572	5-45572
2004	2014	Nissan	Titan Crew Cab	5-40852	5-45852
2004	2018	Nissan	Titan King Cab	5-40552	5-45552
2016	2018	Nissan	Titan XD Crew Cab	5-40204	5-45204
2005	2014	Nissan	Xterra	5-40743	5-45743
2019	2019	Ram	Ram 1500 Crew Cab	5-40804	5-45804
2009	2018	Ram	Ram 1500 Crew Cab	5-40653	5-45653
2009	2018	Ram	Ram 1500 Quad Cab	5-40553	5-45553
2010	2018	Ram	Ram 2500/3500 Crew Cab	5-40653	5-45653
2010	2018	Ram	Ram 2500/3500 Mega Cab	5-40753	5-45753
2010	2018	Ram	Ram 2500/3500 Reg Cab	5-40453	5-45453
2007	2014	Toyota	FJ Cruiser	5-40213	5-45213
2008	2018	Toyota	Sequoia	5-40943	5-45943
2005	2018	Toyota	Tacoma Access Cab	5-40762	5-45762
2005	2018	Toyota	Tacoma Double Cab	5-40772	5-45772
2007	2018	Toyota	Tundra CrewMax	5-40523	5-45523
2007	2018	Toyota	Tundra Double Cab	5-40423	5-45423
2004	2006	Toyota	Tundra Double Cab	5-40042	5-45042
2007	2018	Toyota	Tundra Reg Cab	5-40623	5-45623

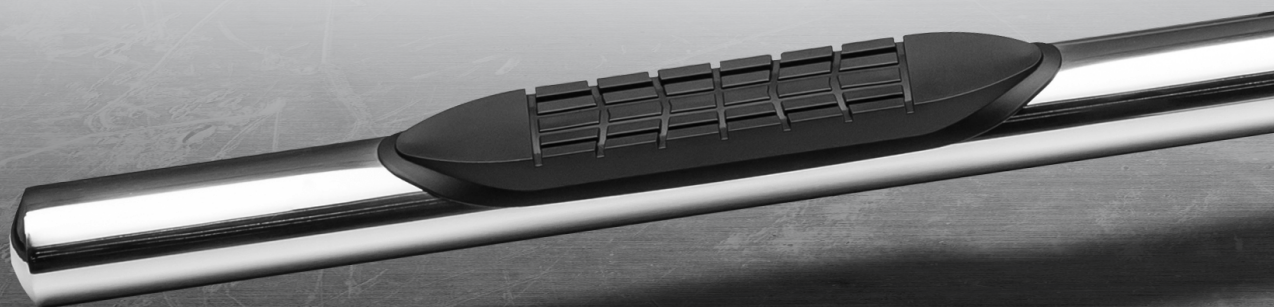

OVAL 4" STEP BAR

FEATURES AND BENEFITS

- 4 inch oval bar
- Tubes have 90 degree bends
- Wider step area
- Vehicle specific applications
- UV resistant step pad
- Available for a variety of vehicles
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish


CHEVY SILVERADO



DODGE RAM



NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

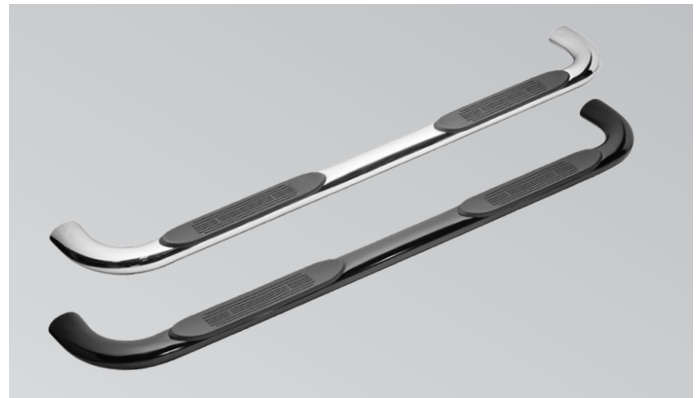

OVAL 4" STEP BAR APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2003	2013	Chevy	Avalanche 1500 w/out Cladding	5-0992	5-5992
2015	2018	Chevy	Colorado Crew Cab	5-0104	5-5104
2015	2018	Chevy	Colorado Ext Cab	5-0004	5-5004
2004	2013	Chevy	Silverado 1500 Crew Cab	5-0591	5-5591
2014	2018	Chevy	Silverado 1500 Crew Cab	5-0283	5-5283
2014	2018	Chevy	Silverado 1500 Double Cab	5-0183	5-5183
2014	2018	Chevy	Silverado 1500 Reg Cab	5-0083	5-5083
1999	2013	Chevy	Silverado 1500/2500LD Ext Cab	5-0861	5-5861
1999	2013	Chevy	Silverado 1500/2500LD Reg Cab	5-0041	5-5041
2001	2006	Chevy	Silverado 1500HD Crew Cab	5-0591	5-5591
2001	2014	Chevy	Silverado 2500/3500 Ext Cab	5-0861	5-5861
2001	2014	Chevy	Silverado 2500/3500HD Reg Cab	5-0041	5-5041
2001	2014	Chevy	Silverado 2500HD/3500 Crew Cab	5-0591	5-5591
2000	2014	Chevy	Suburban 1/2 Ton (Excl 2004-2007 Z71)	5-0992	5-5992
2000	2014	Chevy	Tahoe 4dr 1/2 Ton (Excl 04-07 Z71)	5-0003	5-5003
2009	2018	Dodge	Ram 1500 Crew Cab	5-0653	5-5653
2006	2008	Dodge	Ram 1500 Mega Cab	5-0092	5-5092
1998	2001	Dodge	Ram 1500 Quad Cab	5-0421	5-5421
2002	2008	Dodge	Ram 1500 Quad Cab	5-0132	5-5132
2009	2018	Dodge	Ram 1500 Quad Cab	5-0553	5-5553
2009	2018	Dodge	Ram 1500 Reg Cab	5-0453	5-5453
2010	2018	Dodge	Ram 2500/3500 Crew Cab	5-0653	5-5653
2002	2009	Dodge	Ram 2500/3500 Quad Cab	5-0132	5-5132
2010	2018	Dodge	Ram 2500/3500 Reg Cab	5-0453	5-5453
2009	2014	Ford	F-150 Reg Cab	5-0053	5-5053
2015	2018	Ford	F-150 Reg Cab	5-0293	5-5293
2004	2008	Ford	F-150 Reg Cab (Excl Heritage)	5-0432	5-5432
2009	2014	Ford	F-150 SuperCab	5-0153	5-5153
2015	2018	Ford	F-150 SuperCab	5-0393	5-5393
2004	2008	Ford	F-150 SuperCab (Excl Heritage)	5-0532	5-5532
2009	2014	Ford	F-150 SuperCrew	5-0253	5-5253
2015	2018	Ford	F-150 SuperCrew	5-0493	5-5493
2004	2008	Ford	F-150 SuperCrew (Excl Heritage)	5-0632	5-5632
2001	2003	Ford	F-150 Supercrew 4dr	5-0881	5-5881
1997	2004	Ford	F-150/250 Reg Cab	5-0011	5-5011
1999	2004	Ford	F-150/250LD SuperCab 4dr	5-0341	5-5341
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-0493	5-5493
2017	2018	Ford	F-250/350/450/550 Reg Cab	5-0293	5-5293
2017	2018	Ford	F-250/350/450/550 Super Cab	5-0393	5-5393
1999	2016	Ford	F-250/350/450/550HD Crew Cab	5-0331	5-5331
1999	2016	Ford	F-250/350/450/550HD Super Cab 4dr	5-0131	5-5131
2015	2018	GMC	Canyon Crew Cab	5-0104	5-5104
2015	2018	GMC	Canyon Ext Cab	5-0004	5-5004

OVAL 4" STEP BAR APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2004	2013	GMC	Sierra 1500 Crew Cab	5-0591	5-5591
2014	2018	GMC	Sierra 1500 Crew Cab	5-0283	5-5283
2014	2018	GMC	Sierra 1500 Double Cab	5-0183	5-5183
2014	2018	GMC	Sierra 1500 Reg Cab	5-0083	5-5083
1999	2013	GMC	Sierra 1500/2500LD Ext Cab	5-0861	5-5861
1999	2013	GMC	Sierra 1500/2500LD Reg Cab	5-0041	5-5041
2001	2006	GMC	Sierra 1500HD Crew Cab	5-0591	5-5591
2001	2014	GMC	Sierra 2500/3500 Ext Cab	5-0861	5-5861
2001	2014	GMC	Sierra 2500/3500HD Reg Cab	5-0041	5-5041
2001	2014	GMC	Sierra 2500HD/3500 Crew Cab	5-0591	5-5591
2000	2014	GMC	Yukon 4dr 1/2 Ton (Excl 2004-2007 Z71)	5-0003	5-5003
2000	2014	GMC	Yukon XL 1/2 Ton (Excl '04-'07 Z71)	5-0992	5-5992
2007	2018	Jeep	Wrangler 2dr (Excl. JL)	5-0133	5-5133
2007	2018	Jeep	Wrangler 4dr (Excl. JL)	5-0923	5-5923
2019	2019	Ram	Ram 1500 Crew Cab	5-0804	5-5804
2009	2018	Ram	Ram 1500 Crew Cab	5-0653	5-5653
2009	2018	Ram	Ram 1500 Quad Cab	5-0553	5-5553
2009	2018	Ram	Ram 1500 Reg Cab	5-0453	5-5453
2010	2018	Ram	Ram 2500/3500 Crew Cab	5-0653	5-5653
2010	2018	Ram	Ram 2500/3500 Reg Cab	5-0453	5-5453
2007	2018	Toyota	Tundra CrewMax	5-0523	5-5523
2007	2018	Toyota	Tundra Double Cab	5-0423	5-5423




OVAL 4" W/30° BEND

FEATURES AND BENEFITS

- 4 inch oval bar
- Tubes have 30 degree bends
- Wider step area
- Vehicle specific applications
- UV resistant step pad
- Available for a variety of vehicles
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

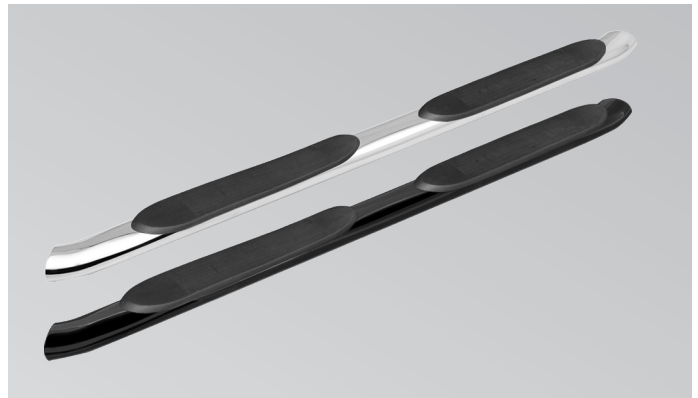

OVAL 4" WITH 30 DEGREE BEND APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2015	2018	Chevy	Colorado Crew Cab	5-430104	5-435104
2015	2018	Chevy	Colorado Ext Cab	5-430004	5-435004
2004	2013	Chevy	Silverado 1500 Crew Cab	5-430591	5-435591
2014	2018	Chevy	Silverado 1500 Crew Cab	5-430273	5-435273
2014	2018	Chevy	Silverado 1500 Double Cab	5-430173	5-435173
2007	2013	Chevy	Silverado 1500 Ext Cab (Excl Classic)	5-430861	5-435861
2001	2006	Chevy	Silverado 1500HD Crew Cab	5-430591	5-435591
2001	2014	Chevy	Silverado 2500/3500 Crew Cab	5-430591	5-435591
2015	2018	Chevy	Silverado 2500/3500 Crew Cab (Excl Diesel)	5-430273	5-435273
2015	2018	Chevy	Silverado 2500/3500 Double Cab (Excl Diesel)	5-430173	5-435173
2007	2014	Chevy	Silverado 2500/3500 Ext Cab	5-430861	5-435861
2009	2018	Dodge	Ram 1500 Crew Cab	5-430653	5-435653
2002	2008	Dodge	Ram 1500 Quad Cab	5-430132	5-435132
2009	2018	Dodge	Ram 1500 Quad Cab	5-430553	5-435553
2010	2018	Dodge	Ram 2500/3500 Crew Cab (Excl Chassis w/Def Tank)	5-430653	5-435653
2003	2009	Dodge	Ram 2500/3500 Quad Cab	5-430132	5-435132
2008	2009	Dodge	Ram 4500/5500 Quad Cab	5-430132	5-435132
2015	2018	Ford	F-150 Reg Cab	5-430293	5-435293
2015	2018	Ford	F-150 SuperCab	5-430393	5-435393
2009	2014	Ford	F-150 SuperCab	5-430153	5-435153
2015	2018	Ford	F-150 SuperCrew	5-430493	5-435493
2009	2014	Ford	F-150 SuperCrew	5-430253	5-435253
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-430493	5-435493
2017	2018	Ford	F-250/350/450/550 Reg Cab	5-430293	5-435293
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-430331	5-435331
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-430393	5-435393
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-430131	5-435131
2015	2018	GMC	Canyon Crew Cab	5-430104	5-435104
2015	2018	GMC	Canyon Ext Cab	5-430004	5-435004
2004	2013	GMC	Sierra 1500 Crew Cab	5-430591	5-435591
2014	2018	GMC	Sierra 1500 Crew Cab	5-430273	5-435273
2014	2018	GMC	Sierra 1500 Double Cab	5-430173	5-435173
2007	2013	GMC	Sierra 1500 Ext Cab (Excl Classic)	5-430861	5-435861
2001	2006	GMC	Sierra 1500HD Crew Cab	5-430591	5-435591
2001	2014	GMC	Sierra 2500/3500 Crew Cab	5-430591	5-435591
2015	2018	GMC	Sierra 2500/3500 Crew Cab (Excl Diesel)	5-430273	5-435273
2015	2018	GMC	Sierra 2500/3500 Double Cab (Excl Diesel)	5-430173	5-435173
2007	2014	GMC	Sierra 2500/3500 Ext Cab	5-430861	5-435861
2019	2019	Ram	Ram 1500 Crew Cab	5-430804	5-435804

OVAL 4" WITH 30 DEGREE BEND APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2009	2018	Ram	Ram 1500 Crew Cab	5-430653	5-435653
2009	2018	Ram	Ram 1500 Quad Cab	5-430553	5-435553
2010	2018	Ram	Ram 2500/3500 Crew Cab (Excl Chassis w/Def Tank)	5-430653	5-435653
2014	2018	Toyota	4Runner SR5 & TRD	5-430853	5-435853
2010	2017	Toyota	4Runner Trail Edition	5-430853	5-435853
2005	2018	Toyota	Tacoma Double Cab	5-430772	5-435772
2007	2018	Toyota	Tundra CrewMax	5-430523	5-435523
2007	2018	Toyota	Tundra Double Cab	5-430423	5-435423



OVAL 5" STRAIGHT

FEATURES AND BENEFITS

- 5 inch oval shaped straight bar
- Seam free ends
- Wider step area
- Vehicle specific applications
- UV resistant step pad
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

TOYOTA TACOMA



CHEVY SILVERADO



NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.



OVAL 5" STRAIGHT TUBE APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2015	2018	Chevy	Colorado Crew Cab	5-50104	5-55104
2015	2018	Chevy	Colorado Ext Cab	5-50004	5-55004
2014	2018	Chevy	Silverado 1500 Crew Cab	5-50273	5-55273
2004	2013	Chevy	Silverado 1500 Crew Cab	5-50591	5-55591
2014	2018	Chevy	Silverado 1500 Double Cab	5-50173	5-55173
2014	2018	Chevy	Silverado 1500 Reg Cab	5-50073	5-55073
1999	2013	Chevy	Silverado 1500/2500LD Ext Cab	5-50861	5-55861
1999	2013	Chevy	Silverado 1500/2500LD Reg Cab	5-50041	5-55041
2001	2006	Chevy	Silverado 1500HD Crew Cab	5-50591	5-55591
2015	2018	Chevy	Silverado 25/3500 Crew Cab (Diesel)	5-50683	5-55683
2015	2018	Chevy	Silverado 25/3500 Reg Cab (Diesel)	5-50483	5-55483
2015	2018	Chevy	Silverado 25/3500 Reg Cab (Diesel)	5-50483	5-55483
2015	2018	Chevy	Silverado 2500/3500 Crew Cab	5-50273	5-55273
2001	2014	Chevy	Silverado 2500/3500 Crew Cab	5-50591	5-55591
2015	2018	Chevy	Silverado 2500/3500 Double Cab	5-50173	5-55173
2015	2018	Chevy	Silverado 2500/3500 Reg Cab	5-50073	5-55073
2001	2014	Chevy	Silverado 2500HD/3500 Ext Cab	5-50861	5-55861
2001	2014	Chevy	Silverado 2500HD/3500 Reg Cab	5-50041	5-55041
2009	2018	Dodge	Ram 1500 Crew Cab	5-50653	5-55653
2002	2009	Dodge	Ram 1500 Quad Cab	5-50132	5-55132
2009	2018	Dodge	Ram 1500 Quad Cab	5-50553	5-55553
2009	2018	Dodge	Ram 1500 Reg Cab	5-50453	5-55453
2010	2018	Dodge	Ram 2500/3500 Crew Cab	5-50653	5-55653
2010	2018	Dodge	Ram 2500/3500 Mega Cab	5-50753	5-55753
2002	2008	Dodge	Ram 2500/3500 Quad Cab	5-50132	5-55132
2010	2018	Dodge	Ram 2500/3500 Reg Cab	5-50453	5-55453
2015	2018	Ford	F-150 Reg Cab	5-50293	5-55293
2009	2014	Ford	F-150 Reg Cab	5-50053	5-55053
2009	2014	Ford	F-150 SuperCab	5-50153	5-55153
2015	2018	Ford	F-150 SuperCab	5-50393	5-55393
2009	2014	Ford	F-150 SuperCrew	5-50253	5-55253
2015	2018	Ford	F-150 SuperCrew	5-50493	5-55493
2004	2008	Ford	F-150 SuperCrew Cab (Excl Heritage)	5-50632	5-55632
2017	2018	Ford	F-250/350/450/550 Reg Cab	5-50293	5-55293
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-50493	5-55493
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-50331	5-55331
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-50393	5-55393
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-50131	5-55131
2015	2018	GMC	Canyon Crew Cab	5-50104	5-55104
2015	2018	GMC	Canyon Ext Cab	5-50004	5-55004
2014	2018	GMC	Sierra 1500 Crew Cab	5-50273	5-55273
2004	2013	GMC	Sierra 1500 Crew Cab	5-50591	5-55591
2014	2018	GMC	Sierra 1500 Double Cab	5-50173	5-55173

OVAL 5" STRAIGHT TUBE APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
2014	2018	GMC	Sierra 1500 Reg Cab	5-50073	5-55073
1999	2013	GMC	Sierra 1500/2500LD Ext Cab	5-50861	5-55861
1999	2013	GMC	Sierra 1500/2500LD Reg Cab	5-50041	5-55041
2001	2006	GMC	Sierra 1500HD Crew Cab	5-50591	5-55591
2015	2018	GMC	Sierra 25/3500 Crew Cab (Diesel)	5-50683	5-55683
2015	2018	GMC	Sierra 25/3500 Reg Cab (Diesel)	5-50483	5-55483
2015	2018	GMC	Sierra 25/3500 Reg Cab (Diesel)	5-50483	5-55483
2015	2018	GMC	Sierra 2500/3500 Crew Cab	5-50273	5-55273
2001	2014	GMC	Sierra 2500/3500 Crew Cab	5-50591	5-55591
2015	2018	GMC	Sierra 2500/3500 Double Cab	5-50173	5-55173
2015	2018	GMC	Sierra 2500/3500 Reg Cab	5-50073	5-55073
2001	2014	GMC	Sierra 2500HD/3500 Ext Cab	5-50861	5-55861
2001	2014	GMC	Sierra 2500HD/3500 Reg Cab	5-50041	5-55041
2004	2018	Nissan	Titan Crew Cab	5-50852	5-55852
2004	2018	Nissan	Titan King Cab	5-50552	5-55552
2016	2018	Nissan	Titan XD Crew Cab	5-50204	5-55204
2019	2019	Ram	Ram 1500 Crew Cab	5-50804	5-55804
2009	2018	Ram	Ram 1500 Crew Cab	5-50653	5-55653
2009	2018	Ram	Ram 1500 Quad Cab	5-50553	5-55553
2009	2018	Ram	Ram 1500 Reg Cab	5-50453	5-55453
2010	2018	Ram	Ram 2500/3500 Crew Cab	5-50653	5-55653
2010	2018	Ram	Ram 2500/3500 Mega Cab	5-50753	5-55753
2010	2018	Ram	Ram 2500/3500 Reg Cab	5-50453	5-55453
2005	2018	Toyota	Tacoma Double Cab	5-50772	5-55772
2007	2018	Toyota	Tundra CrewMax	5-50523	5-55523
2007	2018	Toyota	Tundra Double Cab	5-50423	5-55423



OVAL 5" W/ 30° BEND

FEATURES AND BENEFITS

- 5 inch oval bar
- OE style 30 degree bent
- Seam free ends
- Wider step area
- Vehicle specific applications
- UV resistant step pad
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish



DODGE RAM 1500



NISSAN TITAN



NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

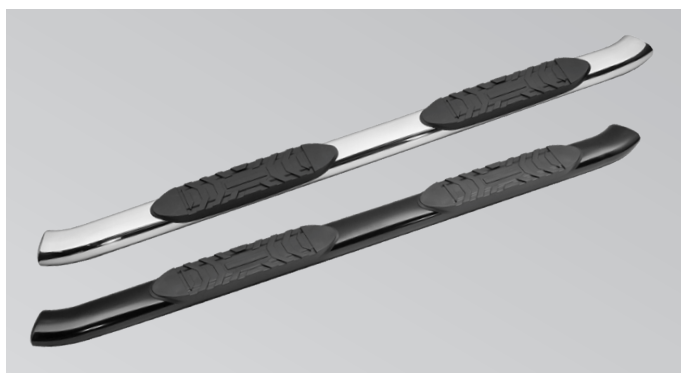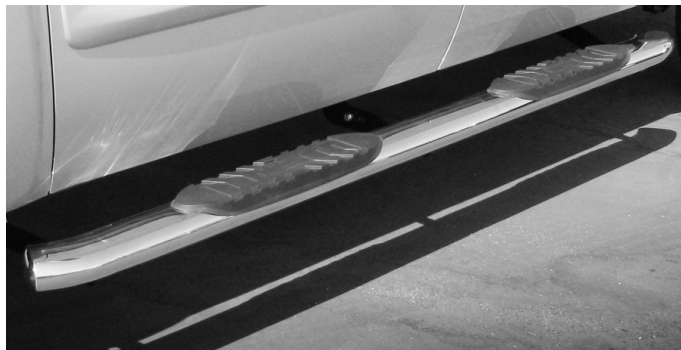

OVAL 5" WITH 30 DEGREE BEND APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2015	2018	Chevy	Colorado Crew Cab	5-530104	5-535104
2015	2018	Chevy	Colorado Ext Cab	5-530004	5-535004
2004	2013	Chevy	Silverado 1500 Crew Cab	5-530591	5-535591
2014	2018	Chevy	Silverado 1500 Crew Cab	5-530273	5-535273
2014	2018	Chevy	Silverado 1500 Double Cab	5-530173	5-535173
1999	2013	Chevy	Silverado 1500 Ext Cab	5-530861	5-535861
2001	2006	Chevy	Silverado 1500HD Crew Cab	5-530591	5-535591
2001	2014	Chevy	Silverado 2500/3500 Crew Cab	5-530591	5-535591
2015	2018	Chevy	Silverado 2500/3500 Crew Cab (Excl Diesel)	5-530273	5-535273
2015	2018	Chevy	Silverado 2500/3500 Double Cab (Excl Diesel)	5-530173	5-535173
2001	2014	Chevy	Silverado 2500/3500 Ext Cab	5-530861	5-535861
1999	2004	Chevy	Silverado 2500LD Ext Cab	5-530861	5-535861
2009	2018	Dodge	Ram 1500 Crew Cab	5-530653	5-535653
2002	2008	Dodge	Ram 1500 Quad Cab	5-530132	5-535132
2009	2018	Dodge	Ram 1500 Quad Cab	5-530553	5-535553
2003	2009	Dodge	Ram 2500/3500 Quad Cab	5-530132	5-535132
2008	2009	Dodge	Ram 4500/5500 Quad Cab	5-530132	5-535132
2010	2018	Dodge	Ram25/3500 Crew Cab (Excl Cab Chassis w/Def Tank)	5-530653	5-535653
2015	2018	Ford	F-150 SuperCab	5-530393	5-535393
2009	2014	Ford	F-150 SuperCab	5-530153	5-535153
2015	2018	Ford	F-150 SuperCrew	5-530493	5-535493
2009	2014	Ford	F-150 SuperCrew	5-530253	5-535253
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-530493	5-535493
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-530331	5-535331
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-530393	5-535393
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-530131	5-535131
2015	2018	GMC	Canyon Crew Cab	5-530104	5-535104
2015	2018	GMC	Canyon Ext Cab	5-530004	5-535004
2004	2013	GMC	Sierra 1500 Crew Cab	5-530591	5-535591
2014	2018	GMC	Sierra 1500 Crew Cab	5-530273	5-535273
2014	2018	GMC	Sierra 1500 Double Cab	5-530173	5-535173
1999	2013	GMC	Sierra 1500 Ext Cab	5-530861	5-535861
2001	2006	GMC	Sierra 1500HD Crew Cab	5-530591	5-535591
2001	2014	GMC	Sierra 2500/3500 Crew Cab	5-530591	5-535591
2015	2018	GMC	Sierra 2500/3500 Crew Cab (Excl Diesel)	5-530273	5-535273
2015	2018	GMC	Sierra 2500/3500 Double Cab (Excl Diesel)	5-530173	5-535173
2001	2014	GMC	Sierra 2500/3500 Ext Cab	5-530861	5-535861
1999	2004	GMC	Sierra 2500LD Ext Cab	5-530861	5-535861
2019	2019	Ram	Ram 1500 Crew Cab	5-530804	5-535804
2009	2018	Ram	Ram 1500 Crew Cab	5-530653	5-535653
2009	2018	Ram	Ram 1500 Quad Cab	5-530553	5-535553
2010	2018	Ram	Ram25/3500 Crew Cab (Excl Cab Chassis w/Def Tank)	5-530653	5-535653
2005	2018	Toyota	Tacoma Double Cab	5-530772	5-535772
2007	2018	Toyota	Tundra CrewMax	5-530523	5-535523
2007	2018	Toyota	Tundra Double Cab	5-530423	5-535423

OVAL 5" W2W STEP BAR

FEATURES AND BENEFITS

- 5 inch diameter oval shaped straight bar
- OE style 30 degree bent
- Wide step area
- Additional 3rd step area beyond cab
- Vehicle specific applications
- UV resistant step pad
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish


DODGE RAM 1500



FORD SUPER DUTY



NOTE: Because every vehicle is different, your exact TUFF-BAR Step may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

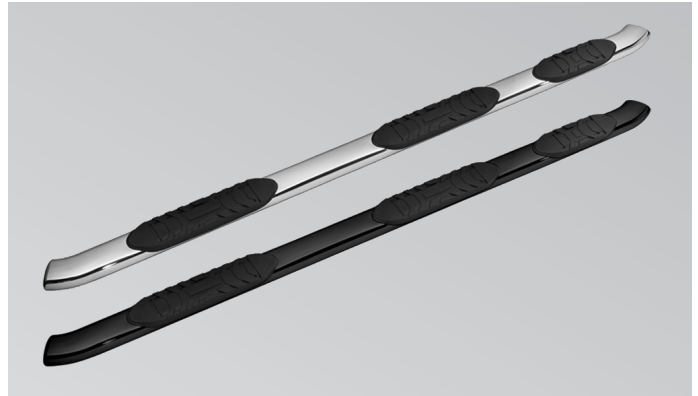

OVAL 5" W2W STEP BAR APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2007	2018	Chevy	Silverado 1500 Crew Cab (5.5 ft Bed)(excl 2011-2017 diesel)(Excl Classic models)	1-05146	1-55146
1999	2013	Chevy	Silverado 1500 Ext Cab 6.5 ft Standard Bed	1-03046	1-53046
2007	2018	Chevy	Silverado 1500/2500/3500 Crew Cab (6.5 ft Bed)(Excl Classic models)	1-02046	1-52046
2001	2014	Chevy	Silverado 2500/3500 Crew Cab (6.5 ft Bed)	1-00246	1-50246
1999	2014	Chevy	Silverado 2500/3500 Ext Cab (6.5 ft Bed)	1-03046	1-53046
2009	2018	Dodge	Ram 1500 Crew Cab (5.7 ft Bed)	1-01346	1-51346
2002	2008	Dodge	Ram 1500 Quad Cab (6.4 ft Bed)	1-08046	1-58046
2010	2018	Dodge	Ram 2500/3500 Crew Cab (6.4 ft Bed)	1-02346	1-52346
2010	2018	Dodge	Ram 2500/3500 Mega Cab (6.4 ft Bed)	1-07536	1-57536
2002	2009	Dodge	Ram 2500/3500/4500/5500 Quad Cab (6.4 ft Bed)	1-08046	1-58046
2009	2014	Ford	F-150 Super Cab (6.5 ft Bed)	1-01536	1-51536
2015	2018	Ford	F-150 SuperCab (6.5 ft Bed)	1-01646	1-51646
2015	2018	Ford	F-150 SuperCrew (5.5 ft Bed)	1-02646	1-52646
2015	2018	Ford	F-150 SuperCrew (6.5 ft Bed)	1-03646	1-53646
2009	2014	Ford	F-150 SuperCrew Cab 2009-2013 (5.5 ft Bed)	1-00346	1-50346
1999	2016	Ford	F-250/350 SuperCab (6.5 ft Bed)	1-05246	1-55246
2017	2018	Ford	F-250/350/450/550 Crew Cab (6.5 ft Bed)	1-03646	1-53646
2017	2018	Ford	F-250/350/450/550 SuperCab (6.5 ft Bed)	1-01646	1-51646
1999	2016	Ford	F-250/350/450/550 Crew Cab (6.75 ft Bed)	1-01046	1-51046
2007	2018	GMC	Sierra 1500 Crew Cab (5.5 ft bed) (Excl 2011-2017 diesel)(Excl Classic models)	1-05146	1-55146
1999	2013	GMC	Sierra 1500 Ext Cab 6.5 ft Standard Bed	1-03046	1-53046
2007	2018	GMC	Sierra 1500/2500/3500 Crew Cab (6.5 ft Bed)(Excl Classic models)	1-02046	1-52046
2001	2014	GMC	Sierra 2500/3500 Crew Cab (6.5 ft Bed)	1-00246	1-50246
1999	2014	GMC	Sierra 2500/3500 Ext Cab (6.5 ft Bed)	1-03046	1-53046
2009	2018	Ram	Ram 1500 Crew Cab (5.5 ft bed)	1-01346	1-51346
2002	2008	Ram	Ram 1500 Quad Cab (6.5 ft Bed)	1-08046	1-58046
2010	2018	Ram	Ram 2500/3500 Crew Cab (6.5 ft Bed)	1-02346	1-52346
2010	2018	Ram	Ram 2500/3500 Mega Cab (6.5 ft Bed)	1-07536	1-57536
2007	2018	Toyota	Tundra Double Cab (6.5 ft Bed)	1-07146	1-57146



OVAL 6" STRAIGHT


FEATURES AND BENEFITS

- 6 inch oval shaped straight bar
- Seam free ends
- Extra wide step area
- Vehicle specific applications
- UV resistant step pad
- Easy, bolt-on installation for most applications
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish


DODGE RAM 2500



FORD F-150

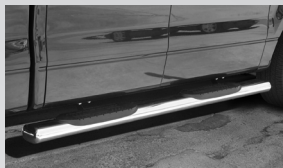

NOTE: Because every vehicle is different, your exact TUFF-BAR step bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

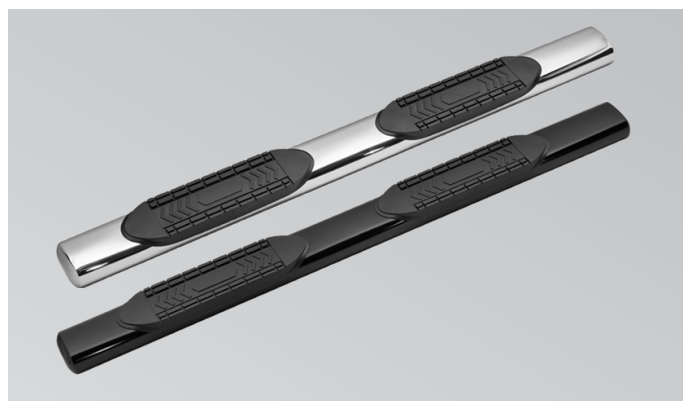

OVAL 6" STRAIGHT TUBE APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK
2015	2018	Chevy	25/3500 Double Cab (Excl Diesel)	5-60173	5-65173
2015	2018	Chevy	Colorado Crew Cab	5-60104	5-65104
2015	2018	Chevy	Colorado Ext Cab	5-60004	5-65004
1999	2013	Chevy	Silverado 1500 Crew Cab	5-60591	5-65591
2014	2018	Chevy	Silverado 1500 Crew Cab	5-60273	5-65273
2014	2018	Chevy	Silverado 1500 Double Cab	5-60173	5-65173
2014	2018	Chevy	Silverado 1500 Double Cab	5-60583	5-65583
1999	2013	Chevy	Silverado 1500 Ext Cab	5-60861	5-65861
1999	2013	Chevy	Silverado 1500 Reg Cab	5-60041	5-65041
2001	2006	Chevy	Silverado 1500HD Crew Cab	5-60591	5-65591
2015	2018	Chevy	Silverado 25/3500 Crew Cab (Rocker Mount)	5-60683	5-65683
2015	2015	Chevy	Silverado 25/3500 Reg Cab (Diesel)	5-60483	5-65483
2001	2014	Chevy	Silverado 2500/3500 Crew Cab	5-60591	5-65591
2015	2018	Chevy	Silverado 2500/3500 Crew Cab (Excl Diesel)	5-60273	5-65273
2015	2018	Chevy	Silverado 2500/3500 Double Cab	5-60583	5-65583
2001	2014	Chevy	Silverado 2500/3500 Ext Cab	5-60861	5-65861
2001	2014	Chevy	Silverado 2500/3500 Reg Cab	5-60041	5-65041
1999	2004	Chevy	Silverado 2500LD Ext Cab	5-60861	5-65861
1999	2004	Chevy	Silverado 2500LD Reg Cab	5-60041	5-65041
2014	2018	Chevy	Silverado Sierra 1500 Double Cab	5-60173	5-65173
2002	2008	Dodge	Ram 1500 Quad Cab	5-60132	5-65132
2009	2018	Dodge	Ram 1500 Quad Cab	5-60553	5-65553
2010	2018	Dodge	Ram 1500/2500/3500 Crew Cab (Excl Cab Chassis w/Def Tanks)	5-60653	5-65653
2010	2018	Dodge	Ram 25/3500 Mega Cab	5-60753	5-65753
2003	2009	Dodge	Ram 2500/3500 Quad Cab	5-60132	5-65132
2008	2009	Dodge	Ram 4500/5500 Quad Cab	5-60132	5-65132
2015	2018	Ford	F-150 Reg Cab	5-60293	5-65293
2009	2014	Ford	F-150 SuperCab	5-60153	5-65153
2015	2018	Ford	F-150 SuperCab	5-60393	5-65393
2004	2008	Ford	F-150 SuperCrew (Excl Heritage)	5-60632	5-65632
2009	2014	Ford	F-150 SuperCrew	5-60253	5-65253
2015	2018	Ford	F-150 SuperCrew	5-60493	5-65493
2017	2018	Ford	F-250/350/450/550 Reg Cab	5-60293	5-65293
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-60493	5-65493
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-60331	5-65331
2017	2018	Ford	F-250/350/450/550 Crew Cab	5-60393	5-65393
1999	2016	Ford	F-250/350/450/550 Crew Cab	5-60131	5-65131
2015	2018	GMC	25/3500 Double Cab (Excl Diesel)	5-60173	5-65173
2015	2018	GMC	Canyon Crew Cab	5-60104	5-65104
2015	2018	GMC	Canyon Ext Cab	5-60004	5-65004
1999	2013	GMC	Sierra 1500 Crew Cab	5-60591	5-65591
2014	2018	GMC	Sierra 1500 Crew Cab	5-60273	5-65273
2014	2018	GMC	Sierra 1500 Double Cab	5-60173	5-65173
2014	2018	GMC	Sierra 1500 Double Cab	5-60583	5-65583

OVAL 6" STRAIGHT TUBE APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK
1999	2013	GMC	Sierra 1500 Ext Cab	5-60861	5-65861
1999	2013	GMC	Sierra 1500 Reg Cab	5-60041	5-65041
2001	2006	GMC	Sierra 1500HD Crew Cab	5-60591	5-65591
2015	2018	GMC	Sierra 25/3500 Crew Cab (Rocker Mount)	5-60683	5-65683
2015	2015	GMC	Sierra 25/3500 Reg Cab	5-60483	5-65483
2001	2014	GMC	Sierra 2500/3500 Crew Cab	5-60591	5-65591
2015	2018	GMC	Sierra 2500/3500 Crew Cab (Excl Diesel)	5-60273	5-65273
2015	2018	GMC	Sierra 2500/3500 Double Cab	5-60583	5-65583
2001	2014	GMC	Sierra 2500/3500 Ext Cab	5-60861	5-65861
2001	2014	GMC	Sierra 2500/3500 Reg Cab	5-60041	5-65041
1999	2004	GMC	Sierra 2500LD Ext Cab	5-60861	5-65861
1999	2004	GMC	Sierra 2500LD Reg Cab	5-60041	5-65041
2014	2018	GMC	Silverado Sierra 1500 Double Cab	5-60173	5-65173
2004	2018	Nissan	Armada	5-60852	5-65852
2004	2018	Nissan	Titan Crew Cab	5-60852	5-65852
2004	2018	Nissan	Titan King Cab	5-60552	5-65552
2019	2019	Ram	Ram 1500 Crew Cab	5-60804	5-65804
2009	2018	Ram	Ram 1500 Quad Cab	5-60553	5-65553
2010	2018	Ram	Ram 1500/2500/3500 Crew Cab (Excl Cab Chassis w/Def Tanks)	5-60653	5-65653
2010	2018	Ram	Ram 2500/3500 Mega Cab	5-60753	5-65753
2005	2018	Toyota	Tacoma Double Cab	5-60772	5-65772
2007	2018	Toyota	Tundra CrewMax	5-60523	5-65523
2007	2018	Toyota	Tundra Double Cab	5-60423	5-65423



BULL BARS

FEATURES AND BENEFITS

- Application specific
- Includes a skid plate for additional protection
- Stainless steel finish Bull Bar comes with brush skid plate
- Black finish Bull Bar comes with a black or brush skid plate
- Pre-drilled for light mounting
- Easy, bolt-on installation - no drilling required
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

DODGE RAM



FORD SUPERDUTY



NOTE: Because every vehicle is different, your exact TUFF-BAR bull bar may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.



BULL BAR APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK	W/BLK SKID
1992	1994	Chevy	Suburban ¹	2-0800	2-5800	2-55800
2002	2006	Chevy	Avalanche 2500 ¹	2-0421	2-5421	2-55421
2007	2014	Chevy	Suburban 2500 ¹	2-0512	2-5512	2-55512
2007	2013	Chevy	Avalanche 2500 ¹	2-0512	2-5512	2-55512
2002	2009	Chevy	Trailblazer ¹	2-0901	2-5901	--
2007	2014	Chevy	Tahoe 1500	2-0722	2-5163	2-55722
2007	2014	Chevy	Suburban 1500	2-0722	2-5163	2-55722
1988	1998	Chevy	C/K 1500 ¹	2-0800	2-5800	2-55800
1988	2000	Chevy	C/K 2500/3500 ¹	2-0800	2-5800	2-55800
1995	1999	Chevy	Tahoe/Yukon ¹	2-0800	2-5800	2-55800
2004	2012	Chevy	Colorado/Canyon ¹	2-0151	2-5151	2-55151
2015	2018	Chevy	Colorado/Canyon ¹	2-0463	2-5463	2-55463
2001	2007	Chevy	Silverado 1500HD/2500HD/3500 "Classic" ¹	2-0421	2-5421	2-55421
2000	2006	Chevy	Suburban/Tahoe 2500 ¹	2-0421	2-5421	2-55421
1999	2007	Chevy	Silverado 1500 "Classic" ¹	2-0711	2-5711	2-55711
2000	2006	Chevy	Suburban/Tahoe 1500 ¹	2-0711	2-5711	2-55711
2002	2006	Chevy	Avalanche 1500 ¹	2-0711	2-5711	2-55711
2007	2010	Chevy	Silverado 2500/3500 (Excl Classic) ¹	2-0132	2-5163	2-55132
2007	2018	Chevy	Silverado 1500 (Excl Classic) (Excl Denali 14-15) ¹	2-0722	2-5163	2-55722
2011	2018	Chevy	Silverado 2500/3500 ¹	2-0363	2-5363	2-55363
2007	2014	Chevy	Avalanche 1500	2-0722	2-5163	2-55722
2007	2014	Chevy	Yukon/Yukon XL ¹	2-0722	2-5163	2-55722
2005	2011	Dodge	Dakota ¹	2-0661	2-5661	2-55661
2004	2010	Dodge	Durango ¹	2-0451	2-5451	2-55451
2002	2009	Dodge	Ram 1500 (Excl Daytona) ¹	2-0021	2-5021	2-55021
2002	2009	Dodge	Ram 2500/3500 ¹	2-0021	2-5021	2-55021
1994	2001	Dodge	Ram 1500 1994 2001 (Excl 1999 2001 Sport) ¹	2-0060	2-5060	2-55060
1994	2002	Dodge	Ram 2500/3500 (Excl 1999 2002 Sport) ¹	2-0060	2-5060	2-55060
2006	2008	Dodge	Ram 1500 (Excl Mega Cab) ¹	2-0591	2-5591	2-55591
2009	2018	Dodge	Ram 1500 ¹	2-0691	2-5691	2-55691
2010	2018	Dodge	Ram 2500/3500 ¹	2-0553	2-5553	2-55553
1997	2002	Ford	Expedition ¹	2-0420	2-5420	2-55420
1997	2004	Ford	F-150/250 4WD (Heritage Only) ¹	2-0420	2-5420	2-55420
1999	2004	Ford	F-150/250 2WD (Heritage Only) ¹	2-0420	2-5420	2-55420
2001	2003	Ford	F-150 SuperCrew ¹	2-0420	2-5420	2-55420
2009	2018	Ford	F-150 (Excl 2010-2014 Raptor) ¹	2-0042	2-5042	2-55042
2003	2014	Ford	Expedition ¹	2-0042	2-5042	2-55042
2017	2018	Ford	F-250/350	2-0093	2-5093	2-55093
2011	2014	Ford	F-250/350/450 ¹	2-0732	2-5732	2-55732
1999	2004	Ford	F-250/350/450/550 ¹	2-0220	2-5220	2-55220
2000	2005	Ford	Excursion ¹	2-0220	2-5220	2-55220
2005	2007	Ford	F-250/350/450/550 ¹	2-0461	2-5461	2-55461
2008	2010	Ford	F-250/350/450/550 ¹	2-0632	2-5632	2-55632
1988	1998	GMC	C/K 1500 ¹	2-0800	2-5800	2-55800

BULL BAR APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK	W/BLK SKID
1988	2000	GMC	C/K 2500/3500 ¹	2-0800	2-5800	2-55800
1995	1999	GMC	Tahoe/Yukon ¹	2-0800	2-5800	2-55800
2004	2012	GMC	Canyon ¹	2-0151	2-5151	2-55151
2015	2018	GMC	Canyon ¹	2-0463	2-5463	2-55463
2001	2007	GMC	Sierra 1500HD/2500HD/3500 "Classic" ¹	2-0421	2-5421	2-55421
2000	2006	GMC	Suburban/Tahoe 2500 ¹	2-0421	2-5421	2-55421
1999	2007	GMC	Sierra 1500 "Classic" ¹	2-0711	2-5711	2-55711
2000	2006	GMC	Suburban/Tahoe 1500 1	2-0711	2-5711	2-55711
2002	2006	GMC	Avalanche 1500 ¹	2-0711	2-5711	2-55711
2007	2010	GMC	Sierra 2500/3500 (Excl Classic) ¹	2-0132	2-5163	2-55132
2007	2018	GMC	Sierra 1500 (Excl Classic) (Excl Denali 14-15) ¹	2-0722	2-5163	2-55722
2011	2018	GMC	Sierra 2500/3500 ¹	2-0363	2-5363	2-55363
2000	2006	GMC	Yukon/Yukon XL ¹	2-0421	2-5421	2-55421
2000	2006	GMC	Yukon/Yukon XL 1	2-0711	2-5711	2-55711
2007	2014	GMC	Yukon/Yukon XL 2500 ¹	2-0512	2-5512	2-55512
2017	2018	Honda	Ridgeline			2-55983
2006	2014	Honda	Ridgeline ¹	2-0391	2-5391	2-55391
2003	2008	Honda	Pilot ¹	2-0391	2-5391	2-55391
2006	2011	Jeep	Commander ¹	2-0991	2-5991	2-55991
2016	2018	Nissan	Titan XD ¹	2-0563	2-5563	2-55563
2017	2018	Nissan	Titan ¹	2-0563	2-5563	2-55563
2005	2018	Nissan	Frontier ¹	2-0961	2-5961	2-55961
2005	2007	Nissan	Pathfinder ¹	2-0961	2-5961	2-55961
2005	2012	Nissan	Xterra ¹	2-0961	2-5961	2-55961
2004	2016	Nissan	Titan King Cab/Crew Cab (Excl Titan XD) ¹	2-0841	2-5841	2-55841
2004	2015	Nissan	Armada 2/4WD ¹	2-0841	2-5841	2-55841
2009	2018	Ram	Ram 1500 ¹	2-0691	2-5691	2-55691
2010	2018	Ram	Ram 2500/3500 ¹	2-0553	2-5553	2-55553
2010	2018	Toyota	4Runner SR5 (Excl Trail Edition) ¹	2-0063	2-5063	2-55063
2007	2014	Toyota	FJ Cruiser ¹	2-0122	2-5122	2-55122
2001	2007	Toyota	Sequoia ¹	2-0631	2-5631	2-55631
1999	2006	Toyota	Tundra ¹	2-0631	2-5631	2-55631
2016	2018	Toyota	Tacoma ¹	2-0883	2-5883	2-55883
2005	2015	Toyota	Tacoma ¹	2-0061	2-5061	2-55061
2007	2018	Toyota	Tundra ¹	2-0522	2-5522	2-55522
2008	2018	Toyota	Sequoia ¹	2-0522	2-5522	2-55522

FOOTNOTE: 1. May interfere with front sensor



GRILLE GUARDS

FEATURES AND BENEFITS

- Full front-end coverage
- Made of 1 1/2 inch diameter steel tube
- Rubber padded uprights
- Pre-drilled for light mounting
- Headlight guards are removable
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on black powder coat
- Lifetime warranty on stainless steel finish


CHEVY SILVERADO



DODGE RAM



NOTE: Because every vehicle is different, your exact TUFF-BAR grille guard may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.

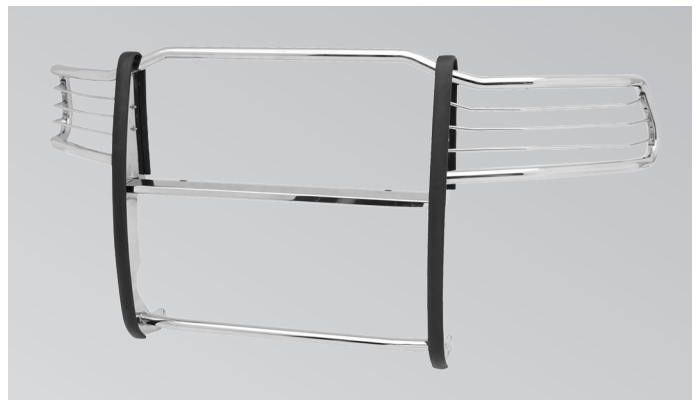

GRILLE GUARD APPLICATIONS

START	END	MAKE	MODEL	STAINLESS	BLACK	HOOP BAR
2007	2014	Cadillac	Escalade ESV ¹	4-0312	3-5312	Single
2007	2013	Cadillac	Escalade EXT ¹	4-0312	3-5312	Single
2002	2006	Chevy	Avalanche 1500 (w/cladding) ¹	4-1711	3-5641	Double
2003	2006	Chevy	Avalanche 1500 w/out Cladding ¹	4-0711	3-5711	Single
1988	1998	Chevy	C/K Series 1500 ¹	4-0800	3-5800	Double
2004	2012	Chevy	Colorado (Excl 09 11 Off Road Suspension/Z71) ¹	4-0151	3-5151	Single
2015	2018	Chevy	Colorado 2/4 WD ¹	4-0483	3-5483	Single
2003	2007	Chevy	Silverado "Classic" 1500 ¹	4-0711	3-5711	Single
2003	2007	Chevy	Silverado "Classic" 1500HD/2500LD ¹	4-0191	3-5191	Single
2003	2007	Chevy	Silverado "Classic" 2500/3500 ¹	4-0421	3-5421	Single
2014	2018	Chevy	Silverado 1500 (Excl Classic) ¹	4-0863	3-5863	Single
2007	2013	Chevy	Silverado 1500 (excl Classic) ¹	4-0722	3-5722	Single
1999	2002	Chevy	Silverado 1500 ¹	4-0810	3-5810	Double
2003	2007	Chevy	Silverado 1500HD/2500 Classic ¹	4-0191	3-5191	Single
2015	2018	Chevy	Silverado 2500/3500 ¹	4-0873	3-5873	Single
2007	2010	Chevy	Silverado 2500/3500 ¹	4-0132	3-5132	Single
2001	2002	Chevy	Silverado 2500/3500HD ¹	4-0580	3-5580	Double
2011	2014	Chevy	Silverado 2500HD/3500 ¹	4-0163	3-5163	Single
2007	2014	Chevy	Suburban 1500 ¹	4-0112	3-5112	Single
2007	2014	Chevy	Suburban 2500 ¹	4-0512	3-5512	Single
2000	2006	Chevy	Suburban/Tahoe ¹	4-0810	3-5810	Double
2007	2014	Chevy	Tahoe (Excl Hybrid) ¹	4-0112	3-5112	Single
2015	2018	Chevy	Tahoe/Suburban ¹	4-0083	3-5083	Single
2002	2009	Chevy	Trailblazer/Trailblazer EXT ¹	4-0490	3-5490	Single
1997	2004	Dodge	Dakota ¹	4-1410	3-6410	Double
2005	2012	Dodge	Dakota ¹	4-0661	3-5661	Double
1997	2004	Dodge	Dakota ¹	4-0410	3-5410	Double
2004	2006	Dodge	Durango ¹	4-0451	3-5451	Single
1998	2003	Dodge	Durango/Sport ¹	4-0410	3-5410	Double
1994	2001	Dodge	Ram 1500 (Excl Sport) ¹	4-0060	3-5060	Single
2002	2005	Dodge	Ram 1500 ¹	4-0021	3-5021	Single
2009	2018	Dodge	Ram 1500 ¹	4-0453	3-5453	Single
2006	2008	Dodge	Ram 1500 2/4WD ¹	4-0591	3-5591	Single
1994	2002	Dodge	Ram 2500/3500 (Excl Sport) ¹	4-0060	3-5060	Single
2003	2005	Dodge	Ram 2500/3500 ¹	4-0031	3-5031	Single
2010	2018	Dodge	Ram 2500/3500 ¹	4-0553	3-5553	Single
2006	2009	Dodge	Ram 2500/3500/4500/5500 ¹	4-0791	3-5791	Single
2001	2005	Ford	Edge ¹	4-0880	3-5880	Double
2005	2005	Ford	Excursion ¹	4-0461	3-5461	Double
2007	2014	Ford	Expedition ¹	4-0042	—	Single
2003	2006	Ford	Expedition 2/4WD ¹	4-0211	3-5211	Single
1999	2002	Ford	Expedition 2WD ¹	4-0840	3-5840	Single
1997	2002	Ford	Expedition 4WD ¹	4-0420	3-5420	Double
2006	2010	Ford	Explorer ¹	4-0302	3-5302	Double

GRILLE GUARD APPLICATIONS (CONTINUED)

START	END	MAKE	MODEL	STAINLESS	BLACK	HOOP BAR
2011	2015	Ford	Explorer ¹	4-0263	3-5263	Single
2002	2005	Ford	Explorer 4dr ¹	4-0790	3-5790	Double
2001	2004	Ford	Explorer Sport ¹	4-0080	3-5080	Double
1997	2003	Ford	F-150/250LD 4WD Only ¹	4-0420	3-5420	Double
2009	2014	Ford	F-150 (Excl 2010-2014 Raptor) ¹	4-0052	3-5052	Single
2015	2018	Ford	F-150 ¹	4-0383	3-5383	Single
1997	1998	Ford	F-150 ¹	4-1420	3-6420	Single
2004	2008	Ford	F-150 2/4WD (Excl Heritage) ¹	4-0102	3-5102	Single
1999	2004	Ford	F-150 Flareside 2WD (Heritage Only) ¹	4-0840	3-5840	Single
2001	2003	Ford	F-150 SuperCrew 4WD Only ¹	4-0420	3-5420	Double
2005	2007	Ford	F-250/350 ¹	4-0461	3-5461	Double
2008	2010	Ford	F-250/350 ¹	4-0632	3-5632	Single
2011	2016	Ford	F-250/350 Super Duty ¹	4-0732	3-5732	Single
2017	2018	Ford	F-250/350/450/550 ¹	4-0093	3-5093	Double
1999	2004	Ford	F-250/350/450/550 ¹	4-0220	3-5220	Double
2001	2005	Ford	Ranger XLT ¹	4-0880	3-5880	Double
2001	2005	Ford	Sport Trac 2dr ¹	4-0080	3-5080	Double
1999	2002	GMC	Jimmy Fullsize ¹	4-0330	3-5330	Double
2003	2007	GMC	Sierra 1500 "Classic" ¹	4-0221	3-5221	Single
2014	2018	GMC	Sierra 1500 ¹	4-0963	3-5963	Single
1999	2002	GMC	Sierra 1500 ¹	4-0330	3-5330	Double
2007	2013	GMC	Sierra 1500 ¹	4-0922	3-5922	Single
2015	2018	GMC	Sierra 2500/3500 ¹	4-0973	3-5973	Single
2011	2014	GMC	Sierra 2500/3500 1	4-0663	3-5973	Single
2007	2010	GMC	Sierra 2500/3500HD (Exc Classic) ¹	4-0332	3-5332	Single
2003	2007	GMC	Sierra 2500HD/3500 Classic model ¹	4-0621	3-5621	Single
2000	2006	GMC	Yukon/Yukon XL 1/2 Ton (Excl Denali) ¹	4-0330	3-5330	Double
2009	2010	Honda	Pilot ¹	4-0691	—	Single
2017	2018	Honda	Ridgeline	4-0983	3-5983	
2005	2008	Jeep	Grand Cherokee ¹	4-0991	3-5991	Single
1999	2004	Jeep	Grand Cherokee Laredo ¹	4-0210	3-5210	Double
1999	2003	Jeep	Grand Cherokee Limited ¹	4-0210	3-5210	Double
2004	2015	Nissan	Armada 2/4WD ¹	4-0841	3-5841	Single
2001	2004	Nissan	Frontier ¹	—	3-5001	Single
2005	2018	Nissan	Frontier ¹	—	3-5602	Single
2005	2012	Nissan	Pathfinder ¹	—	3-5602	Single
1999.5	2004	Nissan	Pathfinder ¹	—	3-5280	Single
2004	2016	Nissan	Titan King Cab/Crew Cab (Excl Titan XD) ¹	4-0841	3-5841	Single
2016	2018	Nissan	Titan XD (Excl Reg Titan) ¹	4-0193	3-5193	Double
2000	2001	Nissan	Xterra ¹	4-0241	3-5241	Single
2002	2004	Nissan	Xterra ¹	—	3-5341	Single
2005	2011	Nissan	Xterra ¹	4-0702	3-5702	Single
2009	2018	Ram	Ram 1500 ¹	4-0453	3-5453	Single
2010	2018	Ram	Ram 2500/3500 ¹	4-0553	3-5553	Single
1999	2002	Toyota	4Runner ¹	4-0720	3-5720	Single
2003	2005	Toyota	4Runner ¹	4-0821	3-5821	Single
2006	2009	Toyota	4Runner ¹	4-0912	3-5912	Single
1996	1998	Toyota	4Runner ¹	4-1090	3-6090	Single
2007	2014	Toyota	FJ Cruiser ¹	4-0122	3-5122	Double
2006	2015	Toyota	RAV4 ¹	—	3-35201	Single
2016	2018	Toyota	Tacoma ¹	4-0883	3-5883	Double
1998	2000	Toyota	Tacoma ¹	4-1090	3-6090	Single
2001	2004	Toyota	Tacoma ¹	4-0090	3-5090	Single
2005	2015	Toyota	Tacoma ¹	4-0061	3-5061	Single
2007	2018	Toyota	Tundra ¹	4-0073	3-5073	Double
2004	2006	Toyota	Tundra ¹	4-0751	3-5751	Double
2000	2003	Toyota	Tundra ¹	—	3-5731	Double

FOOTNOTE: 1. May interfere with front sensor



HD GRILLE GUARDS

FEATURES AND BENEFITS

- Full front-end coverage
- Made of 2 inch diameter steel tube
- Heavy duty rubber padded uprights
- Pre-drilled for light mounting
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 year warranty on black powder coat
- Lifetime warranty on stainless steel finish

CHEVY SILVERADO



DODGE RAM



NOTE: Because every vehicle is different, your exact TUFF-BAR grille guard may not look exactly as pictured. Certain features like bends, mounting locations, and end caps may vary slightly from the product descriptions. Product contains 2 nerf bars, mounting brackets and all hardware.



HD GRILLE GUARD (W/RUBBER STRIP) APPLICATIONS

START	END	MAKE	MODEL	BLACK
2014	2018	Chevy	Silverado 1500 ¹	3-75863
2015	2018	Chevy	Silverado 2500/3500 ¹	3-75873
2007	2013	Chevy	Silverado 1500 (Excl Classic) ¹	3-75722
2011	2014	Chevy	Silverado 2500/3500 ¹	3-75163
2006	2009	Dodge	Ram 2500/3500 ¹	3-75591
2006	2008	Dodge	Ram 1500 ¹	3-75591
2009	2018	Dodge	Ram 1500 ¹	3-75453
2010	Dodge/ Ram	Dodge	Ram 2500/3500 ¹	3-75553
2015	2018	Ford	F-150 (Excl Raptor) ¹	3-75383
2017	2018	Ford	F-250/350/450/550 ¹	3-75093
2009	2014	Ford	F-150 (Excl 2010-2014 Raptor) ¹	3-75052
2011	2016	Ford	F-250/350 ¹	3-75732
2008	2010	Ford	F-250/350/450/550 ¹	3-75632
2014	2018	GMC	Sierra 1500 ¹	3-75963
2007	2013	GMC	Sierra 1500 (Excl Classic) ¹	3-75922
2011	2014	GMC	Sierra 2500/3500 ¹	3-75663
2016	2018	Nissan	Titan XD	3-75193

HD GRILLE GUARD (W/O RUBBER STRIP) APPLICATIONS

START	END	MAKE	MODEL	BLACK
2003	2007	Chevy	Silverado "Classic" 1500	3-65711
2003	2006	Chevy	Avalanche 1500 w/out Cladding	3-65711
2003	2007	Chevy	Silverado "Classic" 2500/3500	3-65421
2007	2013	Chevy	Silverado 1500 (Excl Classic) ¹	3-65722
2011	2014	Chevy	Silverado 2500HD/3500 ¹	3-65163
2007	2010	Chevy	Silverado 2500HD/3500 (Excl Classic) ¹	3-65132
2006	2008	Dodge	Ram 1500 2/4WD ¹	3-65591
2003	2005	Dodge	Ram 1500/2500/3500 ¹	3-65021
2009	2018	Dodge/Ram	Ram 1500 ¹	3-65453
2010	2018	Dodge/Ram	Ram 2500/3500 ¹	3-65553
2017	2018	Ford	F-250/350/450 ¹	3-65093
2006	2008	Ford	F-150 2/4WD ¹	3-65102
2009	2014	Ford	F 150 ¹	3-65052
2011	2016	Ford	F-250/350/450 ¹	3-65732
2005	2007	Ford	F-250/350 ¹	3-65461
2005	2005	Ford	Excursion ¹	3-65461
2008	2010	Ford	F-250/350 ¹	3-65632
2007	2013	GMC	Sierra 1500 ¹	3-65922
2011	2014	GMC	Sierra 2500/3500 ¹	3-65663
2007	2010	GMC	Sierra 2500/3500 ¹	3-65332
2007	2018	Toyota	Tundra ¹	3-65322

FOOTNOTE: 1. May interfere with front sensor

CLASS I HITCHES



FEATURES AND BENEFITS

- Up to 2,000 lbs. towing
- 1.25" receiver opening
- 2" heavy duty body tubes
- Welded safety chain loops
- Steel capped tube ends include a rubber plug*
- Features a through bracket design*
- No-drilling required*
- Semi-gloss black powder coat finish

*For most applications

CLASS III/IV HITCHES



FEATURES AND BENEFITS

- Up to 5,000 lbs. towing (Class III)
- Up to 10,000 lbs. towing (Class IV)
- 2" receiver opening
- Main cross tube made of structural steel*
- Welded safety chain loops
- Steel capped tube ends include a rubber plug*
- Features a through bracket design*
- No-drilling required*
- Semi-gloss black powder coat finish

*For most applications

HITCH APPLICATIONS

START	END	MAKE	MODEL	CLASS	PART NO.
2008	2017	Buick	Enclave	III	6-65801
2015	2018	Chevy	Colorado	III	6-65351
2004	2013	Chevy	Colorado	III	6-65411
2004	2017	Chevy	Equinox	III	6-65701
1996	2017	Chevy	Savanna	III	6-65311
2014	2018	Chevy	Silverado 1500	III	6-65741
2007	2013	Chevy	Silverado 1500	III	6-65001
1999	2007	Chevy	Silverado 1500 "Classic"	III	6-65001
1999	2005	Chevy	Silverado 2500LD	III	6-65001
2009	2017	Chevy	Traverse	III	6-65801
2008	2016	Chrysler	Town & Country	III	6-65711
2008	2016	Dodge	Caravan	III	6-65711
2011	2016	Dodge	Durango	III	6-65501
2009	2015	Dodge	Journey	III	6-65031
2003	2018	Dodge/Ram	Ram 1500	III	6-65101
2007	2014	Ford	Edge ^{2,3,4,5,6,7}	III	6-65011
2013	2018	Ford	Escape	I	6-65621
2005	2012	Ford	Escape	III	6-65901
2011	2018	Ford	Explorer	III	6-65321
2015	2018	Ford	F-150	III/IV	6-65151
2009	2014	Ford	F-150	III	6-65201
2000	2014	Ford	F-150/250/350	III	6-65611
2012	2015	Ford	Focus ¹	I	6-65021
1983	2011	Ford	Ranger	III	6-65601
2007	2018	GMC	Acadia	III	6-65801
2015	2018	GMC	Canyon	III	6-65351
2004	2013	GMC	Canyon	III	6-65411
1996	2017	GMC	Express	III	6-65311
2014	2018	GMC	Sierra 1500	III	6-65741
2007	2013	GMC	Sierra 1500	III	6-65001
1999	2007	GMC	Sierra 1500 "Classic"	III	6-65001
1999	2005	GMC	Sierra 2500LD	III	6-65001
2010	2017	GMC	Terrain	III	6-65701
2007	2016	Honda	CR-V	I	6-65831
1999	2015	Honda	Odyssey	III	6-65031
2011	2015	Jeep	Grand Cherokee	III	6-65501
2007	2018	Jeep	Wrangler (Excl JL)	III	6-65301
2010	2016	Kia	Soul ⁵	I	6-65421
2005	2015	Nissan	Frontier	III	6-65811
2015	2016	Nissan	Murano	III	6-65251
2009	2014	Nissan	Murano	III	6-65541
2013	2016	Nissan	Pathfinder	III	6-65931
2014	2018	Nissan	Rogue 3 piece	I	6-65241
2008	2013	Nissan	Rogue 3 piece	I	6-65331
2006	2009	Pontiac	Torrent	III	6-65701
2010	2016	Ram	C/V Tradesman	III	6-65711
2007	2010	Saturn	Outlook	III	6-65801
2002	2007	Saturn	Vue	III	6-65701
2009	2014	Subaru	Forester	I	6-65731
2014	2013	Subaru	Forester	III	6-65921
2014	2018	Subaru	Forester	III	6-65451
2010	2013	Subaru	Outback	III	6-65821
2014	2018	Subaru	Outback	III	6-65551
2008	2012	Suzuki	Equator	III	6-65811
2014	2016	Toyota	Highlander	III	6-65631
2008	2013	Toyota	Highlander	III	6-65111
2010	2015	Toyota	Prius exc. Prius C	I	6-65521
2006	2018	Toyota	RAV4	I	6-65211
2004	2018	Toyota	Sienna	III	6-65141
2005	2018	Toyota	Tacoma	III	6-65401
2007	2018	Toyota	Tundra	III	6-65131
2008	2012	Volkswagon	Routan	III	6-65711

FOOTNOTE: 1. Exhaust system needs to be temporarily lowered for installation
2. Will not fit vehicle with factory installed hitch receiver **3.** Trimming of rear bumper fascia may be required for sport models **4.** Requires OEM style rear bumper and mounting bracket **5.** Drilling required for installation **6.** Exhaust system needs to be temporarily lowered for installation **7.** Trimming of exhaust heat shield is required for installation

STUBBY BUMPER




FEATURES AND BENEFITS

- Made of 8 gauge steel
- Double bar
- Will fit up to a 9,500 lbs winch
- Opening for two OEM fog lights
- Equipped with 2 bow shackles
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Front Bumper Stubby	6-75101

FULL WIDTH BUMPER

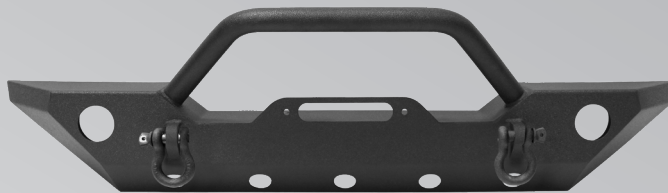


FEATURES AND BENEFITS

- Made of 8 gauge steel
- Single bar
- Will fit up to a 9,500 lbs winch
- Opening for two OEM fog lights
- Equipped with 2 bow shackles
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Front Bumper Full Width	6-75001

9,500 LBS WINCH

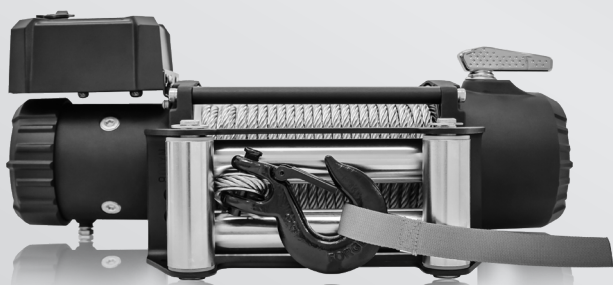

FEATURES AND BENEFITS

- Rated Line Pull: 9,500 lbs. Single line
- Motor: 6.6hp 12V series wound
- Corded remote control included
- Steel cable
- Larger clutch lever
- Black 4-Way roller fairlead/clevis hook
- Finish: Black
- Weight: 77 lbs.
- Overall Dimensions: 20.8"(L) x 6.3"(W) X 7.7"(H)

MAKE	DESCRIPTION	PART NO.
All	9,500lb Winch w/wire cable	7-89501

12,000 LBS WINCH



FEATURES AND BENEFITS

- Rated Line Pull: 12,000 lbs. single line
- Motor: 6.6hp 12V series wound
- Corded remote control included
- Steel cable
- Larger clutch lever
- Black 4-Way roller fairlead/clevis hook
- Finish: Black
- Weight: 77 lbs.
- Overall Dimensions: 21.2"(L) x 6.3"(W) X 7.7"(H)

MAKE	DESCRIPTION	PART NO.
All	12,000lb Winch w/wire cable	7-81201

REAR BUMPER W/ TIRE CARRIER OPTION




FEATURES AND BENEFITS

- Made of 8 gauge steel
- Flush mount LED lights included
- Welded Class III hitch
- Welded D-Rings equipped with two Bow Shackles
- Optional Bolt-On Tire Carrier available
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Rear Bumper w/Tire Carrier Option	6-75002

REAR BUMPER W/ TIRE CARRIER INCLUDED

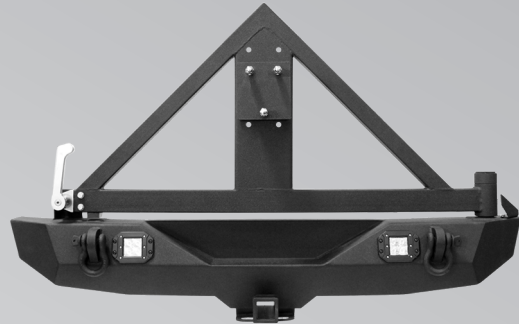


FEATURES AND BENEFITS

- Made of 8 gauge steel
- Tire mount is adjustable up to a 37" tire
- Flush mount led lights not included
- Welded Class III hitch
- Welded D-Rings equipped with two Bow Shackles
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Rear Bumper w/Tire Carrier	6-75302

BOLT-ON TIRE CARRIER OPTIONAL (SOLD SEPARATELY)

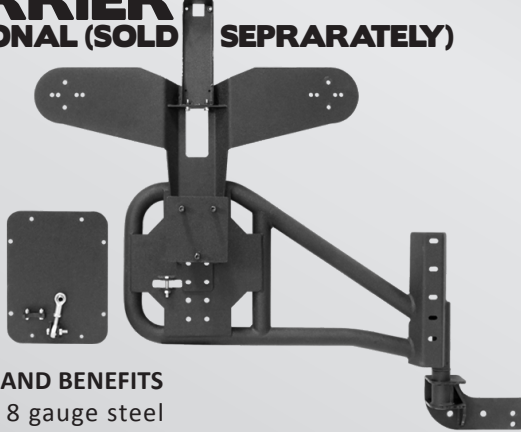


FEATURES AND BENEFITS

- Made of 8 gauge steel
- Tire mount is adjustable up to a 37" tire
- Built-in mount for 3rd brake light
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Bolt On Tire Carrier	6-75102

OVERSIZED TIRE CARRIER WORKS AS STAND ALONE UNIT

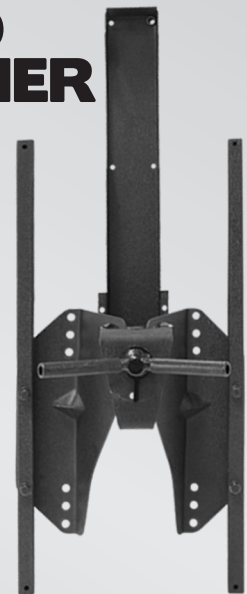

FEATURES AND BENEFITS

- Made of 8 gauge steel
- Adjustable up to a 37" tire
- Built-in mount for 3rd brake light
- Attaches to the factory tailgate
- Requires no drilling or modification
- Easy, bolt-on installation
- Hardware and mount kit included
- 3 Year warranty on textured finish

START	END	MAKE	MODEL	DESCRIPTION	PART NO.
2007	2018	Jeep	Wrangler (Excl JL)	Oversize Tire Carrier	6-75402

DOUBLE ROW 3W EPISTAR LED



FEATURES AND BENEFITS


- Available in 6", 12", 20", 30", 40" & 50" in lengths
- Available in Chrome or Black
- Raw Lumens: 2,150 - 19,200
- 3W EPISTAR LED Chip
- Combo and Spot beam
- Hardware included
- Limited lifetime warranty

DOUBLE ROW CHROME FACE LED LIGHT BAR APPLICATIONS

PART NO.	WATT	ROW	SIZE	TYPE
7-101206C	3	Double	6"	Combo
7-101206S	3	Double	6"	Spot
7-101212C	3	Double	12"	Combo
7-101212S	3	Double	12"	Spot
7-101220C	3	Double	20"	Combo
7-101220S	3	Double	20"	Spot
7-101230C	3	Double	30"	Combo
7-101230S	3	Double	30"	Spot
7-101240C	3	Double	40"	Combo
7-101240S	3	Double	40"	Spot
7-101250C	3	Double	50"	Combo
7-101250S	3	Double	50"	Spot

DOUBLE ROW BLACK FACE LED LIGHT BAR APPLICATIONS

PART NO.	WATT	ROW	SIZE	TYPE
7-101206C-B	3	Double	6"	Combo
7-101206S-B	3	Double	6"	Spot
7-101212C-B	3	Double	12"	Combo
7-101212S-B	3	Double	12"	Spot
7-101220C-B	3	Double	20"	Combo
7-101220S-B	3	Double	20"	Spot
7-101230C-B	3	Double	30"	Combo
7-101230S-B	3	Double	30"	Spot
7-101240C-B	3	Double	40"	Combo
7-101240S-B	3	Double	40"	Spot
7-101250C-B	3	Double	50"	Combo
7-101250S-B	3	Double	50"	Spot

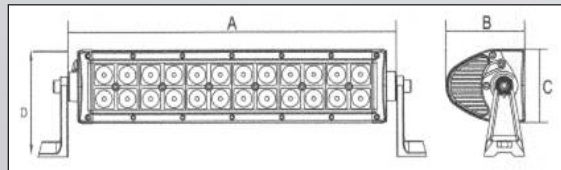

DIMENSIONS (MM)

SIZE	A	B	C	D
6"	8.26	3.46	3.22	4.52
12"	14.17	3.46	3.22	4.52
20"	22.04	3.46	3.22	4.52
30"	31.88	3.46	3.22	4.52
40"	41.73	3.46	3.22	4.52
50"	49.60	3.46	3.22	4.52

SINGLE ROW 5W EPISTAR LED



FEATURES AND BENEFITS


- Available in 6", 12", 20", 30", 40" & 50" in lengths
- Available in Chrome or Black
- Raw Lumens: 2,250
- 5W EPISTAR LED Chip
- Combo and Flood beam
- Hardware included
- Limited lifetime warranty

SINGLE ROW CHROME FACE LED LIGHT BAR APPLICATIONS

PART NO.	WATT	ROW	SIZE	TYPE
7-100106F	5	Single	6"	Flood
7-100106S	5	Single	6"	Spot
7-100112F	5	Single	12"	Flood
7-100112S	5	Single	12"	Spot
7-100120C	5	Single	20"	Combo
7-100120S	5	Single	20"	Spot
7-100125C	5	Single	25"	Combo
7-100125S	5	Single	25"	Spot
7-100130C	5	Single	30"	Combo
7-100130S	5	Single	30"	Spot
7-100140C	5	Single	40"	Combo
7-100140S	5	Single	40"	Spot
7-100150C	5	Single	50"	Combo
7-100150S	5	Single	50"	Spot

SINGLE ROW BLACK FACE LED LIGHT BAR APPLICATIONS

PART NO.	WATT	ROW	SIZE	TYPE
7-100106F-B	5	Single	6"	Flood
7-100106S-B	5	Single	6"	Spot
7-100112F-B	5	Single	12"	Flood
7-100112S-B	5	Single	12"	Spot
7-100120C-B	5	Single	20"	Combo
7-100120S-B	5	Single	20"	Spot
7-100125C-B	5	Single	25"	Combo
7-100125S-B	5	Single	25"	Spot
7-100130C-B	5	Single	30"	Combo
7-100130S-B	5	Single	30"	Spot
7-100140C-B	5	Single	40"	Combo
7-100140S-B	5	Single	40"	Spot
7-100150C-B	5	Single	50"	Combo
7-100150S-B	5	Single	50"	Spot

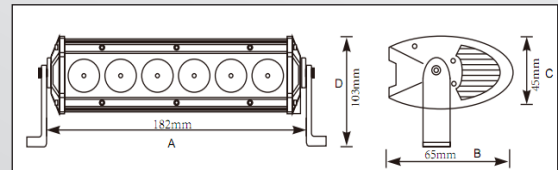

DIMENSIONS (MM)

SIZE	A	B	C	D
6"	8.26	3.46	3.22	4.52
12"	14.17	3.46	3.22	4.52
20"	22.04	3.46	3.22	4.52
30"	37.28	2.55	1.77	4.05
40"	43.30	2.55	1.77	4.05
50"	49.33	2.55	1.77	4.05

ECONOMY SQUARE

3W EPISTAR LED



FEATURES AND BENEFITS

- Available in 4.3" x 5.0" (A)*
- Available in 4.4" x 4.7" (B)**
- Raw Lumens: 800 - 1,450
- 3W EPISTAR LED Chip
- Flood or Spot beam
- Hardware included
- Limited lifetime warranty


BLACK	SIZE	WATTS	SHAPE
7-30943F	2.8" x 2.5"	27	Square
7-30944F	4.4" x 4.7"	27	Square
7-30945F	4.3" x 5.0"	15	Square
7-30945S	4.3" x 5.0"	15	Square

*(A) Square LED, 5-LED configuration

** (B) HD Square LED, 9-LED configuration

ECONOMY ROUND

3W EPISTAR LED

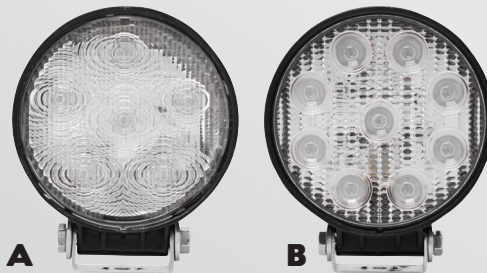

FEATURES AND BENEFITS

- Available in 4.6" diameter (A)*
- Available in 4.9" diameter (B)**
- Raw Lumens: 800 - 1,450
- 3W EPISTAR LED Chip
- Flood or Spot beam
- Hardware included
- Limited lifetime warranty

BLACK	SIZE	WATTS	SHAPE
7-30835F	4.5"	27	Round
7-30835S	4.5"	27	Round
7-30836F	5"	15	Round
7-30836S	5"	15	Round

*(A) Round LED, 6-LED configuration

** (B) Round LED, 9-LED configuration

3" SQUARE AUXILIARY

3W EPISTAR LED

FEATURES AND BENEFITS

- Available in 3.25" square*
- Raw Lumens: 1,000
- 3W EPISTAR LED Chip
- Flood beam
- Hardware included
- Limited lifetime warranty



PART NO.	SIZE	TYPE	WATTS	APPLICATION
7-104403F	3.25" Sq.	Flood	15W	LED Light

20" LOW PROFILE FM

5W CREE LED



SIDE VIEW



TOP VIEW



MOUNTING BRACKET

FEATURES AND BENEFITS

- 20" Low Profile Flush Mount LED light bar
- Raw Lumens: 3,780
- 5W CREE LED Chip
- Combo beam
- Hardware included
- Limited lifetime warranty

PART NO.	SIZE	TYPE	WATTS	APPLICATION
7-104120C	20"	Combo	54	Low Profile Flush Mount

WIRING KITS

LED WIRING HARNESS

FEATURES AND BENEFITS

- Easy, plug-in installation
- In-line fuse and 12-volt relays included
- 14 gauge wire
- Hard plastic wire loom cover included



PART NO.	APPLICATION
7-310W161	4.1m
7-310WPK	Includes: Pigtail, Relay, Switch and Fuse Holder