



TYGER®


TYGER GUARD™

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE.

WARNING

TEXTURED COATED FINISHES SHOULD BE CLEANED WITH A MILD SOAP ON A DAMP SPONGE. DO NOT APPLY POLISH OR WAX THAT REQUIRES TO BE REMOVED BY MEANS OF BUFFING. THIS TYPE OF WAX IS COMMONLY USED AT CAR WASH FACILITIES.



**Passenger Frame
Mounting Bracket**



**Driver Frame
Mounting Bracket**



(2) Tube Mounting Bracket



TG-GD6T60038

NOTE: Installation may interfere with front mounted sensors. Not recommended for vehicles with optional "active" laser guided cruise control systems.

Parts List


- x1** Tyger Guard
- x2** Tube Mounting Brackets (left or right)
- x1** Driver/Left Frame Mounting Bracket
- x1** Passenger/Right Frame Mounting Bracket
- x4** 10-1.5mm x 35mm Hex Bolts
- x8** 10mm x 27mm OD x 3mm Flat Washers
- x4** 10-1.5mm Nylon Lock Nuts
- x4** 8-1.25mm x 35mm Hex Bolts
- x4** 8mm x 22mm OD x 2mm Flat Washers
- x4** 8mm Lock Washers
- x2** 6-1.0mm x 20mm Combo Bolts (license plate)
- x1** 4mm Wrench



TYGER®

STEP 1

Start installation at the driver side, front of the vehicle. Remove the driver side tow hook, (Fig 1).

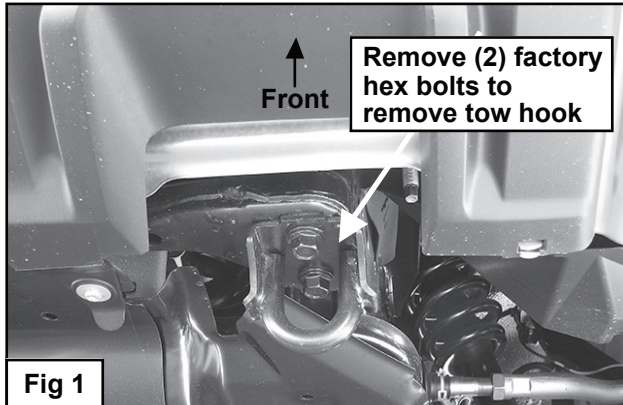

STEP 2

Select the driver side Frame Bracket, (Fig 2). Check the fit between the tow hook and the Bracket for reinstallation over the Bracket.

NOTE: Some factory tow hooks may not clear the Bracket and cannot be reinstalled. Check for fit before bolting tow hook and Bracket in place.






(Fig 2) Driver/left Frame Mounting Bracket

STEP 3

Reuse the factory tow hook bolts to attach the Bracket to the underside of the frame channel, either with or without the tow hook, (Fig 3). Do not fully tighten hardware at this time.

STEP 4

Repeat Steps 1-3 for passenger side Frame Mounting Bracket installation. Carefully unwrap the Tyger Guard. Select (1) Tube Mounting Bracket. Attach the Bracket to the end of the Tyger Guard with (2) 8mm Flat Hex Bolts, (2) 8mm Lock Washers, (2) 8mm Flat Washers, (Fig 4-5). Do not tighten hardware at this time.

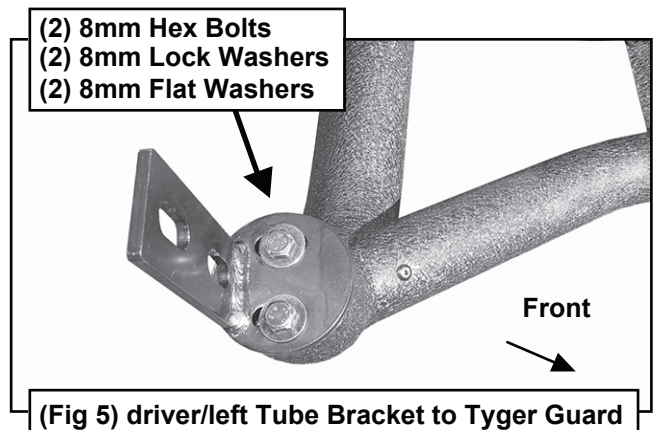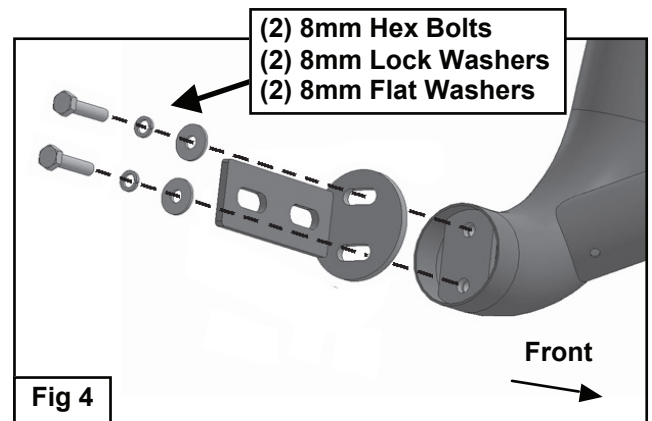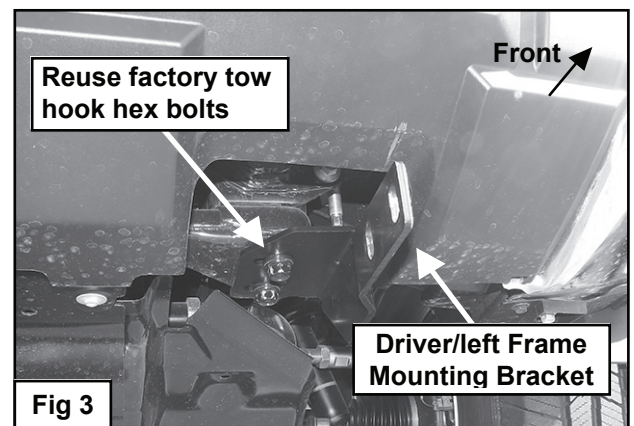





TYGER[®]

STEP 5

Repeat Step 5 to install the passenger side Tube Mounting Bracket. With assistance, line up the Tube Mounting Brackets on the Tyger Guard with the outside of the Frame Brackets. Attach the Tyger Guard to the Frame Brackets with the included (4) 10-1.5mm Hex Bolts, (8) 10mm Flat Washers and (4) 10-1.5mm Nylon Lock Nuts, (Fig 6-7). Do not tighten hardware.

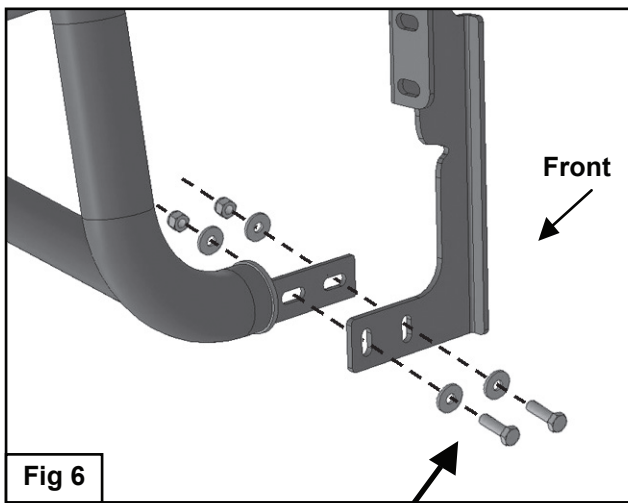

(2) 10mm Hex Bolts
(4) 10mm Flat Washers
(2) 10mm Nylon Lock Nuts

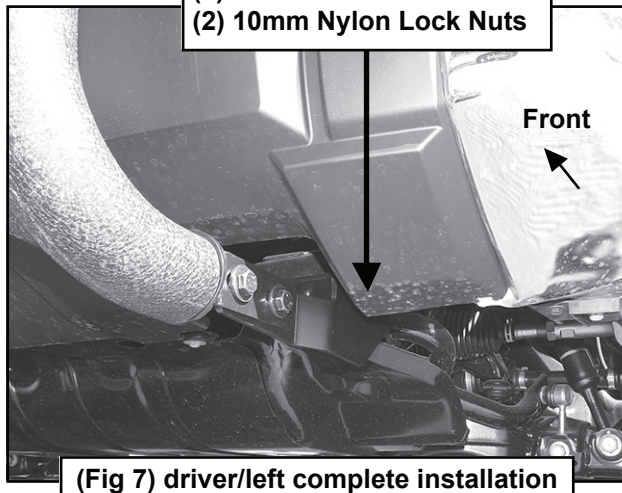

STEP 6

Level and adjust the Tyger Guard properly and tighten all hardware.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

