
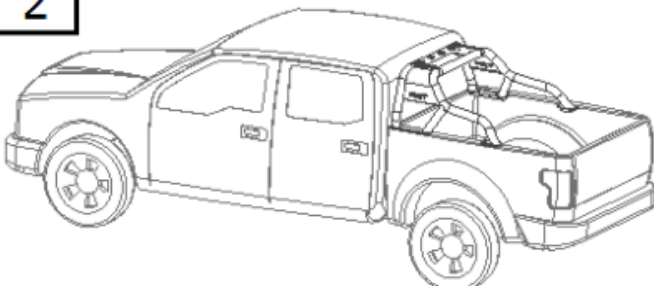


Vanguard Off Road Bravo Roll Bar VGRB-1895BK, VGRB-1896BK

NOTE:

1. Please read the installation instructions in their entirety prior to installing the product. This helps ensure your safety and that of your vehicle.
2. Vanguard Off Road recommends doing periodic inspections of the installed product to tighten all hardware.
3. The pictures of instructions are for your reference. There may be slight variation, but installation is the same.

Part List	 A: Roll Bar Panels (Left/Right)		 B: Connecting Bar	
	 D10 Flat Washer (32PCS)	 M10 Lock Nut (16PCS)	 M10*30 Button Head Bolt (16PCS)	
Installation Procedures:	1  Assemble the Bravo Roll Bar Panels with the Connecting Bar using supplied hardware.			
	2  With help from another person, position the Bravo Roll Bar onto truck bed. Mark the mounting points using holes on the roll bar as a guide. Next, take away the roll bar. Drill holes using 10.0mm drill bit, and remove any drill burr from the holes. Re-position the roll bar onto the bed. Use supplied hardware to secure it.			