

#0799

Rear Guard Hyundai Santa Fe / Kia Sorento

PART LIST:			
QTY	PART DESCRIPTION	QTY	PART DESCRIPTION
1	Rear Guard	4	M12 LOCK WASHERS
1	LEFT Mounting Bracket	4	M12 HEX NUT
1	RIGHT Mounting Bracket	4	M10-1.25*30 HEX HEAD BOLTS
4	M12X30 HEX HEAD BOLTS	4	M10 FLAT WASHERS
8	M12 FLAT WASHERS	4	M10 LOCK WASHERS

LEFT Mounting Bracket	RIGHT Mounting Bracket
	

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

Install Time: 30 – 60 Minutes; Professional Installation

INSTALLATION PROCEDURE

1. Pls prepare the tools for installation, follow as: 12-14、17-19 wrench.
2. Put the mount bracket into the girder of the car, and tighten it with M10-1.25*30 Hex bolt.
3. Install the Rear Guard on the mount bracket, and tighten it with 1x M12*30 Hex bolt
4. Installation is finished.

Do periodic inspections to the installation to ensure all hardware is secure and tight.

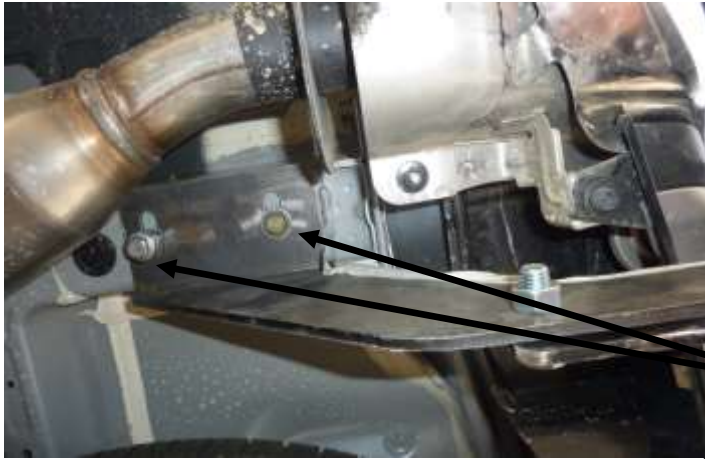

M10-1.25*30 HEX HEAD BOLTS
M10 FLAT WASHERS
M10 LOCK WASHERS



M12X30 HEX HEAD BOLTS
M12 FLAT WASHERS
M12 LOCK WASHERS
M12 HEX NUT



Looking for dependable grille guards and bull bars? Rely on Vanguard Off-Road for quality and long-lasting products.