

INSTALLATION INSTRUCTIONS

BULL BAR


HONDA PILOT/RIDGELINE ACURA MDX OLD BODY STYLE

PARTS LIST:

Qty	Description	Qty	Description
2	Frame Brackets	8	12mm Washers
4	12*30mm Hex Bolts	4	12mm Hex Nuts
4	12mm Lock Washers		

PROCEDURE:

1. Remove push type retainers from lower splash shield. Remove plastic splash shield to access to mounting location.
2. Locate and remove bolts that hold the frame brace and bumper brackets to vehicle.
3. Install frame bracket between lower radiator support and frame brace using (3) existing bolts. As shown.
4. Cut plastic splash shield to allow brackets to pass through.
5. Position the bull bar assembly to the lower frame brackets (outer side) using 12*30mm hex bolts, 12mm hex nuts and 12mm washers.
6. Align the bull bar assembly with the front of the vehicle and tighten all fasteners.

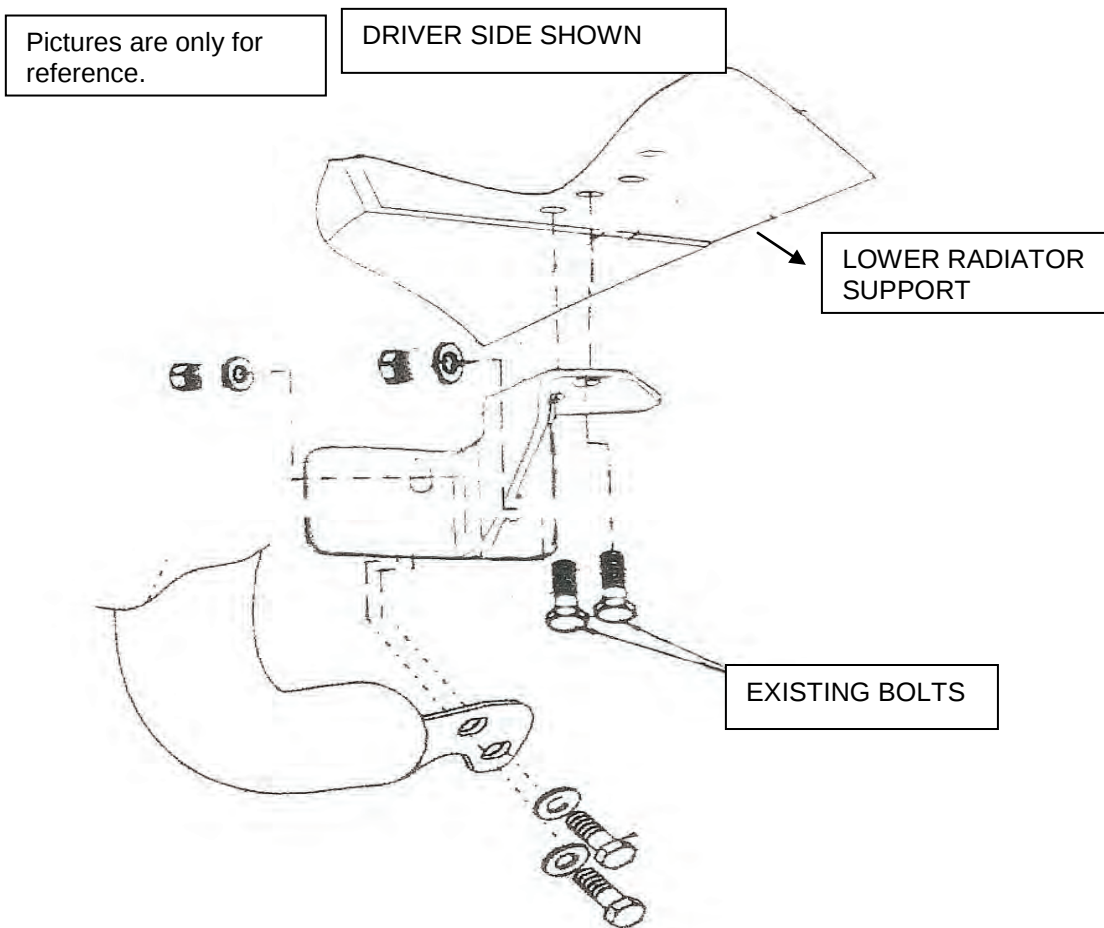



Driver's side



Passenger side



Looking for dependable grille guards and bull bars? Rely on Vanguard Off-Road for quality and long-lasting products.