

INSTALLATION INSTRUCTIONS

2016+ Hyundai Tucson/2015+ Kia Sportage

PART LIST:			
QTY	PART DESCRIPTION	QTY	PART DESCRIPTION
1	Bull Bar	2	M10 FLAT WASHERS
2	Mounting Bracket1	2	M10 LOCK WASHERS
1	LEFT Mounting Bracket2	2	M10 HEX NUT
1	RIGHT Mounting Bracket2	2	M8X35 'T'type bolts
6	M12X30 HEX HEAD BOLTS	2	M8 FLAT WASHERS
12	M12 FLAT WASHERS	2	M8 LOCK WASHERS
6	M12 LOCK WASHERS	2	M8 HEX NUT
6	M12 HEX NUT	2	M12 Rubber gasket
2	M10X35 'T'type bolts		

LEFT Mounting Bracket 1



LEFT Mounting Bracket 2



RIGHT Mounting Bracket 2



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

Install Time: 30 – 60 Minutes; Professional Installation

INSTALLATION PROCEDURE


1. Pls prepare the tools for installation, follow as: 12-14、 17-19 wrench.
2. Put the mount bracket into the girder of the car, and tighten it with M12X30 hex bolts, M10X35 'T' type bolts and M8X35 'T' type bolts
3. Install the Rear Guard on the mount bracket, and tighten it with 1x M12*30 Hex bolt
4. Installation is finished.

Do periodic inspections to the installation to ensure all hardware is secure and tight.

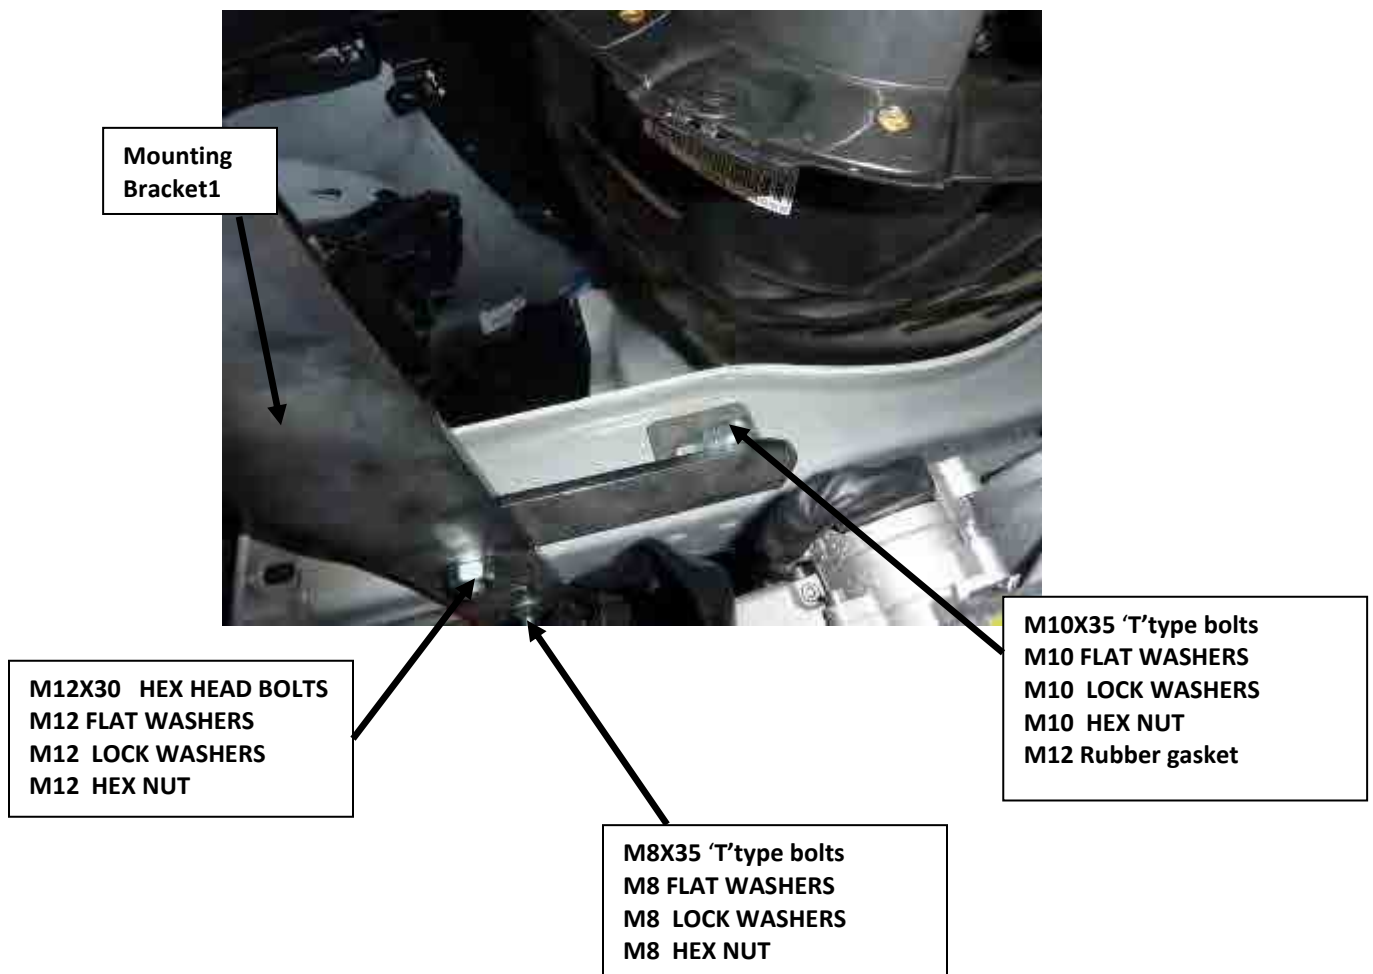




M12X30 HEX HEAD BOLTS
M12 FLAT WASHERS
M12 LOCK WASHERS
M12 HEX NUT

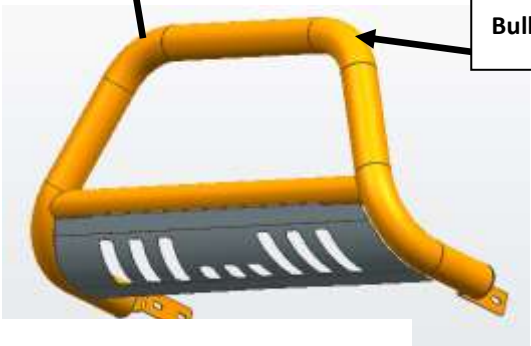

Bull Bar

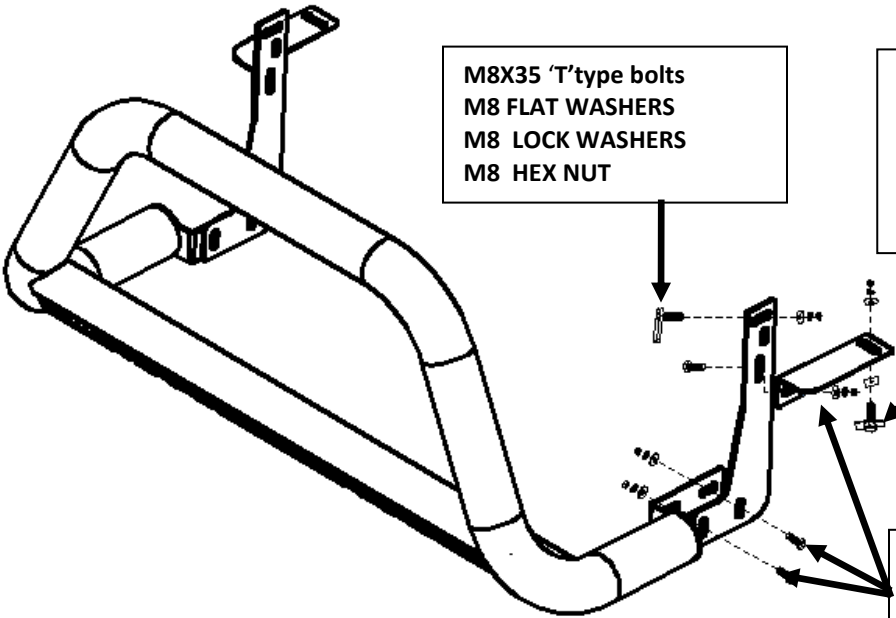

M8X35 'T'type bolts
M8 FLAT WASHERS
M8 LOCK WASHERS
M8 HEX NUT

M10X35 'T'type bolts
M10 FLAT WASHERS
M10 LOCK WASHERS
M10 HEX NUT
M12 Rubber gasket

M12X30 HEX HEAD BOLTS
M12 FLAT WASHERS
M12 LOCK WASHERS
M12 HEX NUT