



Part # 's **Secret Weapon Intake : 308-122**

Application : **2008 VW R32**

Recommended Air Filter Cleaning Intervals: 3000 Miles.

US Patent# US 7,263,961B2

**Parts List : 3 x Weapon*R Intake pipes / 1 x Weapon*R TALL [Air Filter](#) 4" / 3 x 3" x 3.5" Coupler/ 1 X 3.5"-3.5" Coupler
1 X 3.5-4" COUPLER / 7 x 4" Clamp / 3 X 3" CLAMPS**

- 1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
- 2 Unbolt the MAF sensor from airbox. Disconnect wire harness on MAF.
- 3 Remove the OEM rubber intake tube, carefully remove MAF sensor from OEM airbox.
- 4 Remove lower airbox from vehicle
- 5 Wipe the throttlebody clean of any grease, install the 3"-3.5" coupler onto throttlebody, secure with OEM clamp.
- 6 Insert the Weapon*R intake pipe into the 3.5" coupler, secure with clamp.
- 7 Install 3"-3.5" onto end of WR pipe and clamp down
- 8 Install MAF sensor into Weapon*R 3" side" coupler, and clamp down.
- 9 Install the Weapon*R 3"-3.5" couple on to end of MAF and clamp down.
- 10 Insert the WR intake pipe into the 3.5" coupler and clamp down.
- 11 Install 3.5"-3.5" Coupler onto WR pipe and clamp down
- 12 Install 3.5"-4" Coupler onto end of CAI pipe and clamp down
- 13 Slide CAI WR pipe down under headlight and into 3.5" side of coupler and clamp down

Note: Secret Weapon Filter Option :


- 14 Insert the Secret Weapon air filter into the 4" side of coupler, secure with supplied clamp.
- 15 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
- 16 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
- 17 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

Returned Products may be subject to a 25% restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE !**

Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.

Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

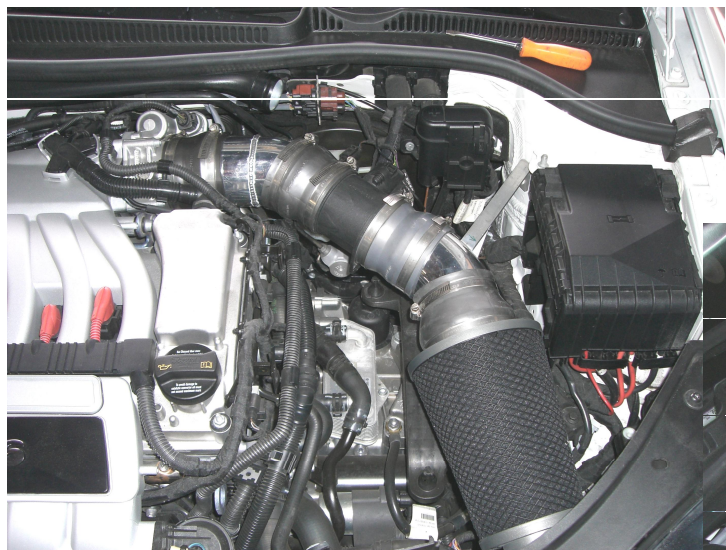

SHORT RAM INSTALL PICTURED

