



# WeatherTech®

## T-Bottom Retention Hook Installation Instructions


Follow installation instructions based on your WeatherTech® purchase

THE FOLLOWING RETENTION SYSTEMS ARE JUST A SAMPLE OF THE MANY POSSIBLE RETENTION SYSTEMS USED IN VEHICLES TODAY. FOR MORE INFORMATION, PLEASE READ THE DETAILED INSTALLATION INSTRUCTIONS SHIPPED WITH YOUR FLOORLINERS™.

### All-Weather Floor Mats

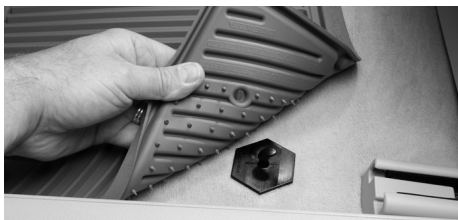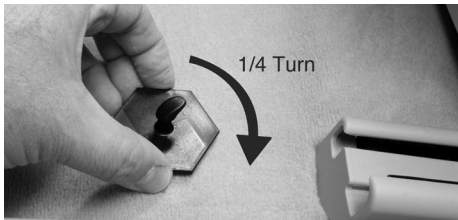

### FloorLiner™

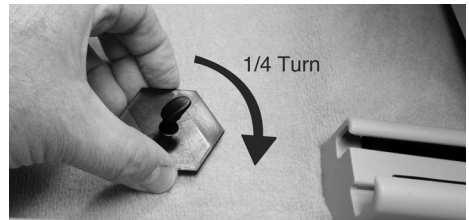


# WeatherTech®

## Auger Retention Hook Installation Instructions

Follow installation instructions based on your WeatherTech® purchase

### All-Weather Floor Mats

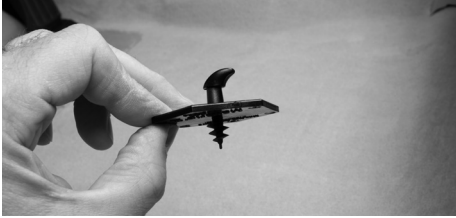

### FloorLiner™



# WeatherTech® TechGrip® II B



1



2




3



4




5

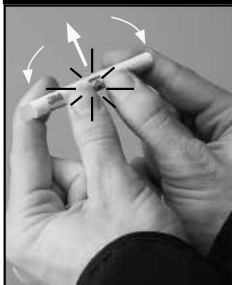

6



7

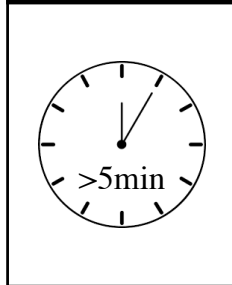

8



9



10



11



12








3M Primer 94:

WARNING: This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.

WARNING: This product contains a chemical known to the State of California to cause cancer.

# WeatherTech®

## TechGrip™ Retention Device Installation Instructions

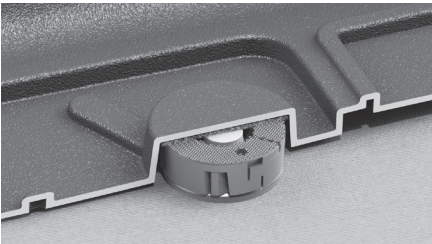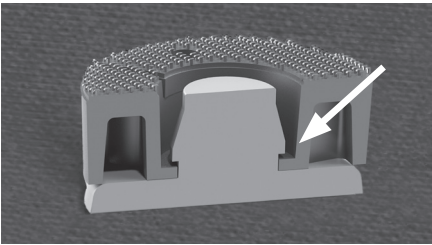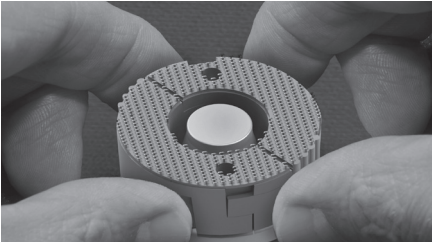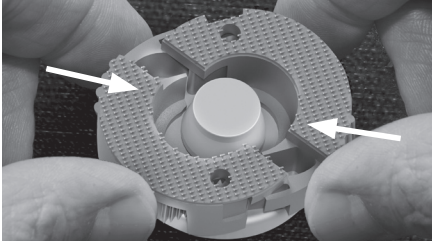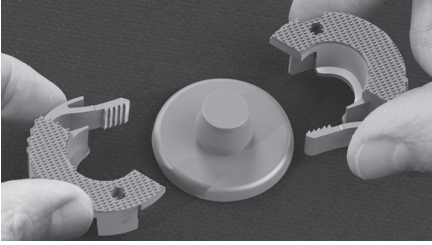

## TechGrip™ Retention Device Removal Instructions

*(If removal is necessary)*

