



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS

APPLICATION: 1999 1/2-04 NISSAN PATHFINDER
1999 1/2-04 INFINITY Q X4


SAFARI BAR ASSEMBLY

30-0020 30-0025


MOUNT KIT

30-1115


①

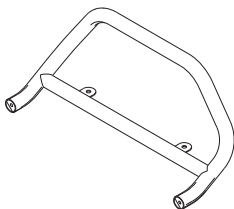

②

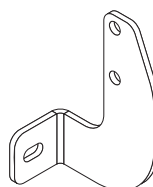

③

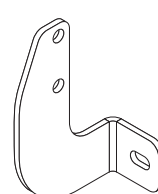

ITEM	QTY	CONTENTS	TOOLS
1	1	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY)	3/4" SOCKET
2,3	2	BRACKET, PASSENGER (2) AND DRIVER (3)	14MM SOCKET
4	2	1/2-13 X 2.00" HEX HEAD BOLT	RATCHET
5	2	1/2" FLAT WASHER	TORQUE WRENCH
6	2	1/2" LOCK WASHER	

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Determine passenger and driver brackets.
- STEP 3. Remove six screws from lower part of bumper that secures the plastic shroud. Move plastic shroud to gain access to tow hook bolts.
- STEP 4. Locate the 10mm bolts that attach the tow hooks to the frame.
- STEP 5. Remove the two front bolts from each side and attach brackets and replace fasteners.
- STEP 6. Attach Safari Bar to mount brackets using 1/2" stainless steel fasteners. Level and adjust Safari Bar as desired and tighten all fasteners. **SEE FIGURE 2.** Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 35 Ft. Lbs. for 10mm fasteners.
- STEP 7. Re-install screws that secure plastic shroud.

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.