

INSTALLATION INSTRUCTIONS

PRO MOD SKID PLATE






APPLICATION:

2019 Chevrolet Silverado 1500 (Excl. 2019 Silverado LD)

PART NUMBER:



58-71215

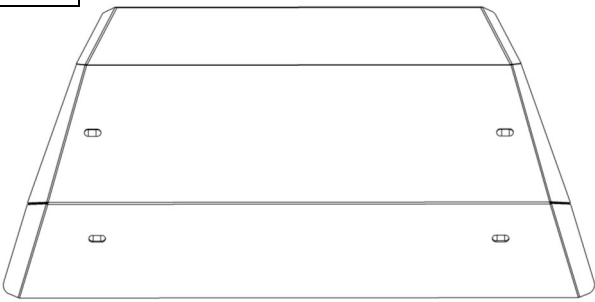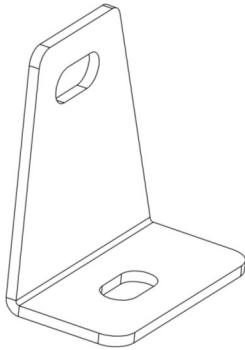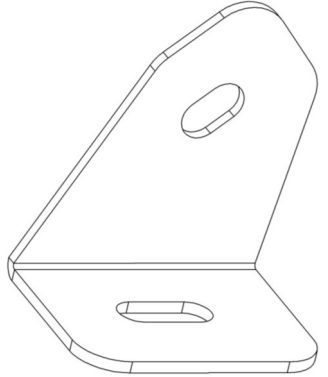
CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	SKID PLATE	ALLEN WRENCH
2	1	FRONT DRIVER MOUNTING BRACKET	RATCHET
3	1	FRONT PASSENGER MOUNTING BRACKET	TORQUE WRENCH
4	1	REAR DRIVER MOUNTING BRACKET	13MM SOCKET
5	1	REAR PASSENGER MOUNTING BRACKET	
6	16	M10 FLAT WASHER (BLACK ZINC)	
7	4	M10 BUTTON HEAD BOLT (BLACK ZINC)	
8	8	M10 SPLIT LOCK WASHER (BLACK ZINC)	
9	8	M10 SERRATED FLANGE NUT (BLACK ZINC)	
10	4	M10 BUTTON HEAD BOLT LONG (BLACK ZINC)	
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING			
ITEM 1			
ITEM 2			
ITEM 4			

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.

1. Loosely install the front and rear mounting brackets using the supplied M10 hardware.
2. Lift skid plate into place and loosely assemble to the mounting brackets. **See Figure 1-3**

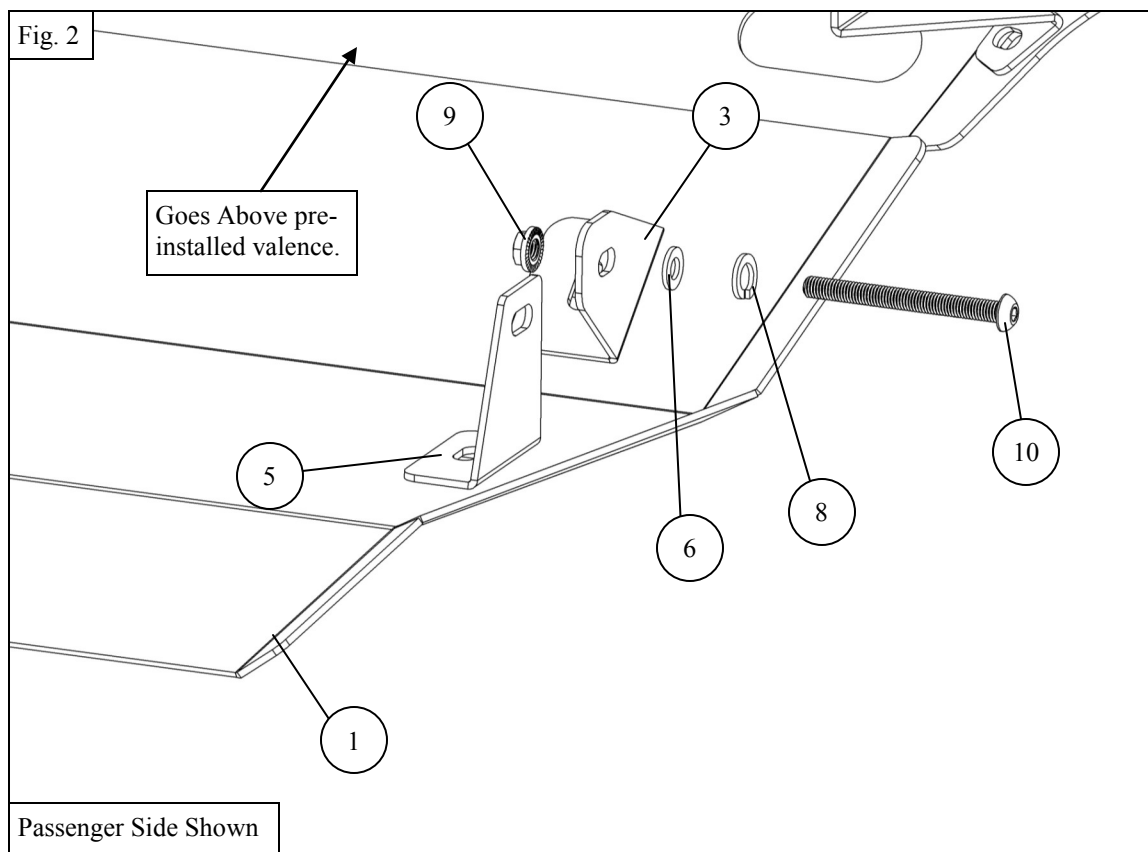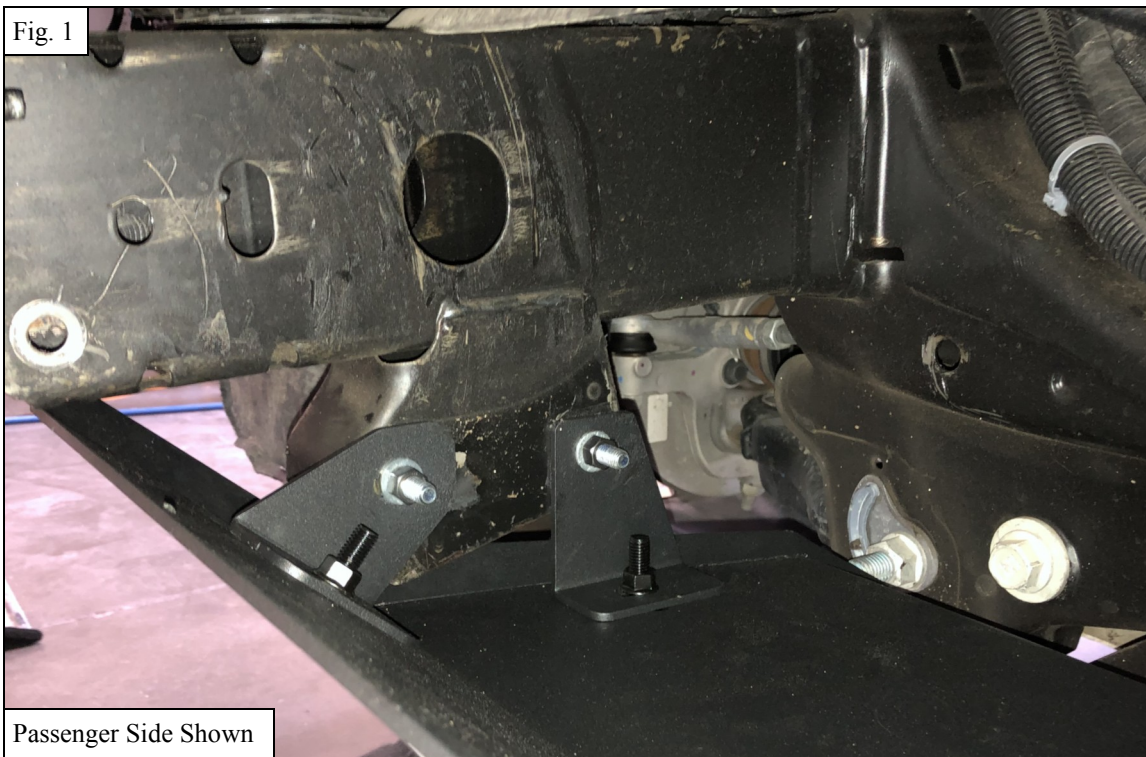

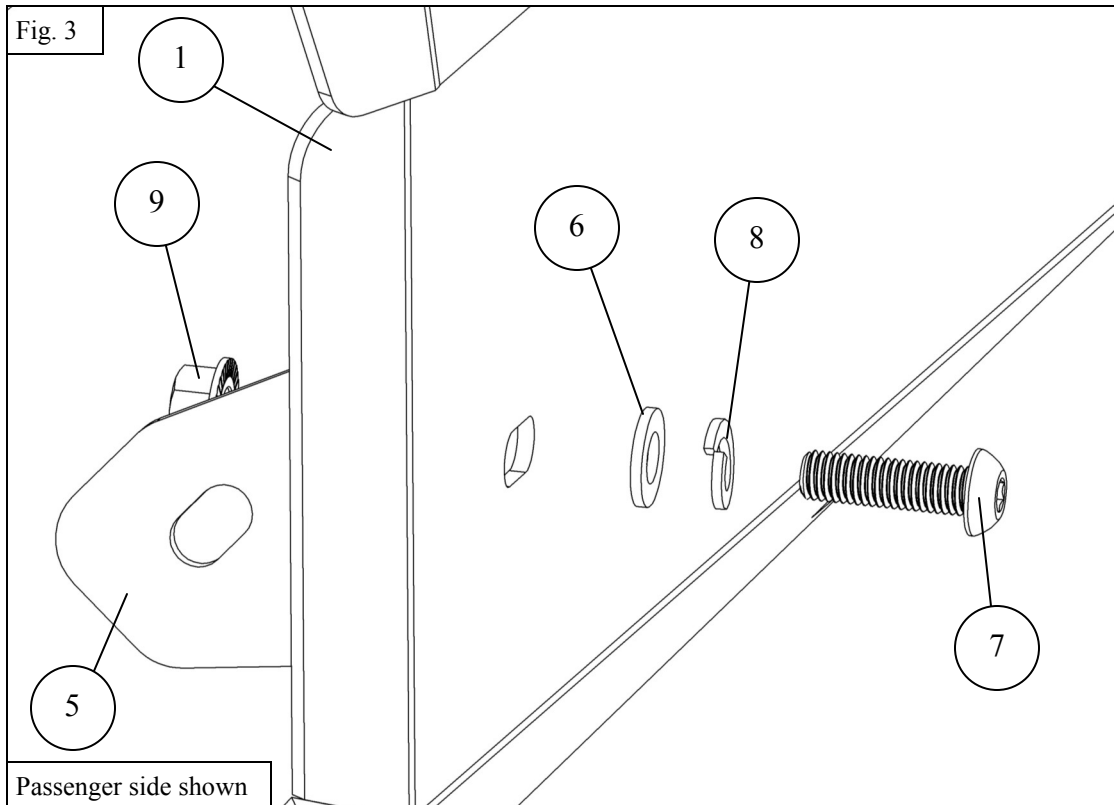

3. Adjust as needed and torque all M10 Hardware to 38 ft. lbs

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

WESTiN



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm.

