


# Installation Guide

## Rear Differential - Front & Rear Bush Kit

Suits: Holden Commodore VE 08/06 on, Pontiac G8 08/06 on

*(Always refer to the current catalogue for complete application listings)*

**N.B:** This installation guide should be used in conjunction with the workshop manual.  
All fastener torque settings should be adhered to.

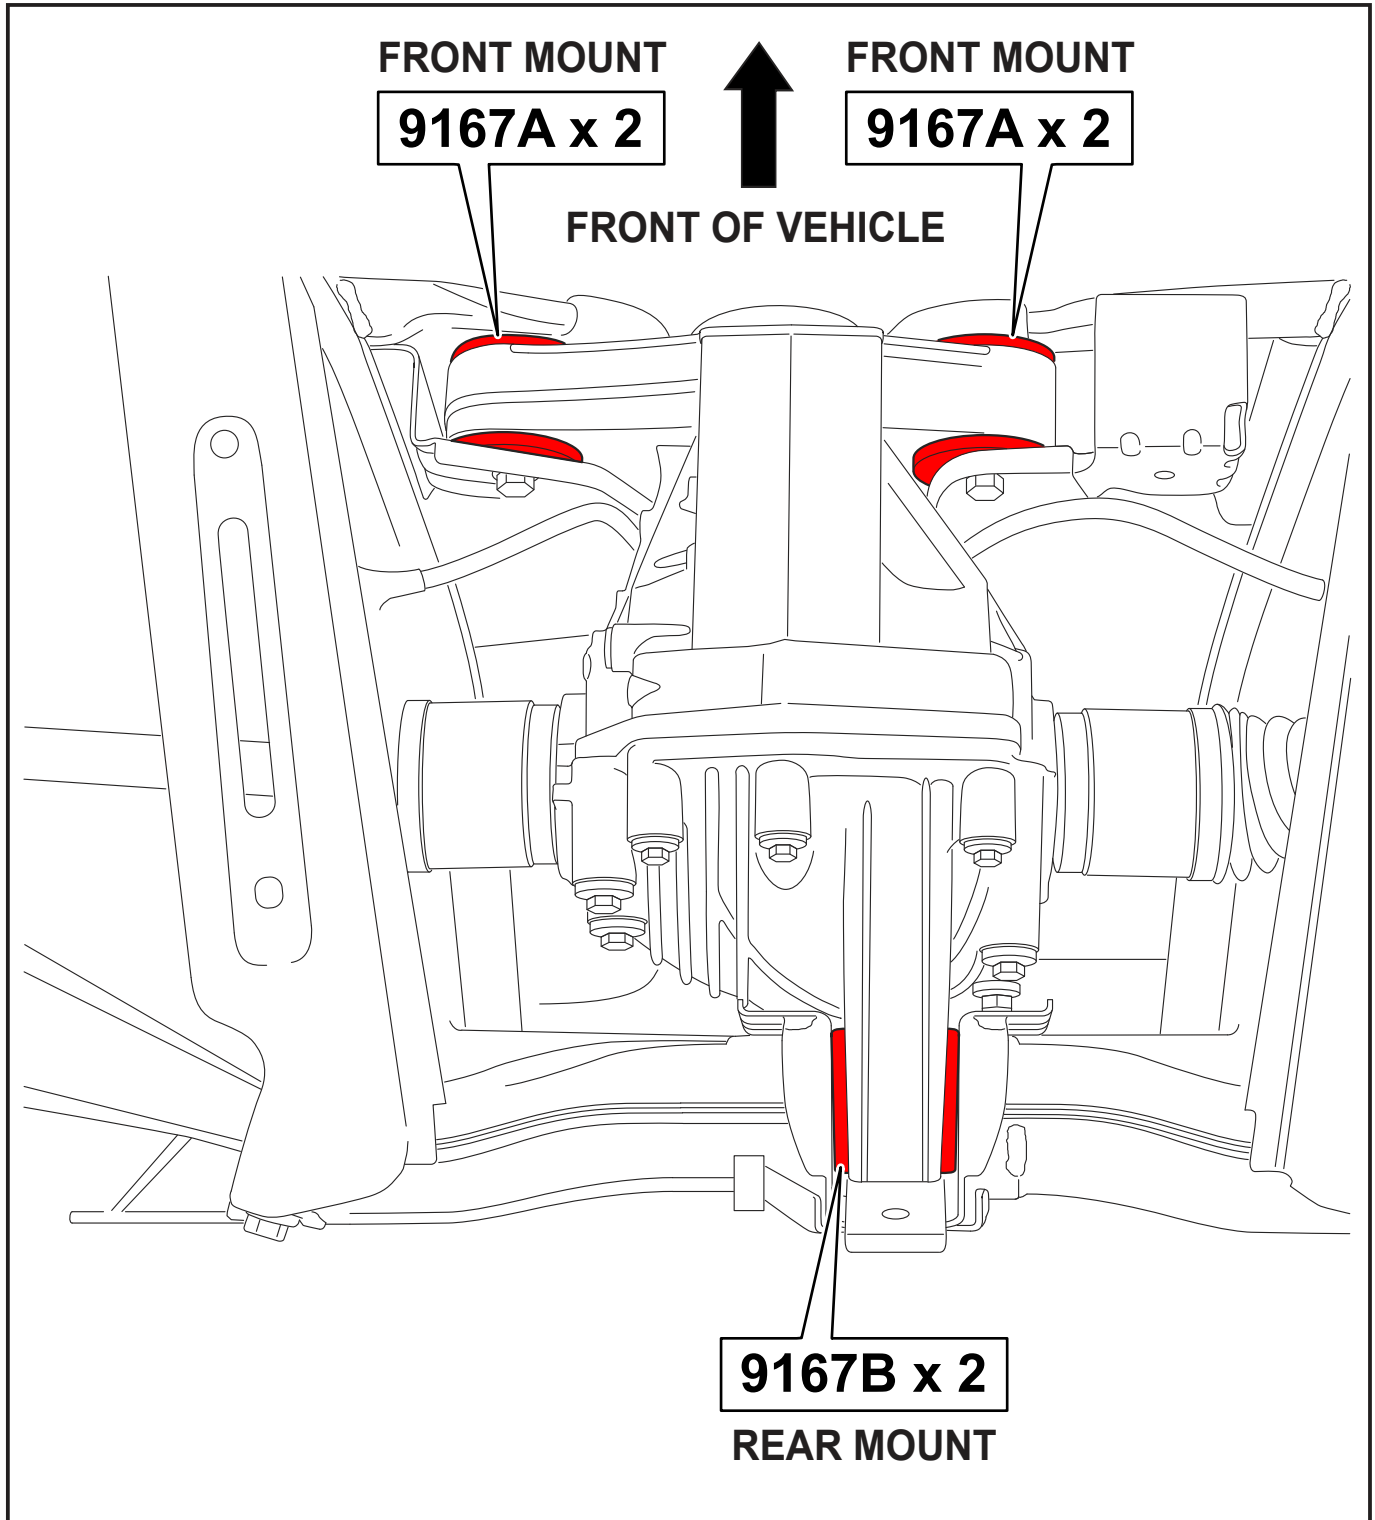

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.