
INSTALLATION INSTRUCTIONS for Model 400-C & 408-C

The Wolo name, with more than twenty years experience, is your guarantee of a superior horn product.

COMPRESSOR

- 1. Install the compressor in the engine compartment in a dry location and safe from engine and exhaust manifold heat.
- 2. To secure the compressor drill one 3/16 in. hole. Mount the compressor **vertically** (air outlet on top). Install the head of the bolt into the slot on the compressor housing (refer to figure A). Secure the compressor to the vehicle using the lock washer/nut provided.

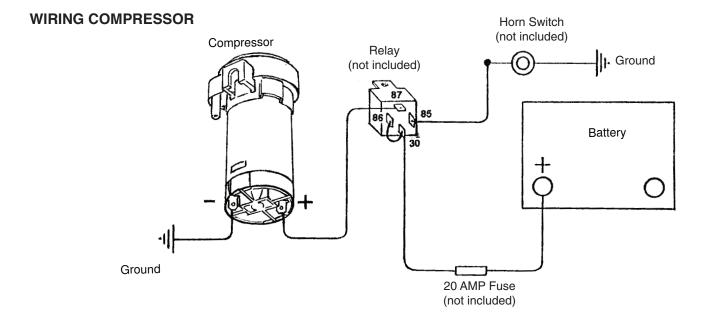

Looking for dependable automotive horns? Rely on Wolo for quality and long-lasting products.