



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



FRONT ROOF - SIDE POD ADD-ON MOUNT

Z330001

ADD-ON ACCESSORY SIDE POD MOUNT / MULTI DIRECTIONAL LED MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

PARTS INCLUDED

- (2) Side Pod Mounting Brackets



LED LIGHTS INCLUDED

Z330001 - No LED Lights Included

HARDWARE INCLUDED

- (2) - m8 x 20 HEX Head Cap Screws
- (2) - m8 Split Lock Washers
- (2) - m8 Hex Nut Stainless Steel
- (8) - 10-32 x 7/8" Button Head Screws
- (8) - #10-32 Nylock Nuts

TOOLS REQUIRED

- Various Socket Set
- Various Wrenches
- Ratchet Tool
- Ratchet Extensions

PAGE 1

INSTALLATION GUIDE

START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.
* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

NOTE

This product is designed and required to be used with ZROADZ Front Roof Mounts. The ZROADZ Side Pod Mounts are an Add-On Accessory.

BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

STEP 1

- 1) Lay out your parts

SEE FIGURE 1



FIG 1



SIDE POD BRACKETS INSTALL - START

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



FIG 2



FIG 3

STEP 2

SEE FIGURE 2

2) Carefully remove the screws from one side of the ZROADZ Front Roof Mount. Make certain to prop the Coupler and LED Light Bar so that they do not fall out of position.

STEP 4

SEE FIGURES 3

4) Set aside the screws so that they can be easily accessed shortly.



FIG 4

FIT SIDE POD MOUNT

STEP 5

SEE FIGURES 4 - 7

5) Put into place the new ZROADZ Side Pod Mount so that it matches and appears as seen in Figure #5 with the mounting surface on the bottom side.



FIG 5

STEP 6

SEE FIGURE 6 - 7

6) Re-Insert the removed screws and secure the ZROADZ Side Pod Mount so that it is mated and fixed to the ZROADZ Front Roof Mount Upright.



FIG 6



FIG 7

SIDE POD MOUNT INSTALLATION - CONTINUED



SIDE POD BRACKETS INSTALL - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



FIG 8



FIG 9

STEP 7

SEE FIGURE 8

7) Tighten Hardware and repeat on opposite side.



FIG 10

STEP 8

SEE FIGURE 9

8) Put into place the LED Light Pods so the Mounting Post and Cradle will sit and mount to the newly installed ZROADZ Side Pod Mount.

ADJUSTS LED POSITION

STEP 9

9) At this point, you will want to position the LED Light Pod to your desired position. It can be positioned to face forward, Sideways, Backwards, and also angled Up or Down.

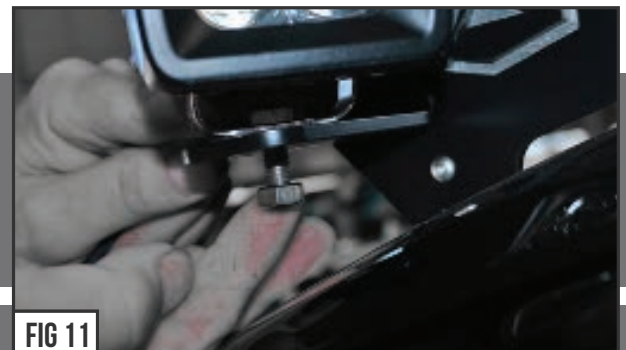


FIG 11

STEPS 10

SEE FIGURE 11 - 12

10) With its final position selected, tighten LED Light Pods and lock it into place by tightening the hardware so that it pinches tight to the ZROADZ Side Pod Mount.

STEP 11 ADJUSTMENT TIPS

11) To adjust the angle of your Light Bar, rotate the LED(s) to adjust the angles till your desired light pattern is reached. You may then tighten the hardware and also mounting bracket to hood and secure everything into place. Note your tape marker under hood to check for proper alignment. Be careful not to over tighten the mounting hardware.

It is best to adjust the angle with the vehicle on level ground with lights facing a wall, garage door or other solid barrier. We recommend checking from a distance of 25'. Your installation is now completed.



FIG 12



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

SIDE POD BRACKETS INSTALL - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



STEP 12

SEE FIGURES 13-15

12) Check over your work for hardware tightness and visual inspection. At this point you want to look over your work and examine the alignments of the LED Pods from side to side.



SIDE POD MOUNT INSTALLATION - COMPLETE