



# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



## REAR MODULAR BAR - MULTI LED / ACCESSORY MOUNT

Z350003

## UNIVERSAL ACCESSORY MOUNT / MULTI LED SIDE MOUNT / LED LIGHT POD SIDE MOUNTS

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

### PARTS INCLUDED

- (1) Universal Accessory Mount
- (1) Bracket Coupler

### INSTALLATION GUIDE

#### START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

### LED LIGHTS INCLUDED

Z350003 - No LED Lights Included

\* LED Lights include a separate hardware kit.

### HARDWARE INCLUDED

Z350003

- (3) - 10 - 32 x 7/16 Button Head Allen Stainless Steel Cap Screw
- (1) - 1/4 - 20 x 1/2 Stainless Steel Hex Bolt
- (1) - 1/4 - 28 x 1 1/2 Socket Head Cap Screw
- (1) - 1/2 Flat Washer

### TOOLS REQUIRED

- Various Socket Set
- Various Wrenches
- Ratchet Tool
- Ratchet Extensions

\* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.  
\* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

#### BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

#### LED LIGHT BRACKET INSTALLATION

- STEP 1** 1) Start by assembling the Coupler and Set Screw.



FIG 1

MOVE ONTO  
STEP 2

#### STEP 2

- 2) Screw the Steel Socket Caps into the Bracket Coupler as seen in Figure #2.

DO NOT BOTTOM OUT as you will need it adjustable.

SEE FIGURE 2



FIG 2



## UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



FIG 3



FIG 4

### STEP 3

SEE FIGURE 3

3) Assemble Bracket Coupler to the Universal Accessory Mount with the (3) Provided 1032 x .500 Button Head Allen Cap Stainless Steel Screws.

### STEP 4

SEE FIGURES 4 & 5

4) Note Figure #4 and how the Coupler Set Screw is located and clocked straight down from the Mounting Tab to 3:00 o'clock.



FIG 5

### STEP 5

SEE FIGURE 5

5) Loosen out the Set Screw so you can easily slide onto Modular Rack Cross Member Tube.

### STEP 6

SEE FIGURE 6 - 8

6) Slip off the Upright Mount so that you can slide the assembled Universal Accessory Mount over the Modular Rack Cross Member Tube.

Put back into place the Upright Mount.

## FIT MOUNT OVER TUBE



FIG 6



FIG 7

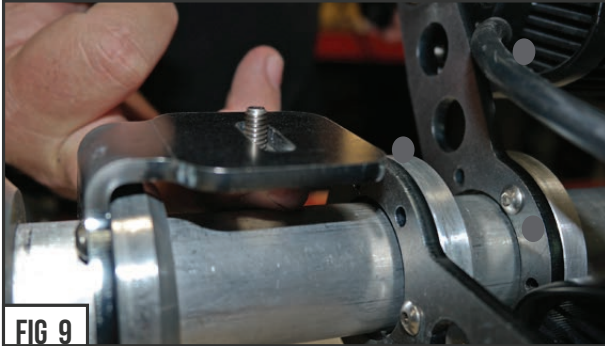


FIG 8



## UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



### NOTE

These next Steps #7 - #10 are specifically for accessory mounting.

If you are intending to mount an LED Light Pod to the Universal Accessory Mount, than move onto Page #4 Step #11.


### STEP 7

SEE FIGURES 9 - 11

7) Insert 1/4 - 20" Bolt Hardware into position from the bottom of the Universal Accessory Mounting Tab.

### STEP 8

8) Insert and install Accessory Mounting component such as GoPro Tri Pod Mount, Quick Release Mount, Mic Stand Mount, ect.

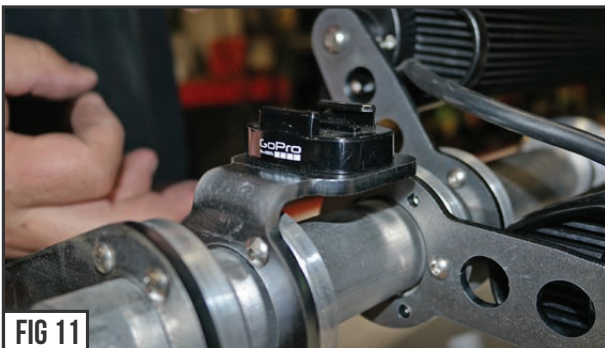

## ACCESSORY MOUNTED

### STEP 9

SEE FIGURES 11 - 13

9) Tighten down till secure. Do not overtighten.

### STEP 10

10) Finally tighten Universal Accessory Mount and lock it into place by tightening the Coupler Set Screw so that it pinches tight to the Modular Rack Cross Member Tube.



UNIVERSAL ACCESSORY MOUNT INSTALLATION - COMPLETE




# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

## UNIVERSAL ACCESSORY MOUNT

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

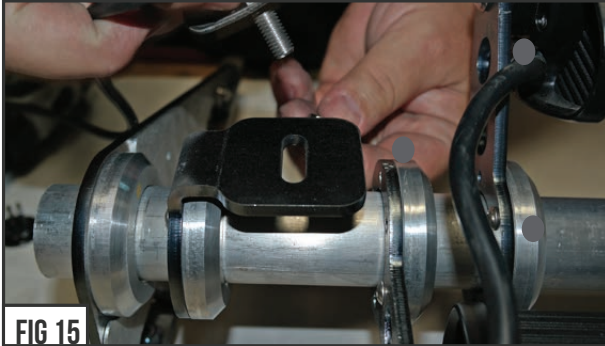

### STEP 11


SEE FIGURE 15

11) Take assembled LED Light Pod with Mounting cradle and hardware, and insert into the Universal Accessory Mounting Tab adjustable mounting slot.

### STEP 12

SEE FIGURES 15 - 17

12) From below the Universal Accessory Mounting Tab, insert and thread a nut till LED Light Pod is secure.

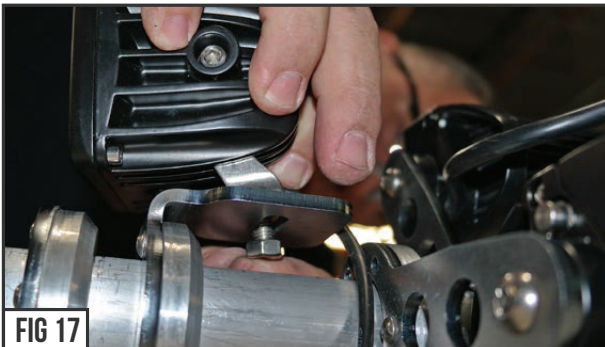

### STEP 13

SEE FIGURE 17 - 19

13) At this point, you will want to position the LED Light Pod to your desired position. It can be positioned to face forward, backwards, sideways, ect. Tighten down till secure.

### STEP 14

14) Finally tighten Universal Accessory Mount and lock it into place by tightening the Coupler Set Screw so that it pinches tight to the Modular Rack Cross Member Tube.

## LED LIGHT POD MOUNTED



## UNIVERSAL ACCESSORY MOUNT INSTALLATION - COMPLETE