

CAUTION!



ALWAYS USE APPROPRIATE EYE PROTECTION (UV ENHANCING GLASSES) WHEN OPERATING LIGHT. Protect eyes during operation. Do not look directly at the light during operation. Exposure to UV light, even for a brief period can damage your eyes.

Operating Instructions

IMPORTANT!

Studies have proven that the use of UV Enhancing Glasses (supplied) allow the user to find and spot leaks easier and faster.


2 hrs.
Running time.

- 1) Put on UV Enhancing Glasses (supplied).
- 2) Turn on lamp by depressing switch.
- 3) Scan the area with the UV lamp.
- 4) Adjust focus/intensity by turning head on lamp.

A fluorescent glow will appear from leaks. For optimum results do not use lamp in bright sunlight and make sure to wear the UV Enhancing Glasses as they will allow you to more clearly see the fluorescent glow of the dye.


Charging Instructions

- 1) Plug the charger into the charging port on the light.
- 2) Plug the charger into an electrical outlet.

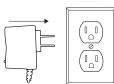





3) After 3 hours the light is charged. Unplug the charger from the outlet and the light.

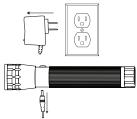

Replacement Parts

- 1) 98006465 UV Phazer BLACK lamp
- 2) 98027303 Charger lithium ion North America
- 3) 98027304 Charger lithium ion EU
- 4) 98027305 Charger lithium ion UK
- 5) 98027302 Adapter Australia
- 6) 98027045 Battery Li-Ion 3.7V

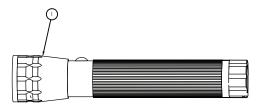

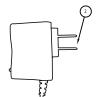





Operating Instructions

