


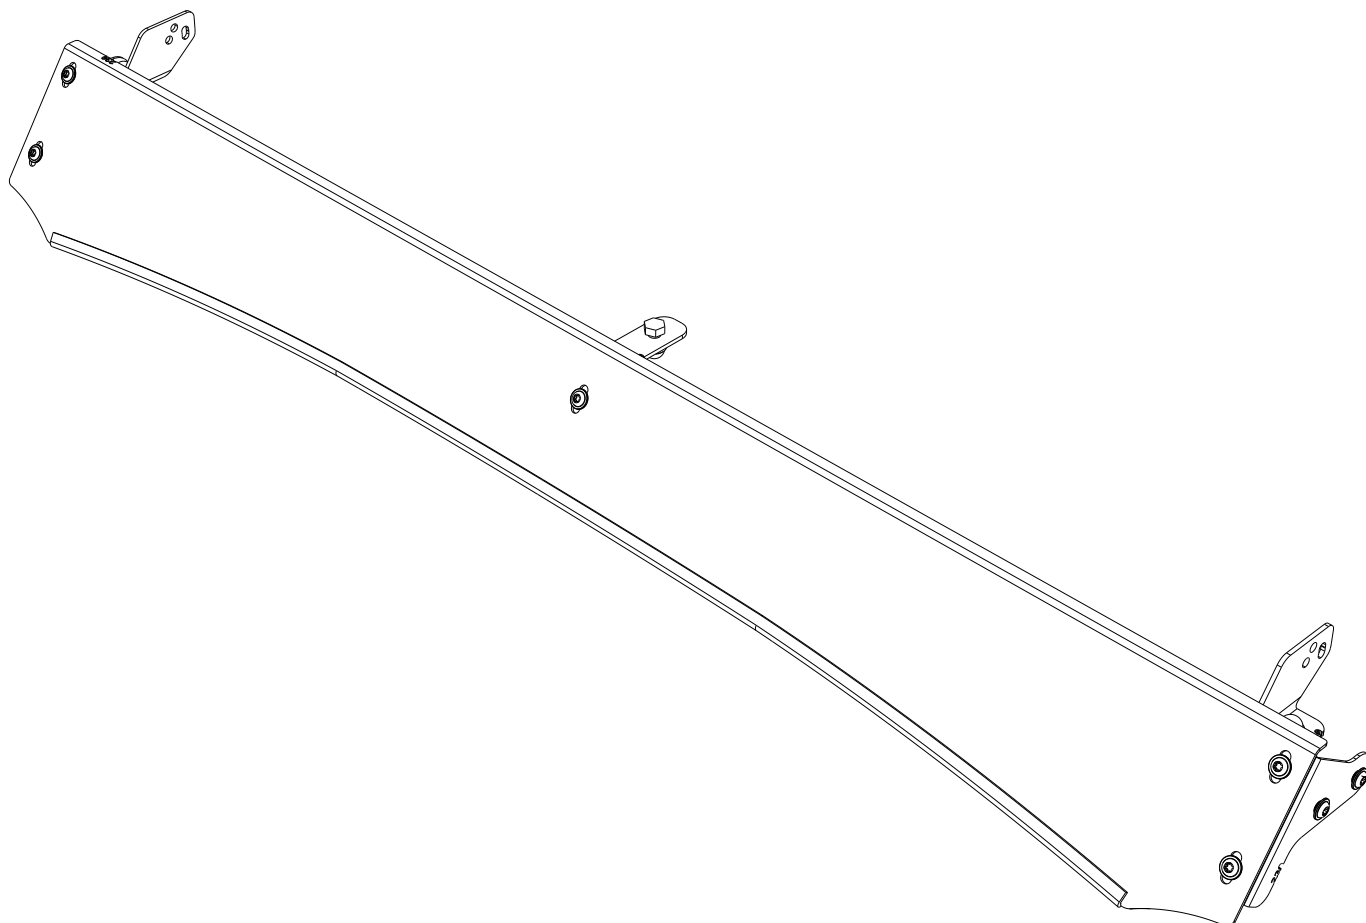

## READ ME !

Thank you for purchasing a Front Runner Ford Ranger Slimsport Rack Wind Fairing.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

## IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

## GET ORGANIZED

## IN THE BOX

|    |     |                                         |
|----|-----|-----------------------------------------|
| 1  | 1 X | Wind Fairing                            |
| 2  | 2 X | Wind Fairing Side Support (1 LH & 1 RH) |
| 3  | 2 X | Light Bar bracket 01 (1 LH & 1 RH)      |
| 4  | 2 X | Light Bar Bracket 02                    |
| 5  | 1 X | Wind Fairing Center Support             |
| 6  | 9 X | M6 x 16 Flange Button Head              |
| 7  | 3 X | M8 x 16 Hex Head Bolt                   |
| 8  | 3 X | M8 Nut Cap                              |
| 9  | 3 X | M8 Nyloc Nut                            |
| 10 | 1 X | Wind Fairing Rubber (1030mm)            |
| 11 | 1 X | Clear Vinyl Strip                       |

## TOOLS NEEDED



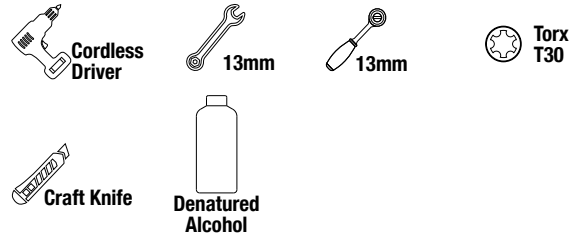


FIGURE 1.1

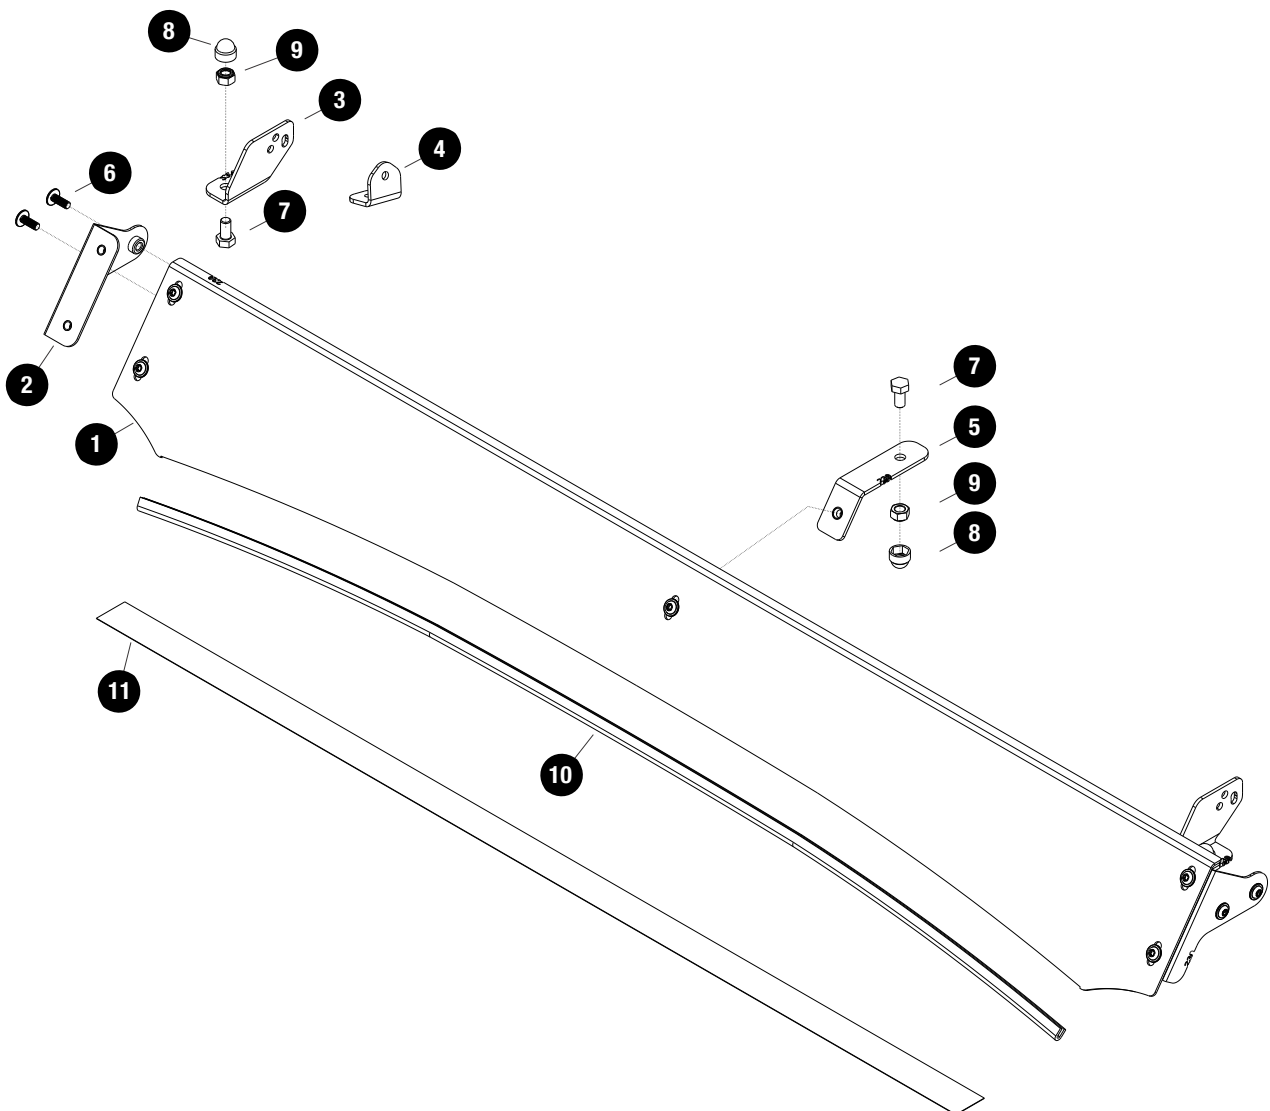


2.1

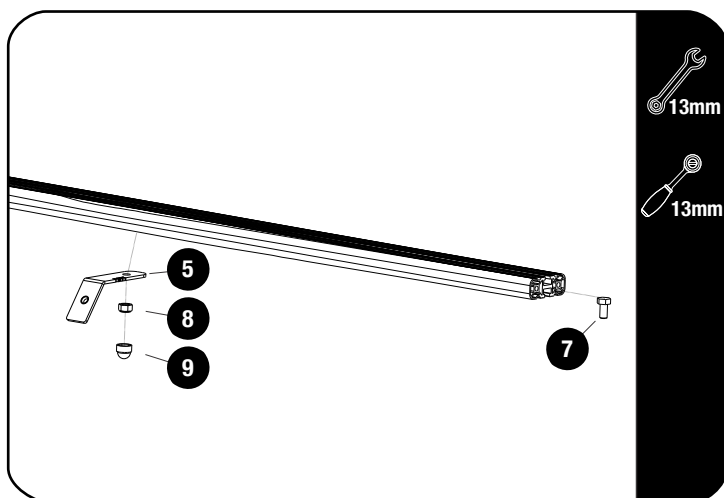

Slide one M8 x 16 Hex Head Bolt (Item 7) into the T-slot of the front slat. Center the mid support bracket in the middle of the slot and secure using M8 Nyloc Nut (Item 8). Fully tighten.

Place a M8 Nut Cap over the Nyloc Nut.


2.2

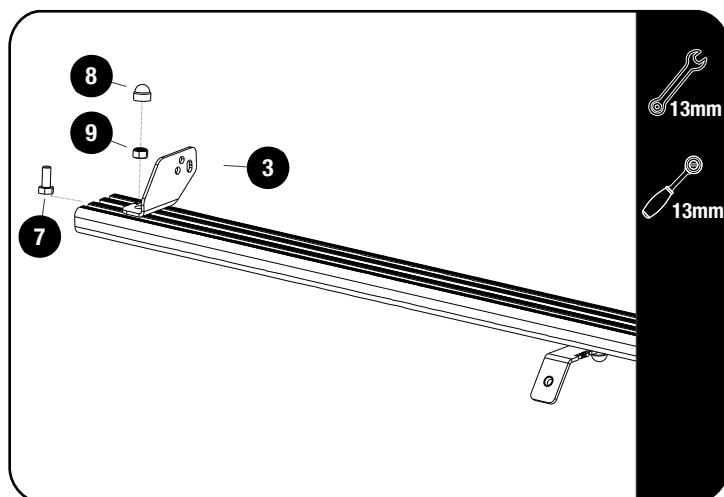

Fit the Light Bar Bracket 01 LH / RH (Item 3) for the 40" Light Bar, using M8x16 Hex Bolt & M8 Nyloc Nut (Items 7 & 9). Fit the light bar and center it on the slat before fully tightening the brackets.

Place M8 Nut Caps (Item 8) over all Hex Bolts.

2.3

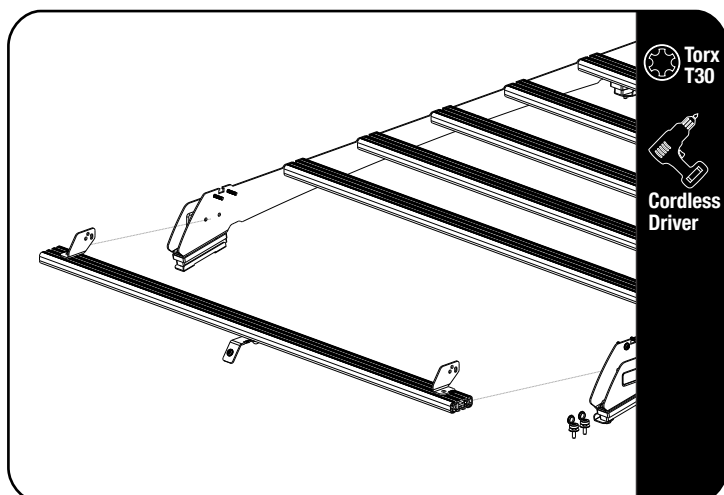

Secure assembly 2.2 to the front two top holes on the foot rails using the fasteners supplied with KSFR002.




**Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.**

## 2


## FIT AND SECURE

2.4

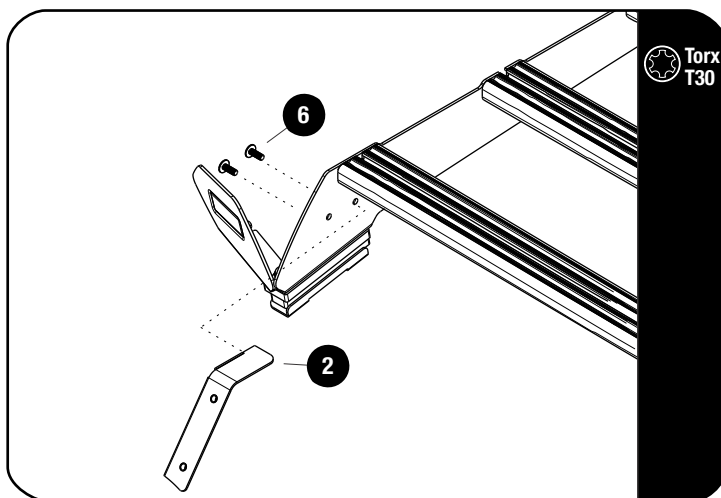

Secure the Wind Fairing Side supports LH / RH (Item 2) to the foot rails bottom holes as shown using M6 x 16 Flange Button Heads (Item 6).

2.5

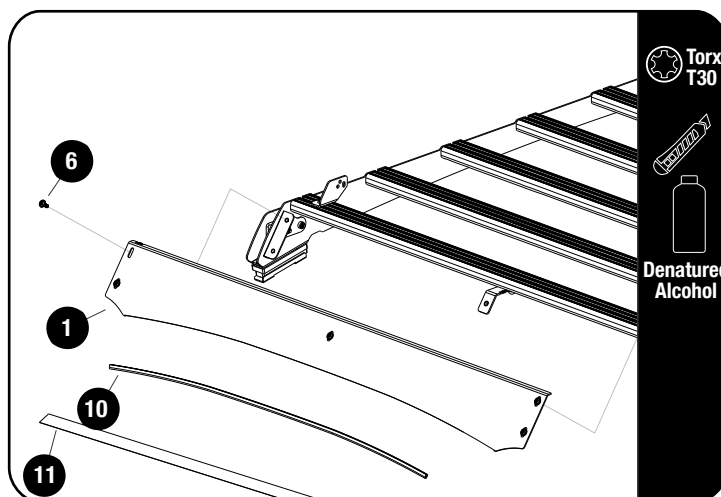

Fit the Wind Fairing Rubber (Item 10) to the Light Bar Wind Fairing (Item 1). Using the notched section as a guide, trim if needed.

Use the Clear Protection Strip (Item 11) included to protect the roof paint work, where the Rubber Trim will be making contact with the roof.

Apply Denatured Alcohol to make sure the roof is clean before applying.

Cut the Clear Protection strip to fit the roof of the Vehicle.

Secure the Light Bar Wind Fairing assembly to the rack assembly, using M8 x 16 Flange Button Heads (Item 6) and fully tighten.

Reposition the dimple plates and fully tighten.

## 3

## FINISH

Congratulations! You did it. Take a step back and admire your work!

## 4

## INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

