


Instruction P/N:EVO5003



Vehicle Application:
 Make: **Jeep**
 Model: **Wrangler (JK)**
 Year: **2012-2015**
 Engine: **3.6L V6**

EXPLODED VIEW

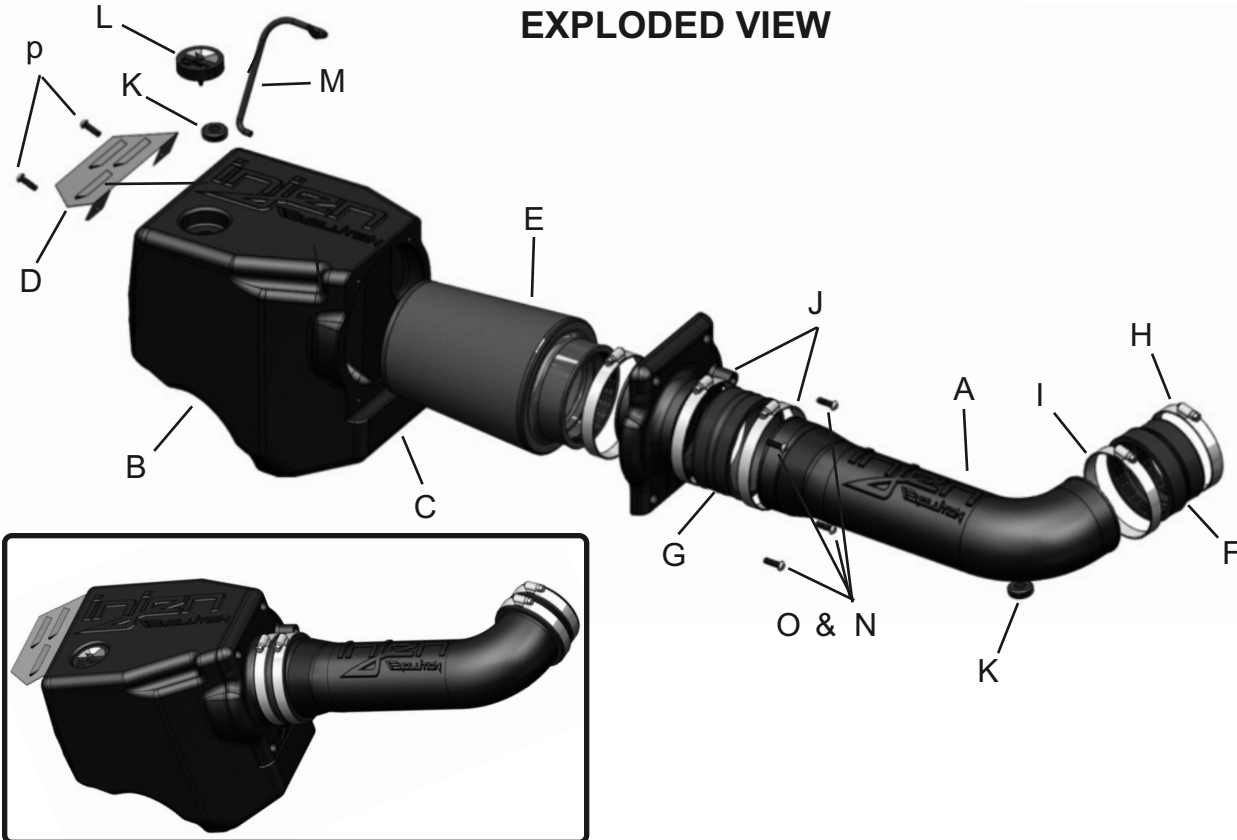

Item	QTY.	P/N	Discription
A	1	#15066	Intake Tube
B	1	#15067	Rotomold Air Box
C	1	#15068	Rotomold Plenum
D	1	#11114	Air Box Shield Air Director
E	1	#1071	Filter
F	1	#3124	3.25"-3.50" Step Hose
G	1	#3168	4.00" Hump hose
H	1	#4004	#48 Clamps
I	1	#4005	#56 Clamp
J	2	#4006	#64 Clamp
K	2	#8026	Grommets
L	1	#15040	Filterminder
M	1	#3198	3mm Vacuum Hose @ 10"L
N	4	#6100	M6x20mm Bolts
O	4	#8047	1/2"OD rubber seal washer
P	2	#6083	M6X10mm Bolts
Q	2	#8014	Zip Tie

TOOLS REQUIRED

- 10mm Ratchet & Socket
- 8mm nut drive
- Allen key
- Flat Blade Screwdriver
- Phillis Screwdriver

WARNING: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE SYSTEM, ENGINE AND COMPONENTS!!!

***Do not attempt to install the intake system while the engine is hot.**

Severe burn could result from touching hot engine components!

NOTE: This intake kit may not work on vehicles with the following aftermarket modifications.

- Aftermarket Intercooler piping
- Aftermarket intercooler
- Turbo upgrade
- Modified body panels
- Suspension & Chassis modifications



The SuperNano-Web filter media is a dry synthetic media that outperforms the competition. The media itself is a proprietary base blend of synthetics and cellulose. Cellulose fibers are larger than synthetic fibers, and have larger spaces between the fibers, causing contaminants to load in the depth of the media and plug the airflow path. This creates higher restriction levels and less capacity. The synthetic fibers in the SuperNano-Web media are submicron in diameter and have small interior fiber spaces, which result in more contaminants being captured on the surface of the media. This can help keep restriction levels low as the filter loads with dirt and containments



If you look at the picture to the left, you can see the Nano-fiber web on top of our base media. That web, or Super-Nano-Web as we like to call it, helps trap smaller particles and protect your engine.

To Clean your filter:

Carefully remove the filter from the housing. Once removed, wipe down the housing using a clean shop towel, being careful not to knock any dirt and/or debris in the air inlet. Your filters can be cleaned by carefully vacuuming the filter media from the dirty side, or by holding the filter with one hand and carefully blowing the filter media at a 45-degree angle from the clean side using low-pressure shop air (15-20 lbs. psi).


****IT IS IMPORTANT TO NOT USE ANY CLEANERS ON THE SUPERNANO-WEB MEDIA OR APPLY ANY OIL!!!***

NOTE: DISCONNECT BATTERY BEFORE INSTALLATION!!!

Instruction Manual P/N:EVO5003



1. Stock intake system shown.

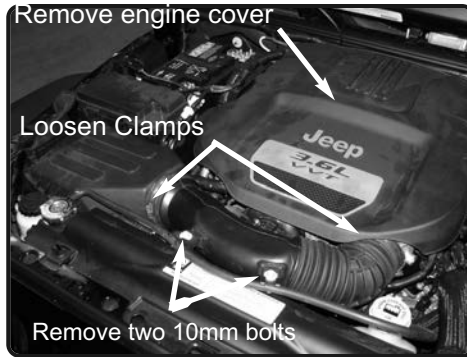

2. Lift up firmly to remove the engine cover. Continue to loosen the two clamps from the throttle body and air duct. Then remove the two 10mm bolts pictured.



3. Remove the air duct from the throttle and air box. An intake air temp sensor will need to be removed on the next step.




4. Locate the intake air temp sensor underneath the factory air duct from figure 7. Disconnect the harness and twist the IAT sensor to remove the sensor from the air duct.



5. Disconnect the crank case breather tube. Then firmly lift up and pull the factory air box assembly out of the engine bay.




6. Place the 3.25"-3.50" step hose and one #48 and #56 clamp onto the throttle body.

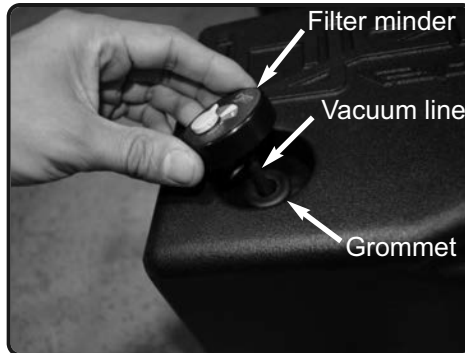

7. Place the grommet onto the 7/8" hole on the air box. Then connect the vacuum line to the filterminder and insert the vacuum line through the grommet.



8. Place the filter onto the air box plenum and secure the filter to the plenum. Connect the vacuum line from the Filterminder in figure 6 to the barbed fitting on top of the filter.

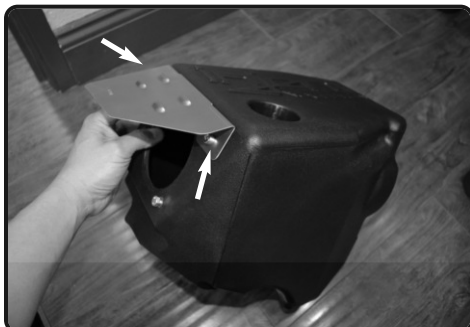

9. Place the Air Box Shield Air Director onto the opening of the air box. Secure the shield to the box with the two supplied M6X10 allen bolts.



10. Insert the filter into the Injen air box. Use four M6X20 bolts and secure the Injen plenum to the Injen air box.



11. Place the Injen air box assembly into the engine bay and line up the pegs below the Injen air box to the factory air box mounting grommets.



12. Place the grommet onto the 7/8" hole on the injen intake pipe and then insert the intake air temp sensor into the grommet


Instruction Manual P/N:EVO5003



13. Place the 4.00" hump hose and two #64 clamps onto the big end of the Injen intake tube. Make sure you slide the hose all the way over onto to tube.



14. Insert the Injen intake tube into the hose on the throttle body and the hump hose on the Injen intake box assembly. Adjust the intake for best fitment and then secure all the clamps.

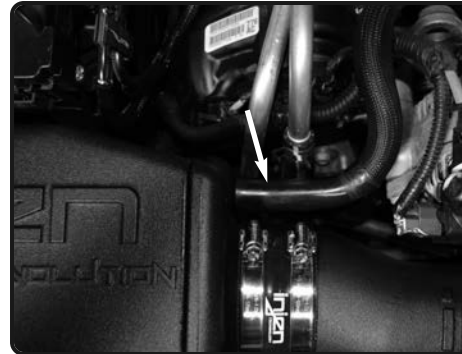

15. Connect the crank case vent tube to the port on the Injen air box assembly.



16. Reconnect the intake air temp sensor harness to the sensor underneath the Injen intake tube.



17. Zip tie the coolant overflow line from the coolant reservoir to the two threaded holes on the fan shroud.



Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**

Test Drive:

1. With the transmission in neutral or park and the parking brake engaged, start the engine. Listen for air leaks or odd noises. If air leaks are detected, secure hoses and connections. For any odd noises, inspect entire system for cause and adjust intake as needed. The Injen intake will function identically to the factory system but will be louder and more powerful.
2. Perform a road test. Listen for odd noises or rattles and fix as necessary.
3. If there are no issues, continue to enjoy your added performance from the Injen performance Intake kit.
4. Injen Technology recommends you periodically check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.

1. Upon completion of the installation, reconnect the negative battery terminal before you start the engine.
2. Align the entire intake system for the best possible fit. Once the intake has been properly fitted continue to tighten all nuts, bolts and clamps.
3. Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.
4. Start the engine and listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that maybe causing leaks or rattles and correct the problem.
5. Check the filter for excessive dirt build up. Clean or replace the filter with an original Injen filter. Congratulations! You have just completed the installation of the best intake system sold on the market. Enjoy the added power and performance of your new intake system.