







BRACKET KIT INSTALLATION

SKU# RB-0701-BK




COMPONENTS		HARDWARE	
DRIVER SIDE Qty: 1 Front Bracket Qty: 1 Rear Bracket	PASSENGER SIDE Qty: 1 Front Bracket Qty: 1 Rear Bracket	Qty: 8 M8 Flange Nut Qty: 18 M8 Flat Washers	Qty: 18 M8 Lock Washers Qty: 8 M8 Hex Head Nuts
TOOLS REQUIRED		INSTALLATION NOTES	
RATCHET TORQUE WRENCH 17MM SOCKET	14MM SOCKET	TORQUE NOTE: Bolts and nuts should be torqued to 15-20 ft lbs. NOTE: Hardware for Board Installation is included. NOTE: Some spare hardware is included.	

Remove all contents from the package and check brackets for any damage. Also, verify that all components and hardware listed above are included before you begin installation.

Read through entire installation manual and installation drawings to ensure that you understand all of the components and hardware before proceeding with installation.

NOTE: When installing the brackets, all hardware must be left loose until all of the items are attached.

Locate factory hole locations in two (4) places per side on the body mount.

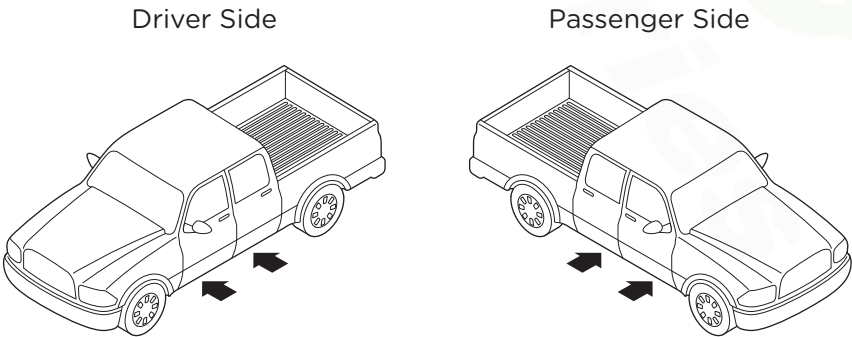


BRACKET ORIENTATION


DRIVER SIDE

Raptor
Series


1. Begin installation on driver side. Position the Front Bracket and the Rear Bracket as shown in diagram.

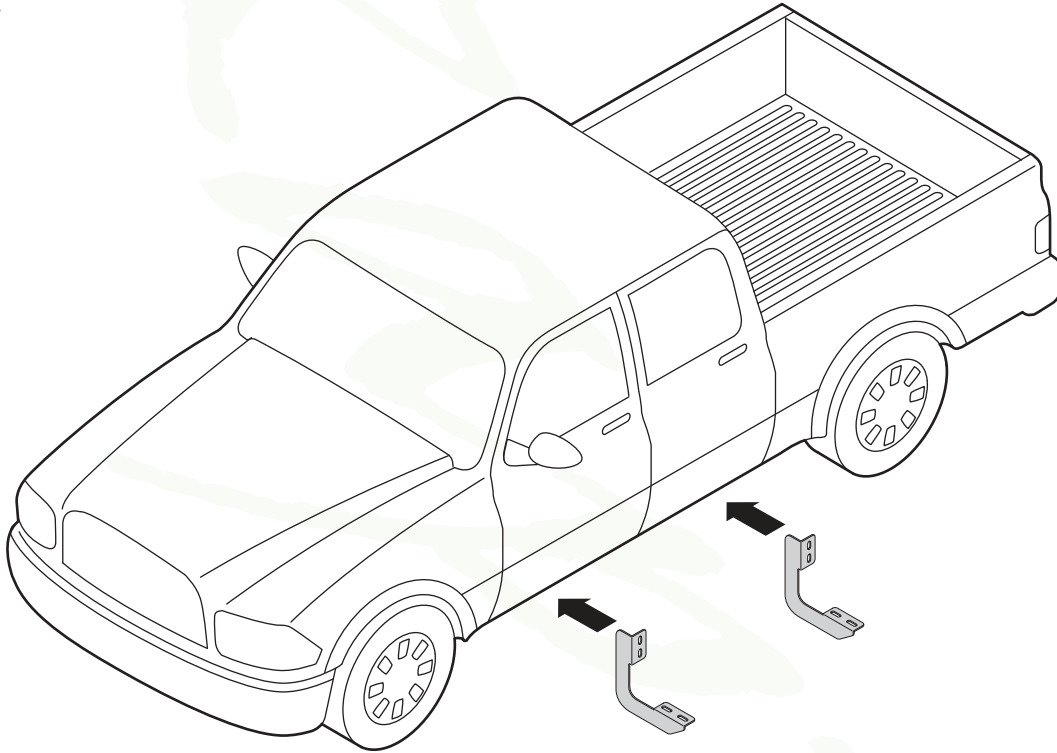

2. Driver Side Front Bracket cradle (2a) and Driver Side Rear Bracket cradle (2b) will face toward the rear of the truck.

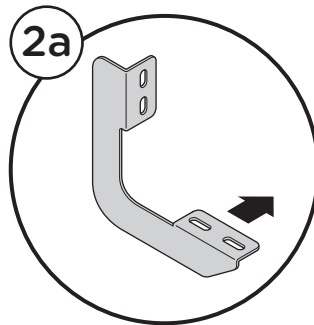

Driver Side
Front Bracket

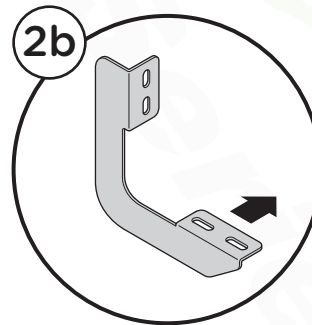


Driver Side
Rear Bracket

BRACKET & BOARD INSTALLATION


DRIVER SIDE

Raptor
Series


3. Fasten the top portion of the Driver Side Front Bracket by using (2) M8 Flange Nuts, (2) M8 Flat Washers and (2) M8 Lock Washers.

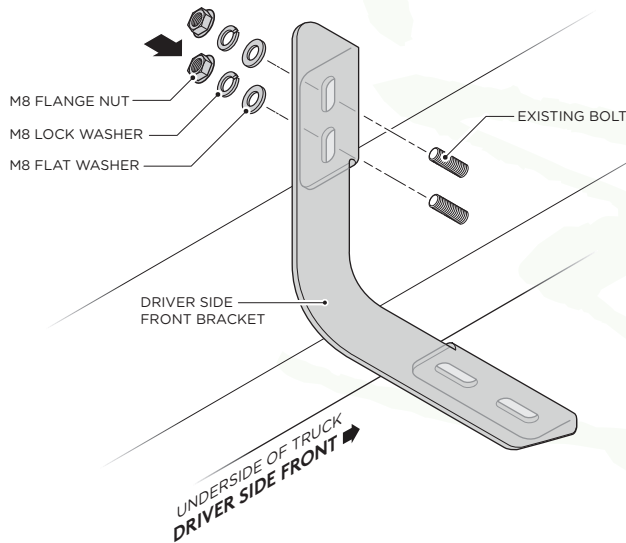


4. Fasten the top portion of the Driver Side Rear Bracket by using (2) M8 Flange Nuts, (2) M8 Flat Washers and (2) M8 Lock Washers.

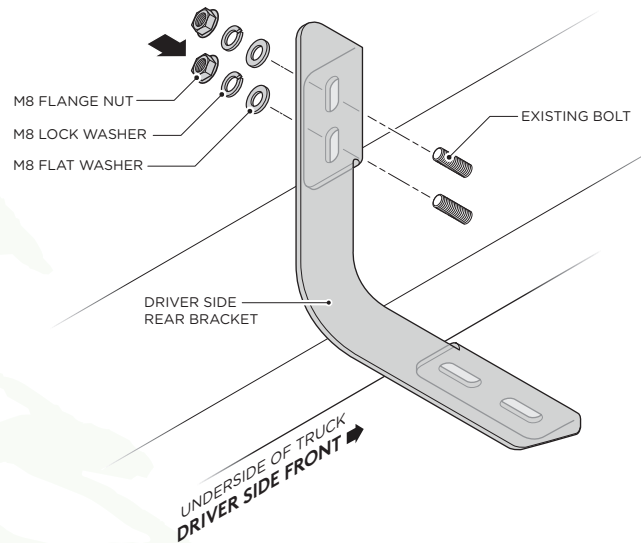

5. Fasten the Running Board to the Driver Side Front Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

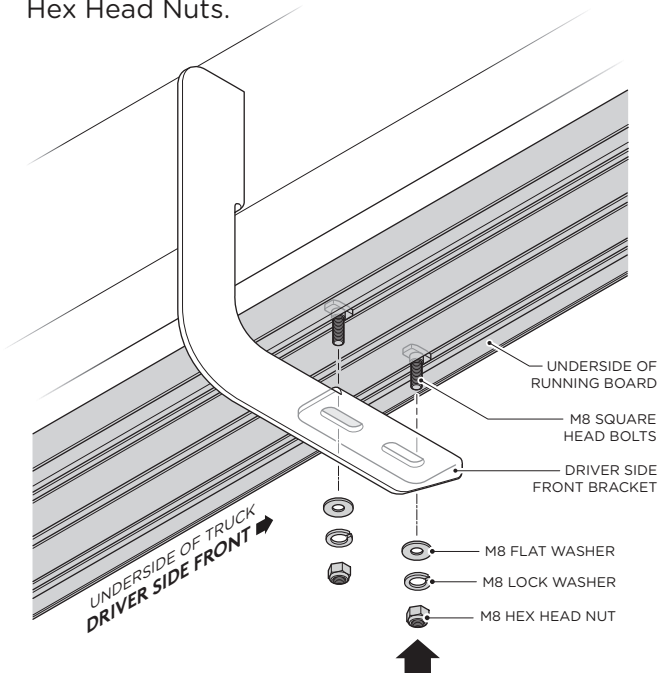

6. Fasten the Running Board to the Driver Side Rear Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

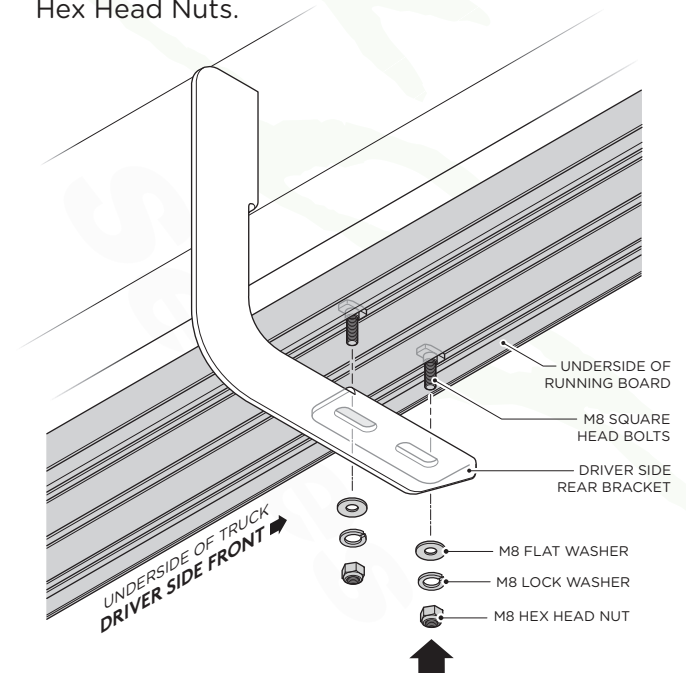


BRACKET ORIENTATION


PASSENGER SIDE

Raptor
Series


1. Begin installation on passenger side. Position the Front Bracket and the Rear Bracket as shown in diagram.

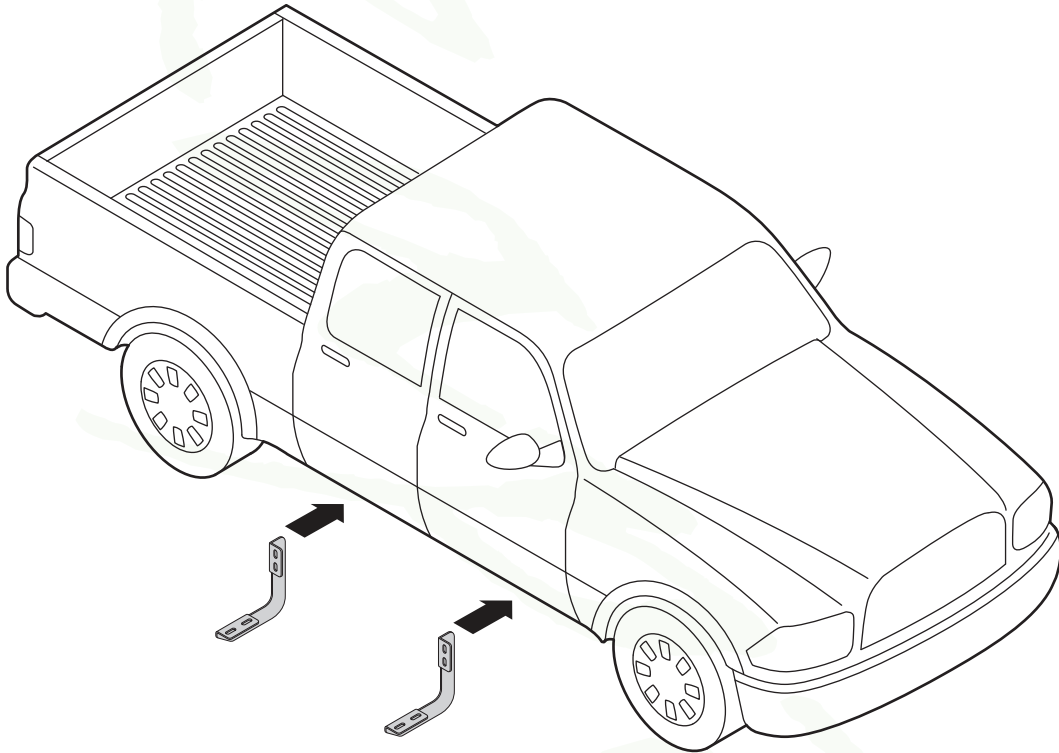

2. Passenger Side Front Bracket cradle (2a) and Passenger Side Rear Bracket cradle (2b) will face toward the front of the truck.

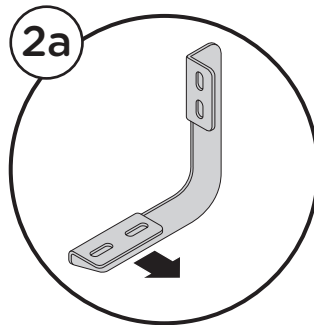

Passenger Side
Front Bracket

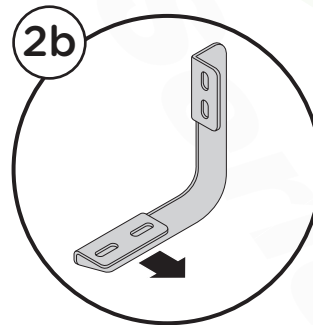


Passenger Side
Rear Bracket

BRACKET & BOARD INSTALLATION


PASSENGER SIDE

Raptor
Series


- 3.** Fasten the top portion of the Passenger Side Front Bracket by using (2) M8 Flange Nuts, (2) M8 Flat Washers and (2) M8 Lock Washers.

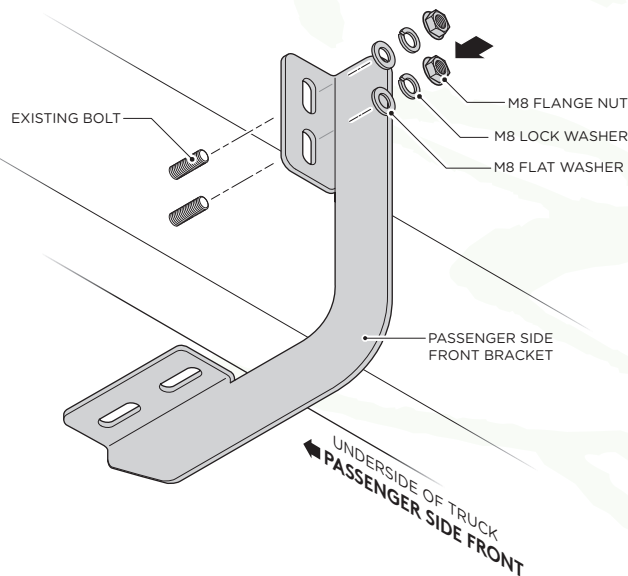


- 4.** Fasten the top portion of the Passenger Side Rear Bracket by using (2) M8 Flange Nuts, (2) M8 Flat Washers and (2) M8 Lock Washers.

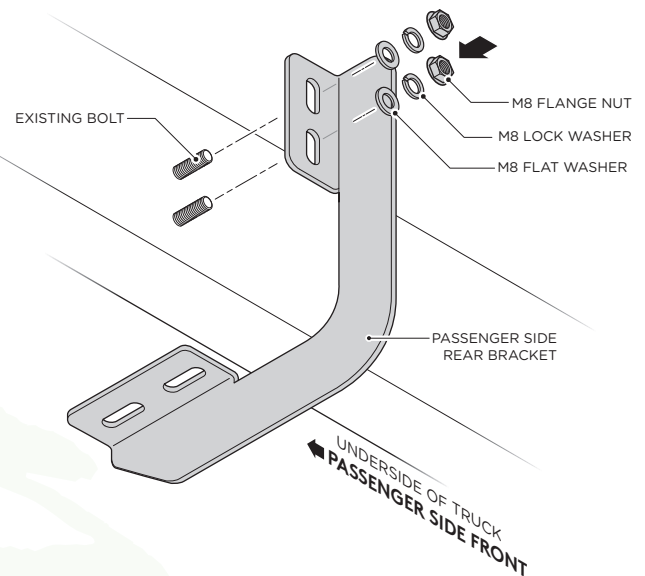

- 5.** Fasten the Running Board to the Passenger Side Front Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

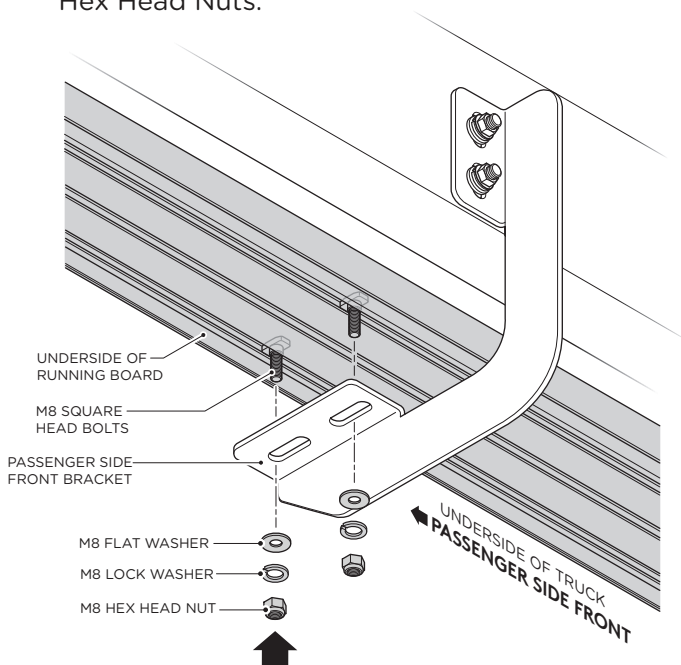

- 6.** Fasten the Running Board to the Passenger Side Rear Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

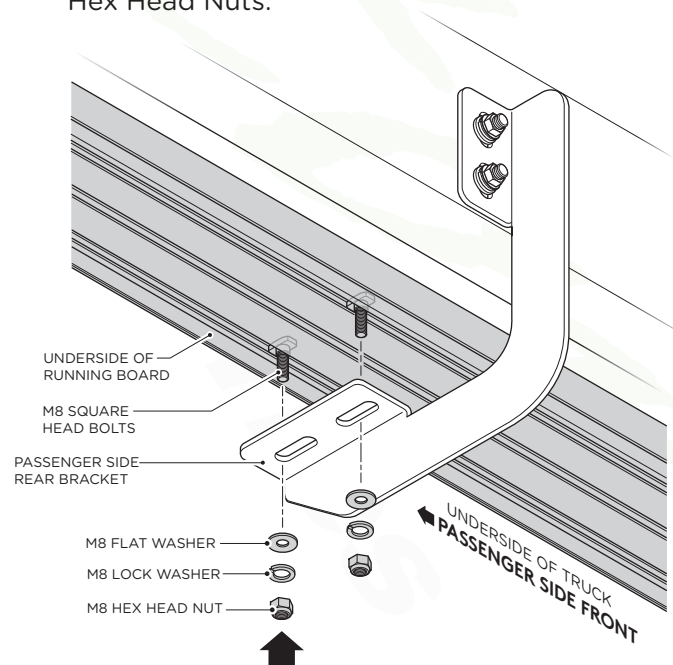

Learn more about running boards and step bars we have.