


RUGGED

OFF ROAD

Step by step instructions and checklist:

Use the proper tools and safety equipment to perform all work. Torque all fasteners to proper specifications and double check work. Align your vehicle after installation.

PN: 95-32855, 95-34855

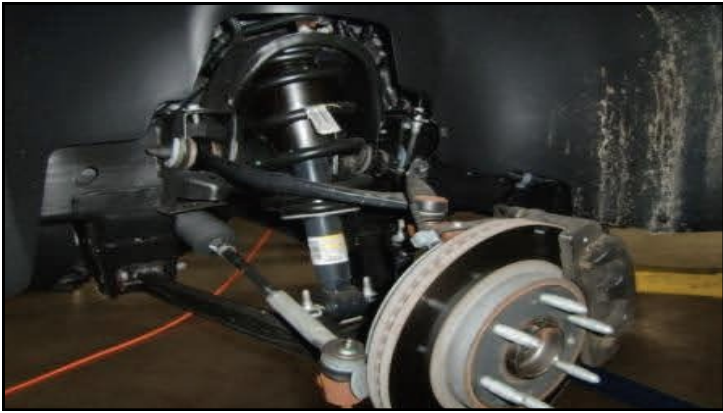

Park vehicle on a clean flat surface and block the rear wheels for safety. Engage the parking brake. Disconnect the vehicle power source at the ground terminal on the battery. Raise the front of the vehicle and support with jack stands at each frame rail behind the lower control arms. Remove the front wheels



Support the lower control arm with a suitable jack. Loosen but do not remove the lower control arm bolts. Disconnect the ABS connector at the frame. Remove the brake line bracket on the upper control arm.



Remove the outer tie rod. Strike the tie rod boss with a dead blow hammer to dislodge the taper.



Remove the sway bar end link from the lower control arm



Remove the harness clips from the top of the strut studs. Remove the upper strut mount from the frame. Remove strut assembly from the vehicle.



Remove the lower strut hardware from the lower control arm



Loosen but do not remove the upper ball joint nut. Strike the ball joint boss with a dead blow hammer to dislodge the taper. Let knuckle hang out of the way making sure to not let the brake line over extend.



Remove the upper control arm cam bolts. Note their orientation and locations. They will need to be reinstalled the same way as removed. Remove the upper control arms from the frame.

NOTE: Actual control arms may vary from the picture depending on the kit received. There are 2 different types, One forged/tubular with bonded bushings and One tubular with poly bushings. Forged arms with bonded bushings skip poly install steps. Also note that the poly arms no longer come with Zerk fittings. They use a one time grease pack.

Lightly coat the poly bushings with provided grease pack and insert into pivot points on control arms. Lightly coat crush sleeves and insert into poly bushings. Coat the outer face of the poly bushings with grease, and place washers onto sleeves. Make sure that when installed, the sleeves hold the washers into place. The washers are made to fit over the sleeve once in the vehicle



Install the new upper control arms to the frame using factory hardware in the same orientation as removed. Do not tighten at this time.



Install the ReadyLIFT® strut extension to the factory strut using **factory hardware**. Torque to **25 ft-lbs**.



Remove the lower nut clips from the strut. Install the completed strut assembly into the vehicle using **M10 flange nuts** at the frame and **M10 X 60mm bolts, washers, and nuts** for the lower control arm. Do not tighten at this time.




Attach the upper ball joint to the knuckle using provided hardware. Torque to **85 ft-lbs**.



Install the brake line bracket to the control arm using **M6 nut and washer**. Torque to **5 ft-lbs**.



Reconnect the ABS harness.

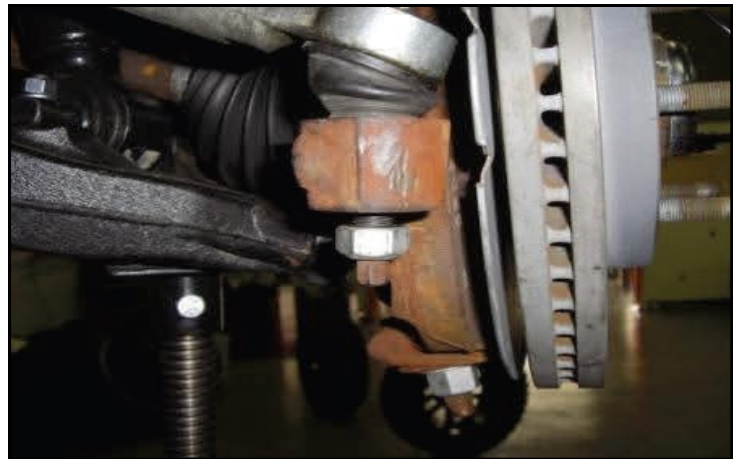


Install the outer tie rod to the knuckle using factory hardware. Torque to **65 ft-lbs**.


4WD STEPS 2014-18 TRUCK




Remove the plastic gravel guard and support the front differential with a suitable jack.

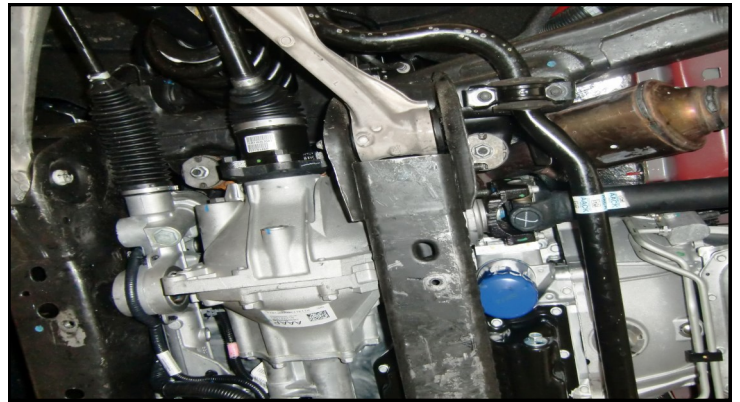


Locate the 4 mounting points of the differential hangers to the frame. These points will not be mounted to the differential directly, but to the hangers that hold the differential.

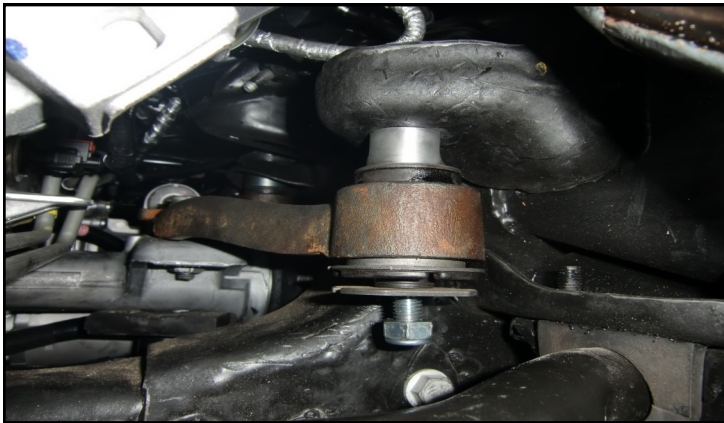


Remove the bolts holding the hangers to the frame. Lower the differential down until you can insert the provided diff drops into place. The **large** spacers go in between the front side of the hanger and frame and the **small** spacers go in between the rear side of the hanger and frame. Install using

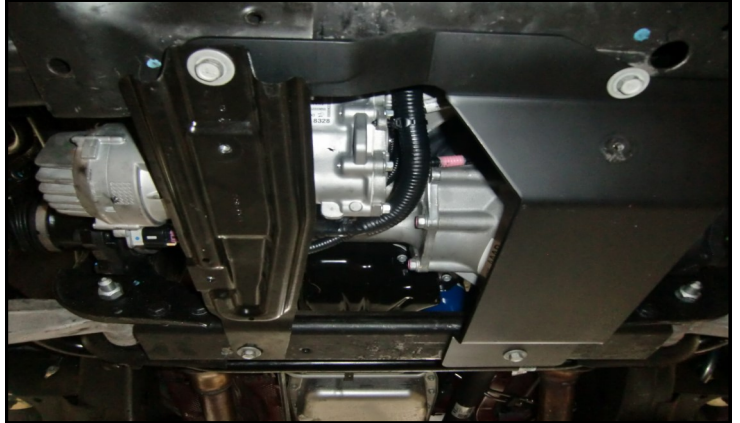


Install the provided skid plate to the frame using **factory hardware**. Swap the metal bracket from the passenger side of the gravel guard back to the frame. Discard the driver side. Torque to **5 ft-lbs**. Make sure to not over tighten and strip out the frame holes. These are self tapping bolts.

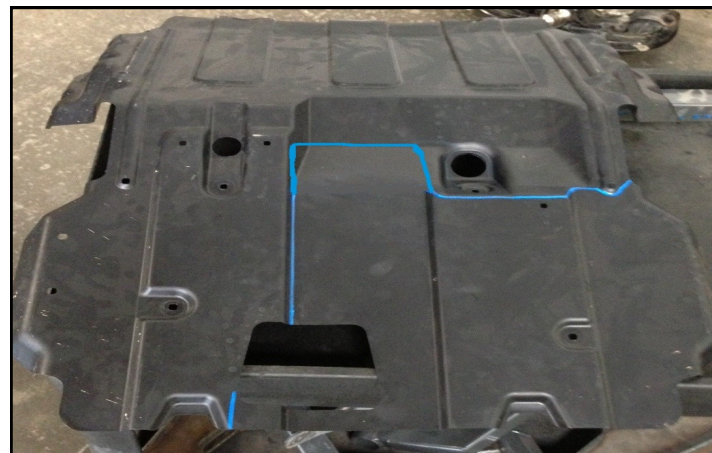

The factory gravel guard will need to be trimmed to fit back onto the vehicle. Mark the gravel guard as shown and use a suitable cutting device, trim the plastic as shown. This is a guide and you may need to trim more after test fitting.

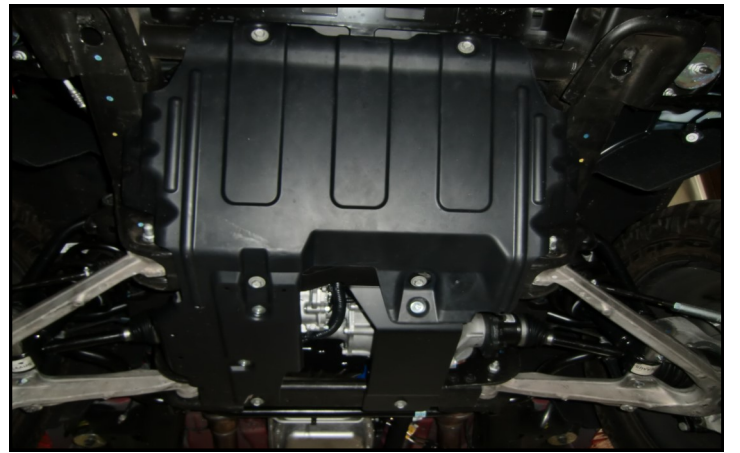

Install the gravel guard using **factory hardware** on/in the original frame and bracket, and provided **M6 x 20mm bolt, washers and nut**. Torque to **5 ft-lbs**. Make sure to not over tighten and strip out the frame holes. These are self tapping bolts

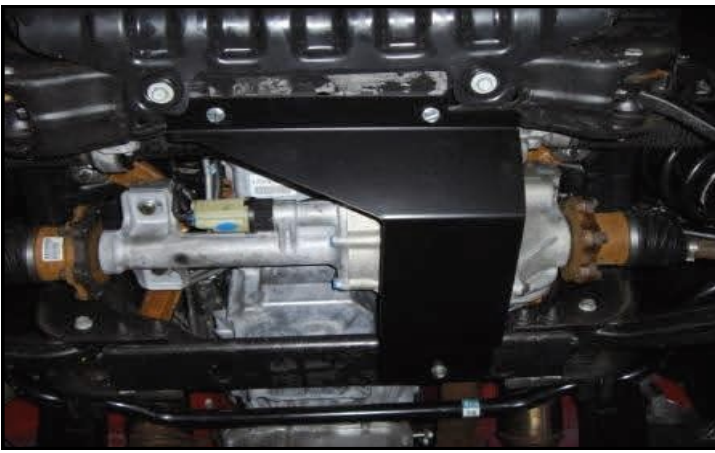

Install the ReadyLIFT® skid plate to the frame cross members using the provided self tapping bolts. Do not over tighten to keep from stripping out the holes in the frame.

REAR BLOCK INSTALL

Block the front wheels for safety. Jack the rear up and place jack stands in front of the lower front spring hangers. Support the axle with a suitable jack.



Remove the ABS harness clip at the frame.



Remove the rear shock.



Slightly loosen but do not remove the driver side u-bolts. Remove the passenger side u-bolts completely and discard. Lower the axle enough to remove the factory lift block making sure that all brake lines and ABS lines do not get over extended.



To install the new block passenger side lift block. Make sure the small end of the block is facing the front of the vehicle. Raise the axle and the block up to the spring while aligning the center pin. Install the **provided u-bolts, and nuts**. Snug the u-bolt nuts but do not fully tighten at this time. Repeat steps for driver side.



Install the provided shock extension to the frame using factory hardware. Install the factory shock to the extension using **M14 x 75mm bolts, washers, and nuts**. Install the lower shock to the axle using **factory hardware**. Do not tighten at this time.



Run the ABS line up next to the block, zip tie to the u-bolts to use as a guide. Reinstall the ABS clip back to the frame. You may need to lube the ABS rubber sleeve to slide it further up to line and back into the clip.

Install the rear wheels and lower vehicle to the ground. Torque the lug nuts to the wheel manufacturer specs. Jounce the vehicle to settle to the new ride height. Torque the u-bolts to **110 ft-lbs**, and all shock hardware to **65 ft-lbs**.

Attach the vehicle power source. Turn the steering wheel lock to lock making sure there is proper clearances between all moving suspension components and brake/ABS lines throughout the suspension cycles.