



WARNING!

Failure to install or use this product according to manufacturer's recommendations may result in property damage, serious injury, and/or death to those you are seeking to protect!



Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.

- Proper installation combined with operator training in the use, care, and maintenance of emergency safety devices are essential to ensure the safety of you and those you are trying to protect.
- Exercise caution when working with live electrical connections.
- This product must be properly grounded. Inadequate grounding and/or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or severe vehicle damage, including fire.
- Proper placement and installation are vital to the performance of this safety device. Install this product so that output performance of the system is maximized and the controls are placed within convenient reach of the operator so that s/he can operate the system without losing eye contact with the roadway.
- Do not install this product or route any wires in the deployment area of an air bag. Equipment mounted or located in an air bag deployment area may reduce the effectiveness of the air bag or become a projectile that could cause serious personal injury or death. Refer to the vehicle owner's manual for the air bag deployment area. It is the responsibility of the user/operator to determine a suitable mounting location ensuring the safety of all passengers inside the vehicle particularly avoiding areas of potential head impact.
- It is the responsibility of the vehicle operator to ensure during use that all features of this product work correctly. In use, the vehicle operator should ensure the projection of the warning signal is not blocked by vehicle components (i.e., open trunks or compartment doors), people, vehicles, or other obstructions.
- The use of this or any other safety device does not ensure all drivers can or will observe or react to a warning signal. Never take the right-of-way for granted. It is your responsibility to be sure you can proceed safely before entering an intersection, driving against traffic, responding at a high rate of speed, walking on or around traffic lanes.
- This equipment is intended for use by authorized personnel only. The user is responsible for understanding and obeying all laws regarding warning signal devices. Therefore, the user should check all applicable city, state, and federal laws and regulations. The manufacturer assumes no liability for any loss resulting from the use of this safety device.

Specifications:

Size:	5545X, 5545XX 5550X, 5550XX 5550XXX	
	5545X-HBT, 5545XX-HBT 5550X-HBT, 5550XX-HBT 5550XXX-HBT	11" x 8" x 2.5"
	5545X-VM, 5545XX-VM 5550X-VM, 5550XX-VM 5550XXX-VM	11" x 8" x 3"

Input Voltage: 12 to 24 VDC systems

Weight:

Current Draw:

5545: 1.48 Amps Max (@ 12VDC Nominal)
18.9 Watts Max (@ 12VDC Nominal)

5550: 4.9 Amps Max (@ 12VDC Nominal)
62.7 Watts Max (@ 12VDC Nominal)

Flash Rate:

See Flash Pattern Chart

Temp. Range:

-22°F to +122°F

-30°C to +50°C

Mount	5545	5550
Permanent Mount	approx. 1.9 lbs	approx. 2.0 lbs
HBT Mount	approx 2.5 lbs	approx. 4.0 lbs
Vacuum-Magnet Mount	approx. 3.3 lbs	approx. 3.6 lbs

Caution: When drilling into any vehicle surface, make sure the area is free from any electrical wires, fuel lines, vehicle upholstery, etc. that could be damaged

Installation & Mounting:

Important! This unit is a safety device, and it must be connected to its own separate, fused power point to assure its continued operation should any other electrical accessory fail.

Carefully remove the microbar and place it on a flat surface. Examine the unit for transit damage, and locate all parts. If damage is found, or parts are missing, contact the transit company or ECCO. Do not use damaged or broken parts.

Permanent Mounting:

- Select the desired location on a flat surface for the microbar to be mounted. The visibility of the flash and ease of wiring access should be taken into consideration in the selection of the mounting location.
- Remove lens screws, then remove lens. Use the four holes in the corners of the base to mark the mounting hole locations.
- Drill the holes using a 7/32" drill size.
- A fifth hole may be drilled for wire access.
- Connect the power wires as shown in the wiring section (see Figure 6).
- (Optional) Place the foam gasket between the microbar and mounting surface.
- Mount the microbar with M5 hardware provided.
- Replace the lens and fasten with the lens screws.

Vacuum-Magnet Mount:

The Vacuum-Magnet Mount feature includes a suction cup on the bottom of the microbar, with a magnet inside of the suction cup, for a secure, temporary mount. The microbar should be placed in the center of the roof where the least amount of curvature occurs. Before installing, make sure the mounting surface is clean and there is no debris on the bottom of the microbar or on the roof of the vehicle, which could reduce the holding power of the suction cup and magnet. Place and remove the microbar without sliding to avoid scratching the paint on the vehicle. After placement, the microbar should adhere firmly to the surface. If the unit slides or moves easily, a proper installation has not been obtained. To release the vacuum, lift the tab to release the airtlock (see Figure 1). To protect the Vacuum-Magnet Mount assembly, return microbar to the box when not in use. **Do not attempt to attach the microbar to an ice-covered surface.**

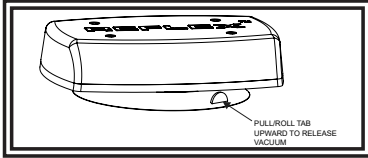


FIGURE 1



WARNING!

Maximum recommended vehicle speed for safe operation using the Vacuum Mount model is 65 mph (104 km/h), when fitted to the center of a vehicle roof of steel construction. Higher speeds could cause the mount to fail, resulting in the microbar flying off of the vehicle, which could cause damage to other vehicles, and injury or death to the passengers. The vacuum-magnet mount is not intended as a permanent mounting for the microbar. The vacuum-magnet mount unit must be mounted on a flat smooth magnetic surface (i.e. no fiberglass, ribbed style roofs, etc.). Ensure that the magnet is kept clean.



WARNING!

Failure to follow these instructions can result in fire or injury from excessive heat build up.

Operator is responsible for ensuring auxiliary plug fits correctly into auxiliary power plug outlet used.

For proper operation, verify auxiliary power outlet circuit is rated to supply a minimum of 10 amps. (See specifications section for rated current in amperes). Do not exceed the current rating for the auxiliary power outlet recommended by vehicle manufacturer.

Keep auxiliary plug and outlet clean and free of debris.

Do not use the auxiliary plug when wet.

Insert auxiliary plug fully into the outlet for proper connection.

Grasp auxiliary plug, NOT cord, to remove from outlet.

Remove auxiliary plug completely from outlet when light is not in use.

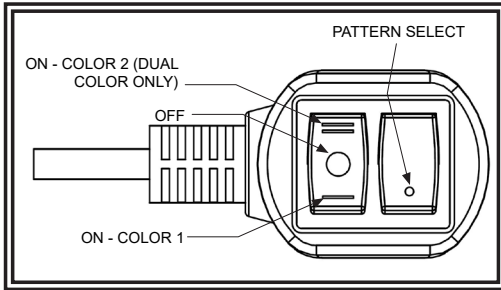


FIGURE 2

Note: Operating the microbar without the lens installed on this product will result in damage that will not be covered under warranty.

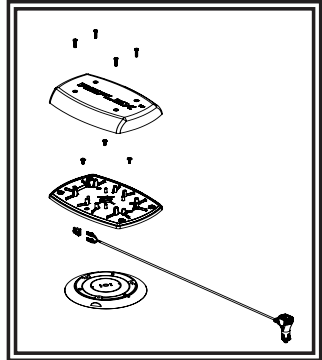


FIGURE 3

Vacuum-Magnet Mount Installation:

1. Remove lens screws, then remove lens.
2. Unclip and remove wire harness.
3. Insert the pinned end of the cigarette adapter cable through the wire harness hole from the bottom of the base.
4. Turn pins crimp side up, and insert pins into connector as shown in Figure 4.
5. Place zip-tie 1.5" from base of the connector shown in Figure 5. Zip-tie must not be able to slide on cord. Trim excess zip-tie.
6. Clip the connector to the PCA board and pull slack until zip-tie touches base.
7. With the cigarette plug to the left, unscrew the two modules farthest away from you and the PCA board in dual color versions, to gain access to the vacuum mounting holes.
8. Position the vacuum magnet and secure in place with included hardware.
9. Re-install the modules, PCA board and lens, reverse of removal. Slide the o-ring onto screw until it reaches head, before securing into lens.

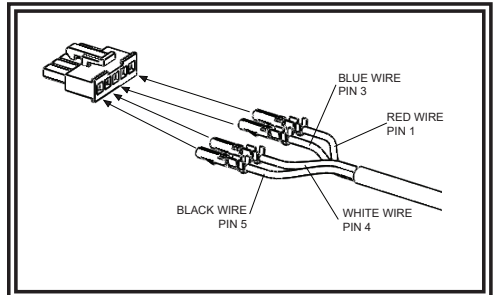


FIGURE 4

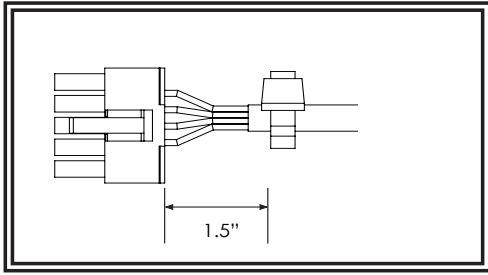


FIGURE 5

Wiring:

Important! Disable power before wiring up the microbar.

The wiring for the permanent mount microbar is as shown in Figure 6. All wiring should be a minimum of 18AWG. The positive line must have a 5 amp fuse, as shown. A switch may be used to control the on/off function.

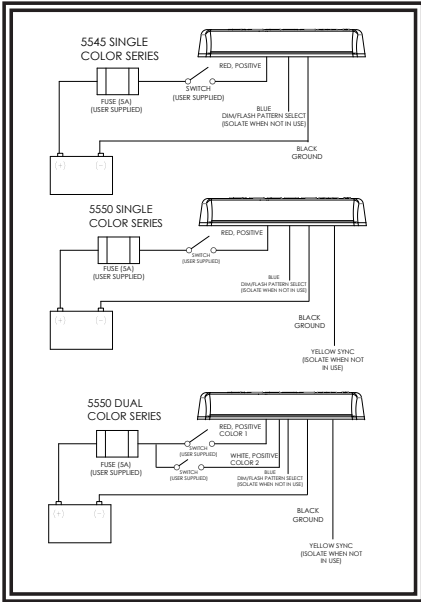


FIGURE 6

Flash Pattern Selection:

To select a flash pattern, apply power to the RED or WHITE or both RED and WHITE wires. (WHITE wire is for dual color only). Momentarily touch the BLUE wire to the BLACK wire (ground) for less than 1 second to advance to the next pattern. To go back to the previous pattern, momentarily touch the BLUE wire to the BLACK wire for approximately 2 - 3 seconds. To force the flash pattern to STEADY, momentarily touch the BLUE wire to the BLACK wire for approximately 5 seconds. When Vacuum-Magnet Mount is being used, the BLUE wire is connected to ground via the momentary switch on the cigarette plug as shown in FIGURE 2. For more detail about flash patterns, please see the SINGLE and DUAL COLOR FLASH PATTERN TABLES below.

SYNCHRONIZATION:

The permanent mount microbars sync with compatible ECCO products via the yellow wire:

1. Determine the desired style of flash pattern for each unit and set each unit individually (without the yellow wires connected together) to avoid confusion. It is also strongly recommended that the same style of flash pattern be used on all units to produce the most effective warning pattern. (NOTE: Phases A and B for each style of flash pattern in the table denote the relative timing between units connected in a synchronizing installation. To operate simultaneously, each unit must be set to the same phase (A + A or B + B); to operate alternately, units must be set to have the opposite phase (A + B or B + A)).
2. Connect the yellow sync wires together and check that the units are flashing in a synchronized manner as expected. If a pattern on one unit appears incorrect, the blue pattern select wire can be used to cycle forward or backward on that individual unit until the correct pattern is selected. Note: This will only change the pattern in the one unit and will not affect the other units connected to the yellow sync wire.
3. If the yellow wire is unused, leave unconnected and insulated.

DIMMING FEATURE:

To activate the dimming feature of this microbar, attach the BLUE wire to the RED wire (+BATT).

DUAL COLOR FLASH PATTERN TABLE
 TABLE DE PATRONES DE PARPADEO DE COLOR DOBLE
 TABLEAU DES EFFETS DE CLIGNOTEMENT DE BICOLOR

Red Wire	Pattern		Description	FPM	Sync	Phase	SAE J845				CA T13			ECE R65			
	White Wire	Red + White Wire					A	B	W	R	A	B	R	A	B	R	
							Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	Class E	Class E	Class E	
1		1	Single - Color 1	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
2		2	Single - Color 1	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
		3	Single Split - Color 1 & 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
		4	Single Split - Color 1 & 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
1	5	5	Single - Color 2	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
2	6	6	Single - Color 2	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
3	3	7	Single - Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
4	4	8	Single - Color 1 then 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
5	5	9	Single Split - Alternating Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
6		10	Single - Color 1	375	Y	A	-	-	-	-	-	-	-	-	-	-	
7		11	Single - Color 1	375	Y	B	-	-	-	-	-	-	-	-	-	-	
		12	Single Split - Color 1 & 2	375	Y	A	-	-	-	-	-	-	-	-	-	-	
		13	Single Split - Color 1 & 2	375	Y	B	-	-	-	-	-	-	-	-	-	-	
6		14	Single - Color 2	375	Y	A	-	-	-	-	-	-	-	-	-	-	
		7	15	Single - Color 2	375	Y	B	-	-	-	-	-	-	-	-	-	
8	8	16	Single - Color 1 then 2	375	Y	A	-	-	-	-	-	-	-	-	-	-	
9	9	17	Single - Color 1 then 2	375	Y	B	-	-	-	-	-	-	-	-	-	-	
10	10	18	Single Split - Alternating Color 1 then 2	375	Y	A	-	-	-	-	-	-	-	-	-	-	
11		19	Double - Color 1	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
12		20	Double - Color 1	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
		21	Double Split - Color 1 & 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
		22	Double Split - Color 1 & 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
		11	23	Double - Color 2	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-
		12	24	Double - Color 2	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-
13	13	25	Double - Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
14	14	26	Double - Color 1 then 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
15	15	27	Double Split - Alternating Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
16	28	28	Double - Color 1	120	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
17	29	29	Double - Color 1	120	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
		30	Double Split - Color 1 & 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
		31	Double Split - Color 1 & 2	120	Y	B	-	-	-	-	-	-	-	-	-	-	
16	32	32	Double - Color 2	120	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
17	33	33	Double - Color 2	120	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
18	18	34	Double - Color 1 then 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
19	19	35	Double - Color 1 then 2	120	Y	B	-	-	-	-	-	-	-	-	-	-	
20	20	36	Double Split - Alternating Color 1 then 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
21	37	37	Triple - Color 1	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
22	38	38	Triple - Color 1	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
		39	Triple Split - Color 1 & 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
		40	Triple Split - Color 1 & 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
21	41	41	Triple - Color 2	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
22	42	42	Triple - Color 2	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
23	23	43	Triple - Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
44	44	44	Triple - Color 1 then 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
24	24	45	Triple Split - Alternating Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
25	46	46	Quad - Color 1	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
26	47	47	Quad - Color 1	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
		48	Quad Split - Color 1 & 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
		49	Quad Split - Color 1 & 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
25	50	50	Quad - Color 2	75	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
26	51	51	Quad - Color 2	75	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	-	-	-	
27	27	52	Quad - Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
28	28	53	Quad - Color 1 then 2	75	Y	B	-	-	-	-	-	-	-	-	-	-	
29	29	54	Quad Split - Alternating Color 1 then 2	75	Y	A	-	-	-	-	-	-	-	-	-	-	
30	55	55	Quad - Color 1	120	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
31	56	56	Quad - Color 1	120	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
		57	Quad Split - Color 1 & 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
		58	Quad Split - Color 1 & 2	120	Y	B	-	-	-	-	-	-	-	-	-	-	
30	59	59	Quad - Color 2	120	Y	A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
31	60	60	Quad - Color 2	120	Y	B	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	Class 1	Class 1	Class 1	
32	32	61	Quad - Color 1 then 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
33	33	62	Quad - Color 1 then 2	120	Y	B	-	-	-	-	-	-	-	-	-	-	
34	34	63	Quad Split - Alternating Color 1 then 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
35	64	64	Double Diagonal - Color 1	150	Y	A	-	-	-	-	-	-	-	-	-	-	
36	65	65	Double Diagonal - Color 1	150	Y	B	-	-	-	-	-	-	-	-	-	-	
		66	Double Diagonal Split - Alternating Color 1 then 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
		67	Double Diagonal Split - Alternating Color 1 then 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
35	68	68	Double Diagonal - Color 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
36	69	69	Double Diagonal - Color 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
37	70	70	Double Diagonal - Alternating Color 1 then 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
38	38	71	Double Diagonal - Alternating Color 1 then 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
39	72	72	Quad Diagonal - Color 1	150	Y	A	-	-	-	-	-	-	-	-	-	-	
40	73	73	Quad Diagonal - Color 1	150	Y	B	-	-	-	-	-	-	-	-	-	-	
		74	Quad Diagonal Split - Alternating Color 1 then 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
		75	Quad Diagonal Split - Alternating Color 1 then 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
39	76	76	Quad Diagonal - Color 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
40	77	77	Quad Diagonal - Color 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
41	41	78	Quad Diagonal - Alternating Color 1 then 2	150	Y	A	-	-	-	-	-	-	-	-	-	-	
42	42	79	Quad Diagonal - Alternating Color 1 then 2	150	Y	B	-	-	-	-	-	-	-	-	-	-	
43	80	80	Fast Rotate - Color 1	120	Y	A	-	-	-	-	-	-	-	-	-	-	
43	81	81	Fast Rotate - Color 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
		82	Rast Rotate - Color 1 then 2	120	Y	A	-	-	-	-	-	-	-	-	-	-	
44	83	83	Rotate / Quad - Color 1	150 / 75	Y	A	-	-	-	-	-	-	-	-	-	-	
44	84	84	Rotate / Quad - Color 2	150 / 75	Y	A	-	-	-	-	-	-	-	-	-	-	
		85	Rotate / Quad - Color 1 then 2	150 / 75	Y	A	-	-	-	-	-	-	-	-	-	-	
45	86	86	Wave Rotate - Color 1	70	Y	A	-	-	-	-	-	-	-	-	-	-	
		87	Wave Rotate - Color 2	70	Y	A	-	-	-	-	-	-	-	-	-	-	
		88	Wave Rotate - Color 1 then 2	70	Y	A	-	-	-	-	-	-	-	-	-	-	
		89	Random - Color 1 & 2	N	N	A	-	-	-	-	-	-	-	-	-	-	
46	90	90	Steady - Color 1	N	N	A	-	-	-	-	-	-	-	-	-	-	
	46	91	Steady - Color 2	N	N	A	-	-	-	-	-	-	-	-	-	-	

SINGLE COLOR FLASH PATTERN TABLE
 TABLA DE PATRONES DE PARPADEO DE COLOR ÚNICO
 TABLEAU DES EFFETS DE CLIGNOTEMENT DE MONOCHROME

Pattern	Description	FPM	Sync	Phase	SAE J845															
					5545				5550				CA T13				ECE R65			
					A	CA	A	CA	CB	CR	A	CA	CB	CR	A	CA	CB	CR		
1	Single	75	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	Class E	-	-	-	-		
2	Single	75	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	Class E	-	-	-	-		
3	Single Alternating Split	75	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
4	Single	120	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	Class 1	Class 1	-	-		
5	Single	120	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	Class 1	Class 1	-	-		
6	Single Alternating Split	120	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
7	Double	75	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	Class E	-	-	-	-		
8	Double	75	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	Class E	Class E	Class E	Class E	-	-	-	-		
9	Double Alternating Split	75	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
10	Double	120	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	Class 1	Class 1	Class 1	Class 1		
11	Double	120	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	Class 1	Class 1	Class 1	Class 1		
12	Double Alternating Split	120	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
13	Quad	75	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
14	Quad	75	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
15	Quad Alternating Split	75	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
16	Quad	150	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
17	Quad	150	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
18	Quad Alternating Split	150	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
19	Triple	75	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
20	Triple	75	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
21	Triple Alternating Split	75	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
22	Quint	150	Y	A	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
23	Quint	150	Y	B	Class 2A	Class 2A	Class 1A	Class 1A	Class 1A	Class 1A	-	-	-	-	-	-	-	-		
24	Quint Alternating Split	150	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
25	Double Diagonal	150	Y	A	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
26	Double Diagonal	150	Y	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
27	Double Diagonal Alternating Split	150	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
28	Quad Diagonal	150	Y	A	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
29	Quad Diagonal	150	Y	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
30	Quad Diagonal Alternating Split	150	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
31	Fast Rotate	120	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
32	Rotate/Quad	150 / 75	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
33	Wave Rotate	70	Y		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
34	Random		N		-	-	-	-	-	-	-	-	-	-	-	-	-	-		
35	Steady		N		-	-	-	-	-	-	-	-	-	-	-	-	-	-		