
# SM420 | 9" Windshield Gooseneck Pedestal with Universal Cradle




## Windshield Mounting

- Step 1. Clean windshield area and let dry. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup against the glass.
- Step 2. Adjust the angle of the gooseneck (C) by using both hands to bend to the desired position.

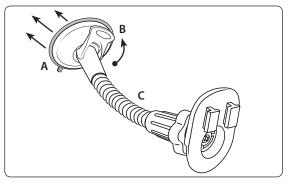

## **Universal Cradle Attachment**

Attach the universal cradle to the pedestal by inserting the dual-T tabs (D) into the dual-T slots (E) on the cradle back.
Adjust the angle and of the head by tightening the swivel tightening ring (F).

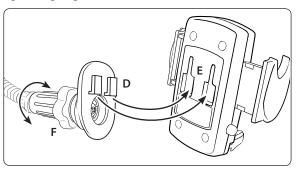



#### Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.


## **Package Contents:**

(1) CM089-ST-2 - 9" windshield pedestal with flexible gooseneck.
(1) SM040-2 - Adjustable universal cradle for smartphones
(1) AP013 - Optional adhesive disc for dashboard or console mounting
(1) Alcohol cleaning pad

Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


### Dash or Console Mounting (Optional)

- Step 1. Find a safe location on the dash or console. Use the included alcohol pad to clean the mounting surface if necessary. Remove the paper backing on the adhesive disc and firmly press in place. Allow 24 hrs. for adhesive to cure to surface.
- Step 2. Place the pedestal's suction base (A) over the center of the circular disc. While firmly holding the pedestal on top of the disc, flip the base lever down (B) to the locked position.

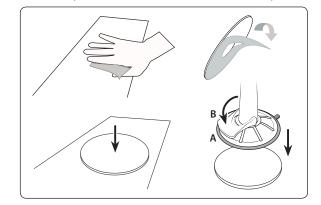

#### Device Insertion and Removal from Cradle

 Place the phone or device into the cradle with the device sitting on the adjustable support legs (G). Clamp the grip arms (H) inward to firmly grasp the device. Press in the release button (I) to open the arms.

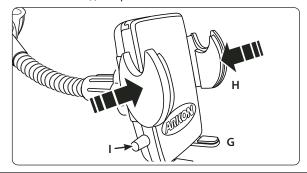



The Mobile Mounting Specialists™