



ATD-7443A, ATD-7446A, ATD-7448A Double Lock Ratchet Style Jack Stands Owner's Manual



***Capacity Per Pair – Sold and to be used only in pairs**

ATD-7443A 3-Ton Double Lock Ratchet Style Jack Stands

Features:

- Double lock design with safety pin provides additional security when working beneath a vehicle
- Welded foot pads provide added stability and resist sinking into soft ground or asphalt
- Counter-weighted pawl locks ratchet bar securely in place
- Sturdy, welded steel construction
- One-piece, multi-position ductile iron ratchet bar
- Meets or exceeds ASME PASE 2019 standards

Specifications:

- Capacity Per Pair: 3 Tons
- Minimum Height: 11-13/16"
- Maximum Height: 17-1/2"
- Base Size: 8-1/8" x 7-1/4"
- Weight Per Jack Stand: 7.26 lbs.

ATD-7446A 6-Ton Double Lock Ratchet Style Jack Stands

Features:

- Double lock design with safety pin provides additional security when working beneath a vehicle
- Welded foot pads provide added stability and resist sinking into soft ground or asphalt
- Counter-weighted pawl locks ratchet bar securely in place
- Sturdy, welded steel construction
- One-piece, multi-position ductile iron ratchet bar
- Meets or exceeds ASME PASE 2019 standards

Specifications:

- Capacity Per Pair: 6 Tons
- Minimum Height: 15-3/4"
- Maximum Height: 24-3/8"
- Base Size: 11-1/4" x 9-7/8"
- Weight Per Jack Stand: 16.06 lbs.

ATD-7448A 12-Ton Double Lock Ratchet Style Jack Stands


Features:


- Double lock design with safety pin provides additional security when working beneath a vehicle
- Welded foot pads provide added stability and resist sinking into soft ground or asphalt
- Counter-weighted pawl locks ratchet bar securely in place
- Sturdy, welded steel construction
- One-piece, multi-position ductile iron ratchet bar
- Meets or exceeds ASME PASE 2019 standards

Specifications:

- Capacity Per Pair: 12 Tons
- Minimum Height: 17-7/8"
- Maximum Height: 27-5/8"
- Base Size: 12-1/4" x 11"
- Weight Per Jack Stand: 30.58 lbs.

SAFETY & WARNING INFORMATION

 This is the safety notification symbol. This symbol will notify you of any potential injury hazards. Please follow all instructions that follow this symbol to avoid possible injuries or death.

 **WARNING** Indicates a hazardous situation. If proper steps are not followed, death or serious injury could result.

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE

Before using these jack stands, be sure to read all content within this manual, ensuring that you understand the operating procedures, maintenance requirements and all safety warnings.

The owner and/or operator shall have an understanding of the product, its operating characteristics, and safety operating instructions before operating this device. Safety information shall be emphasized and understood. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.

WARNING

ACTIONS TO HELP PREVENT DANGEROUS SITUATIONS

- Study, understand and follow all instructions before operating this device
- Maximum load capacity per matched pair shall not exceed the rated capacity of the individual stand
- Use only on hard, level surfaces
- No alterations shall be made to this product
- Stands are not to be used to simultaneously support both ends of a vehicle
- Use as a matched pair only
- Use stands to support one end of a vehicle only
- Center load on saddle
- Failure to heed these warnings may result in serious personal injury and/or property damage

INSPECTION

- This device shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.
- Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the product be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts.

DAMAGED EQUIPMENT AND ADD-ONS

Any jack stand that appears to be damaged, is found to be worn or operates abnormally in any way **MUST BE REMOVED FROM SERVICE AND DESTROYED IMMEDIATELY.**

ALTERATIONS

Because of potential hazards associated with this type of equipment, no alterations shall be made to the product.

ATTACHMENTS AND ADAPTERS

Only attachments and/or adapters supplied by the manufacturer shall be used.

SETUP

- Prior to each use, visual inspection (See Pg.2) shall be made to the device by checking for abnormal conditions, such as cracked welds, damaged, loose or missing parts.
- Consult the vehicle owner's manual to determine the location of support points.
- Be sure to set the vehicle in park with the emergency brake on and wheels securely chocked.
- Be sure that the vehicle and the jack stands are on a hard, level surface.

ASSEMBLY

- Insert ratchet bar into collar.
- Lift ratchet bar upward to ensure the ratchet and locking pawl positively engage at each and every position.
- To lower, lift the handle, disengage the locking pawl from the ratchet bar and slowly move the ratchet bar down.
- Use a hammer and punch to bend the locking tab inward (3 & 6 Ton). This will prevent the ratchet bar from accidentally coming loose.
- For 12 Ton jack stands, tighten the provided hex bolt into the collar to prevent the loss of the ratchet bar. (See bottom of page for details.)



OPERATION

Supporting a load

- Pull the ratchet bar up to desired position, ensure pawl and ratchet bar are securely engaged. Carefully insert locking pin.
- Slowly lower the vehicle onto the stand. Be sure the load is centered on saddle.
- Ensure vehicle is secure and stable before working around or under vehicle.


Lowering a load

- Using a suitable jack, lift the vehicle clear of the jack stands
- Carefully remove the locking pin. Disengage locking pawl from ratchet bar by raising the handle and adjust ratchet bar to lowest position.
- Remove stands. Follow procedures of jack operation to lower vehicle.



Maintenance

Inspect each stand before use. Ensure all parts move freely. Only apply grease to the locking handle pivot point of this product and ensure all excess grease is wiped away before stand is used. If rust appears, sand away the rust area and cover with appropriate utility paint. Please note that other than the safety pin with chain, there are no replacement parts available for this product.

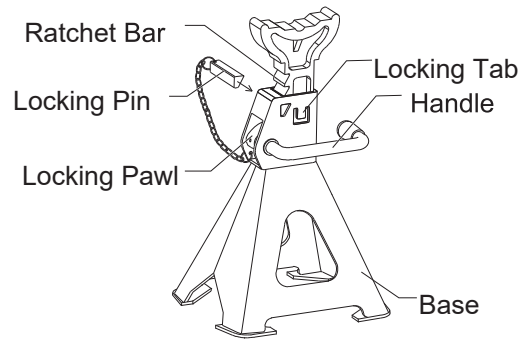

Model Number	ATD-7443A	ATD-7446A	ATD-7448A
Part Number	ZJ3H-PJ-5A	ZJ6CA-PJ-5A	ZJ12E-1-PJ
Description	Safety Pin with chain assembly		