



## User's Manual

THE ORIGINATOR OF CLASSIC  
VEHICLE OEM FIT RADIOS  
SINCE 1977

# SLIDEBAR RADIO



### ***AM/FM WITH RDS TUNER AND EXCLUSIVE HIDEAWAY DISPLAY***

- ◆ HIGH POWER 300 WATTS
- ◆ AM/FM with RDS & 25 Pre-sets
- ◆ 7 LCD Color Choices (selectable)
- ◆ iPod doc Charge and Control
- ◆ CD Changer Controller
- ◆ Auxiliary In
- ◆ Subwoofer Line out w/ x-over
- ◆ Front/ Rear Fader
- ◆ Left/Right Balance
- ◆ Bass / Mid / Treble Control
- ◆ DSP EQ
- ◆ Clock
- ◆ Direct Fit to OEM Dash Opening
- ◆ USB MP3/WMA Player
- ◆ Loudness Function
- ◆ Last Volume Memory
- ◆ RCA Pre-out (2 Pair)
- ◆ Auto Antenna lead

READY TO INSTALL IN YOUR ORIGINAL DASH  
NO ASSEMBLY REQUIRED!



## Table of Contents

Introduction .....	2
General Installation .....	3
Radio Connections .....	4
Low Level Output Connection .....	4
Wiring Diagram. ....	5
Controls and Display .....	6
Receiver Basic Operation .....	6-9
Volume / Function Adjust .....	7
Mode / Source Select .....	7
Band Select .....	7/9
CD Control .....	7/15
Clock .....	7
USB Flash Drive .....	7/14
iPOD .....	9/14
Adjusting Sound Properties .....	10-12
DSP EQ .....	10
Bass/Mid/Treble Tone Control .....	10
Balance/Fader .....	10/11
LCD Color / Dimmer .....	12
Tuner Area USA/EUR .....	13
RDS .....	13
Noise Suppression .....	16-17
Specifications .....	17
Trouble Shooting .....	18

**This radio is for 12volt negative ground vehicles only.** If your electrical system is 6volts and or positive ground Custom Autosound has power inverters #PGPI-HC (positive ground power inverter) and voltage boosters #NGVB-HC (negative ground voltage booster) for use with this radio.

Problem	Possible Cause	Solution
Radio Will Not Turn On NO Lights, NO Sound	Power Lead: Red Wire (switched) not connected or Power not getting to radio	Check all connections for proper voltage. Voltage range 12-14.7 Volt
	Power Lead: Yellow Wire (constant) not Connected or 12 volt not getting to radio	Check all connections for proper voltage. Voltage range 12-14.7 Volt
	Ground wire not connected	Check for good ground connection on Black wire.
	Fuse on the back of the radio blown	Replace blown fuse
Lights Displayed but No Sound	Problem with a speaker or speaker wire	Verify all speakers used are 4 to 8 ohm. Verify that none of the speakers are going to ground. Verify that none of the speaker wires are shorting to themselves or ground.
Sound only heard on one side	Speaker wires disconnected Balance control set to one side	Check all connections Adjust balance and fader control to center position
	Bad Speaker	Reverse speaker leads at radio. If still no sound on the same speaker the speaker is bad. If no sound on other check wiring and fader control on radio.
Lights Dim and Radio Distorts at High Volume	Poor Ground Connection	Reconnect Ground wire to a solid chassis ground
Noise with Radio Reception	Antenna not fully extended Car underneath Fluorescent lights	Extend antenna to full length. Back vehicle out of garage and test again

### System Reset:

Remove all power from the radio for 2 minutes, reconnect power and all settings will be at factory default.

### **Antenna Noise cont.**

#### **Elimination**

1. Test or have tested the antenna lead for any breaks or shorts. Signs of crimping, kinking, fraying or rust usually indicates damage to the cable. Replace the antenna or cable if necessary.

#### **Ignition Noise**

A popping or crackling noise heard through the speakers. The noise will vary as the engine rpm varies, The noise will Only be present with the engine running

#### **Elimination**

1. Install an L.C. Filter Network in the power lead of the radio. The filter should be rated at minimum 3 amps.
2. Inspect spark plug and distributor cable for signs of wear or damage. Replace as necessary using resistor cable only. Metal conductor ignition cables increase static interference.

NOTE: Do not use spark plug or distributor noise filters as these can create more problems than they can solve. They decrease the quality of the spark generated by the spark plugs and they may create more static than they eliminate.

#### **Accessory Noise**

A popping heard when the lights, turn indicators, windshield wipers, cigarette lighter, etc. are switched on indicate a vehicle wiring deficiency. Most occurrences are minor and present no risk to the stereo system other than the annoyance to the listener. However, severe cases may damage the speakers, minor occurrences can be remedied. A professional must attend to severe occurrences, as they present a threat to not only the stereo system but to the vehicle wiring itself.

#### **Elimination**

1. Install an L.C. Filter Network in the power leads of the Slidebar radio. The filter should be rated at a minimum of 3 amps.
2. If the noise persists, consult a professional automotive service technician.

## **Radio Specifications**

### **FM Section**

Tuner Type .....	.PLL	IF Frequency.....	10.7MHz
Frequency Range .....	.87.5-107.9 MHz	Sensitivity .....	2.6V
Usable Sensitivity .....	.12.5dBf	S/N Ratio .....	67dB
Quieting Sensitivity .....	.4uV	Capture Ratio.....	1.5dB
T.H.D .....	0.8%	Separation.....	35dB

### **AM Section**

Frequency Range .....	.530-1710KHz	IF Frequency.....	450KHz
S/N Ratio .....	.50dB	Sensitivity.....	20uV
Selectivity .....	25dB		

### **Audio Section**

Output Channel .....	45 X 4	System Power.....	Max 300 Watts
Output Impedance .....	.4ohm per speaker	THD .....	1%
Response .....	.30Hz-18KHz		

### **General**

Power Supply .....	.12VDC Negative Ground	Note: All specifications are subject to change without notice.
Speaker impedance .....	.4-8 ohm	
Stand-By Current .....	.0.03A	
Chassis ....	190mm(7 3/8")(w) X 62mm (2 -1/4") X 155mm (6")(D)	

## **Introduction**

Thank you for your purchase of a Custom Autosound radio.

This AM/FM receiver is specifically designed and manufactured for your classic vehicle. It is a reflection of over 36 years of customer feedback regarding preferred features, vehicle compatibility, cosmetics and quality components.

The quality of the components and various parts that are used in our radios were developed in a California audio research laboratory. The laboratory researched and assembled the finest affordable CD controller radio tuner and amplifier sections.

Custom Autosound and its staff own over 16 classic special interest cars and trucks. These vehicles are used for research and development, car shows meets and much personal pleasure. We find that our custom radios only sound as good as the speakers they are matched with and a quality installation.

We also manufacture a full line of rear, dual front and dual voice coil speaker assemblies to fit in the original speaker areas. Also available are replacement kick panels with built in speakers and a custom 2.1 amplified system with satellite speakers that look like AC vents. All of these speaker assemblies are made to be mounted without permanent vehicle modifications. Check out our web site!

Your Custom Autosound authorized dealer has information regarding our speakers and special speaker assemblies, as well as information regarding custom radios for vehicles other than yours. We offer over 300 different 'conversions' for various makes, year groups, all radios are ready to install, no assembly required.

Again, we thank you for your purchase! You have increased the value and "Driving Pleasure" of your classic without compromising originality.

Regards, Carl Sprague  
President  
Custom Autosound Mfg.

It is advised that you do NOT return defective units to your dealer. There is generally no "exchange" e.g.(as is standard Electronics Industry Policy). Also, most dealers do not have radio technicians, test benches, etc and a return to factory through a dealer can extend turn-around times by weeks!

Please call Custom Autosound, requesting technical assistance if a problem occurs. We will gladly trouble shoot/advise, step by step.

After calling if your unit is in need of repair/return, Please ship to us, UPS preferably. We will repair or replace and return ASAP! Normal turn around time is 7 business days plus shipping time.

## Radio Installation

Thank you for your purchase of this Custom Autosound product!

Owner- Installer: Please review installation instructions and owners manual.

Keep in mind that your radio and/or speakers are custom equipment designed specifically for your year vehicle. It should be handled carefully and installed preferably by an auto radio specialist. We suggest that you 'BENCH TEST' the unit before installation, as we do, prior to shipment. This is to insure that the equipment functions properly before the time is spent for installation. This way, if a careless installation occurs and the unit gets "fried" or some other possible damage, the installer is responsible. Shipping damage does occasionally occur. If you should suspect shipping damage, please contact the delivery company at once.

Please read the owners manual thoroughly before using your radio.

It is recommended that you disconnect the negative lead from the battery before installing any electronic equipment in your vehicle. Reconnect when wiring is complete.

First, you will need to remove the original knobs and shaft nuts from your original radio if present. Unplug the main wire harness and speaker leads from the back of the original radio. Disconnect antenna lead and remove mounting strap from the back of the radio. The radio is now ready to be removed from the dash. Check the original radio for signs of water or oil damage from leaks. If leaks are present, do not install the new radio. Water, oil or any other liquid damage is not covered under the new radio warranty.

### Noise Suppression

All CAM electronics are designed for maximum electrical noise rejection. In some installations however, electrical noise may affect the quality of sound reproduction. If electrical noise is present after installing your Slidebar radio, identify the source of the noise using the descriptions under Sources Of Electrical Noise. To eliminate the noise follow the procedures described under Elimination of the specific noise source.

- 1-Check all ground connections. Remove paint away from painted surfaces to secure a good electrical ground.
- 2-Check battery posts. If contacts are corroded or loose ,clean and tighten both terminals.
- 3-Check battery or add fluid if needed.
- 4-Check condition of spark plug and distributor leads. Worn or damaged leads will generate noise than can be very difficult to eliminate.
- 5-Check installation of factory noise suppressor(s). Verify that the connections are solid. Refer to the vehicles service manual for nose suppressor location or allow a qualified mechanic to inspect the device (s) for you.
- 6-(Optional) Some professional installers will install a simple L.C. noise filter even if there is no noise present in the system. This is a simple and relatively inexpensive device available at your nearest Autosound dealer or electronic supply store. Most filters designed for car stereos carry a current rating of 3 amps or more. Follow the manufacturers installation instructions. This filter is installed in the power lines of the car stereo.

### Sources Of Electrical Noise

#### Alternator Noise

This noise is generally a high pitched whine present with engine running. The pitch of the whine will vary as engine RPM varies. Alternator noise usually becomes more apparent with an electrical load to the system. Switching the headlights on usually increases the noise.

#### Elimination

1. Install an L.C.noise filter (available from your Autosound dealer or your nearby electronic or automotive supply store)in the power lines of your radio. This filter should be rated at 3 amps minimum.
2. Start the car' s engine.switch on the lights (to accentuate the noise) and switch on the USA-66. If noise is still present, proceed to step 3.
3. Install an alternator noise filter (available from your Autosound dealer or your nearby electronic or automotive supply store). Follow manufacturer's installation instructions.

#### Antenna Noise

A static or crackle heard through the speakers, usually when the car is running ,but sometimes present with the ignition off. If a crackling static is present, follow the steps outlined below to confirm the antenna as the source of the noise.

1. Start the car engine.
2. Switch on the radio.
3. Adjust the volume so that noise is audible.
4. Reduce volume setting of the car stereo but do not switch it off. If noise decreases or disappears, the signal is most likely being picked up by the car antenna. If the noise persists after following the steps listed below, proceed to ignition Noise.

### Turning the iPod On/Off


The iPod power turns on automatically when an iPod is connected to the 30pin iPod cable, as long as the vehicle ignition is turned on. You can turn the iPod off by disconnecting it from the cable or by turning the ignition off. When the ignition is turned off, the iPod will pause and then enter sleep mode after 2 minutes. While the iPod is connected, the power cannot be turned on or off from the iPod itself. NOTE: The iPod will continuously charge when connected to the radio as long as the vehicle ignition is turned on.

### Controlling iPod Playback

With an iPod plugged in select iPod by **Rotating and Releasing the Left Rear Knob (2) Clockwise** until iPod is displayed on the LCD



While in iPod mode with an iPod connected to the Docking inputs, turn the right rear knob clockwise to select the PLAYLIST. Turn the front left knob clockwise to choose from PLAYLIST, ARTIST, ALBUM, GENRE, SONGS, COMPOSER. Press and release the front right knob to access one of the selected items, then turn clockwise to select items within the list. Press and release the front right knob again to listen to the selected item. Turn and release the right rear knob counter-clockwise to repeat the current track (RPT TRK) or repeat all tracks (RPT ALL).

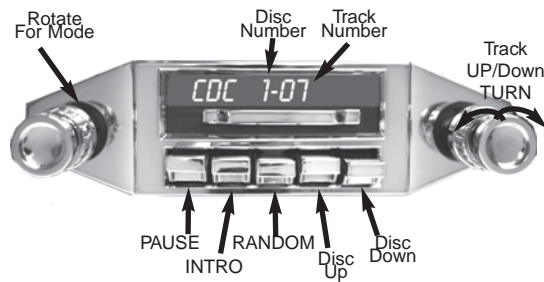

### CD Changer Operation

This radio is only compatible with the Custom Autosound USA-CD60 6 disc changer or the 1disc CD1 player. The CD magazine for the CD60 changer requires the CD's be loaded with the label **facing down**. If you get an error message or the changer can not find the CD please check the loading position of the CD in the magazine. CD1 loads with label facing up.

1. With CD magazine in changer, **Rotate and Release the Left Rear Knob (2) Clockwise** until CDC is displayed on the LCD.
2. To select a disc press CD up (6) or CD down (7) until the desired disc number is shown on the LCD display (11).
5. To skip to the next track, turn knob (8) clockwise. To go to the previous track, turn knob (8) counter clockwise.
6. To change the mode to another source, **Rotate and Release the Left Rear Knob Clockwise** until the desired source is shown on the LCD display (11).

### Power and Speaker Connections (Refer to Wiring Diagram on page 5.)

**Note: Both Red and Yellow wires must be connected for radio to operate.**

#### A-Main Power-Red Wire B+

Connect the RED wire (B+) to an accessory fuse that is switched OFF when the key switch is in the OFF position and is switched ON when the key switch is switched to the ON or accessory position.

#### B-Memory Back-Up-Yellow Wire B+

Connect the YELLOW wire (memory B+) to an accessory fuse that is always ON regardless of the position of the key switch. The lead supplies power to the program memory and the clock circuit when the radio is switched off. If there is no power on this lead the radio will not turn on.

#### C-Power Antenna (Auto-Antenna) - Blue Wire

This wire can be connected to the positive switch terminal of the relay for the auto antenna (if your car is equipped) or to the remote on switch of the amplifier or booster (if equipped). NOTE: DO NOT connect this wire to a negative position or to any device that requires high current. Otherwise the radio may fail or become "fried". If your car is not equipped with an auto antenna, leave this wire sealed and do not allow it to short to any other positions.

#### Important Notice For Semi Auto Antenna

Do Not Connect the power antenna lead to this radio unless it is a fully automatic antenna. If your antenna was controlled by a switch or knob on the original radio (ex. 1958-68 Cadillac radios) it is not a fully automatic it is a semi automatic antenna. If you connect the antenna actuator lead of a semi automatic antenna to this radio you will burn the circuit board in the radio. This can cause unrepairable damage.

#### D - Ground Wire - Black

Connect the black ground wire to any clean paint and contaminant free area of vehicle chassis. NOTE: Proper grounding is essential for optimum performance of your radio.

#### E - Speaker Wires

Connect the speaker wires as shown in Figure 2.

#### AUX-Input

There is a right and left auxiliary input on the back of your radio. Use these to listen to any portable device with standard headphone outputs (MP3 player, Nav unit, portable CD etc.) The radio will control the volume level only of this input.

#### Low Level Output (Line Out Jacks) Connection

The Slidebar radio is equipped with low level, high impedance outputs. The low level outputs (RCA type Line Out Jacks) for front / rear / subwoofer will not drive speakers. If you are connecting an amplifier or plan on it in the future, it is recommended to use these leads. It makes for a cleaner and easier installation.


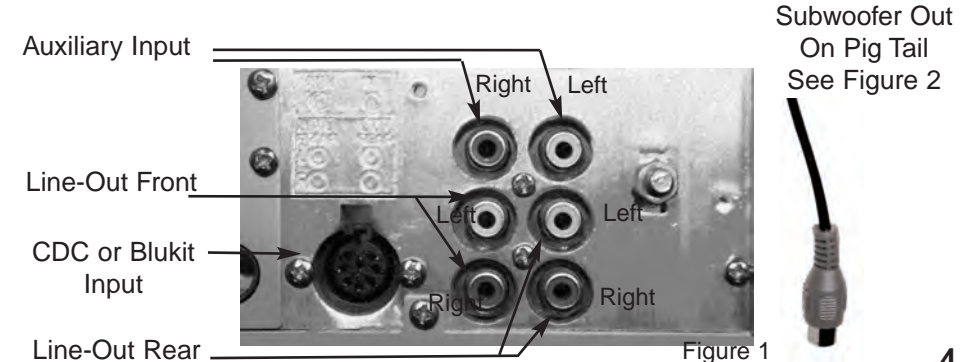


Figure 1

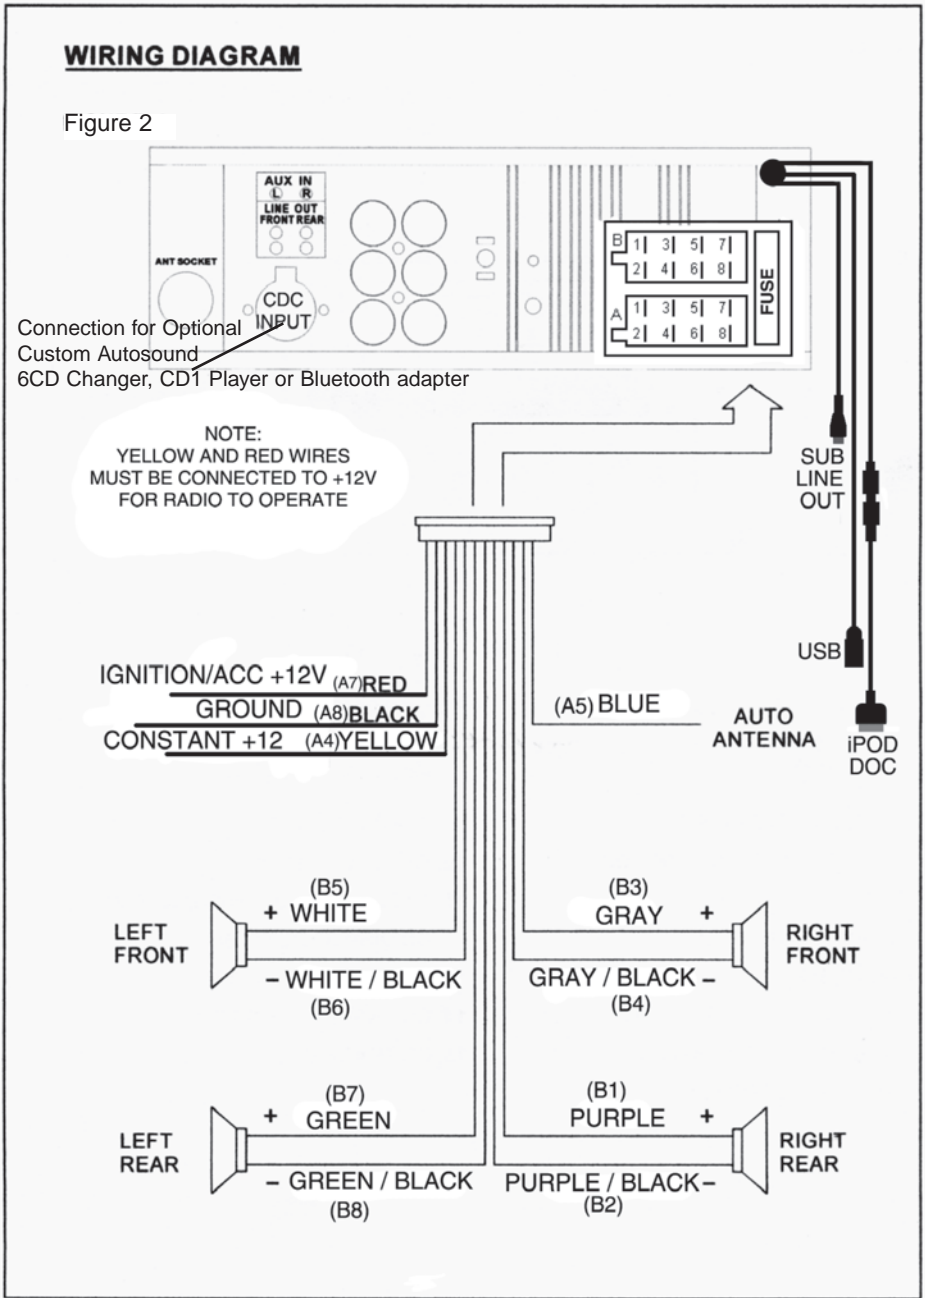

**USB Player**

The USB decoder is compatible with **MP3** (MPEG Audio Layer-3) and **WMA** (Windows Media Audio) files. It is preferable to set up your flash drive/thumb drive with a folder system. This way you can advance to another set of songs (folder) by pressing the disc up or disc down buttons. Similar to having multiple disc in a CD changer.

1. Insert your flash drive/thumb drive into the USB jack (located on 18" extension from the back of radio).
2. Turn and release the left rear knob clockwise until USB PLAY is displayed on the screen. The radio will automatically start playing your files starting with the first file on the flash drive.
3. To change songs use the track up or track down buttons (6)(7). Use the disc up disc down buttons (4)(5) to change folders if your drive is set up with folders.

Note: The folder name or number does not appear on the LCD Display. Track numbers for songs in the folder are determined by the order in which they were recorded to the flash drive.

The player will not play MP4 or files with copy protection.



**iPOD OPERATION**

This unit is equipped with an iPod ready function that will allow you to control your iPod (if compatible) using the control panel of the radio. The following iPod versions are supported at the time of this writing. Specifications Subject to Change.

- iPod 3G (firmware version 2.2 only)
- iPod 4G Photo (firmware version 3.0)
- iPod Mini verion 1
- iPod 4G
- iPod Classic
- iPod Nano (2nd,3rd,4th,5th and 6th generation)
- iPod Touch (version 1.1)
- iPhone 3G version 2.0.0
- iPhone 4 and 4s (version 5.1.1)

**iPod iPhone connectivity through USB is not supported.**

**Accessing iPod Mode**

The unit will automatically switch to iPod mode when an iPod is plugged into the iPod cable. To return to the iPod from any other source, rotate the MODE button on the radio until IPOD appears on the display.

wise to select manual or auto.

#### AREA (USA/EUR)

The radio has the capability to receive AM/FM broadcast frequencies in other countries. To modify the default setting. (default), turn the left front knob.



#### BEEP

This function controls the audible beep confirmation that sounds during radio operation. With the beep function displayed, turn the left front-knob to select BEEP OFF, BEEP 2ND or BEEP ALL.



If you selected the BEEP 2ND, press and hold the knob for 1 seconds will hear the audible beep confirmation only.

#### CT ON/OFF

If supported by the station, adjust to turn the CT (Clock Time) function on/off. This feature can synchronize the clock with the radio station's clock.



#### VOLUME ADJUST/LAST

Factory default for this menu option is VOL LAST, which maintains the last volume the radio was at when you turned it off. When you select ADJ, you can set the default turn-on volume at any level (ADJ VAL 00-45), regardless of what the volume level was when you last turned off the unit.



#### PROGRAM TYPE (PTY) (Works in EURO Mode only)

This function will allow you to search for a special PTY Station in FM Mode. Turn the left front knob clockwise or counter-clockwise to select the PTY which you want, and then, turn the right front knob clockwise to activate the search process.

#### TA SEEK (Works in EURO Mode only)

This function allows you to select the tuner working in TA Seek or TA Alarm mode. Turn the left front knob clockwise or counter-clockwise to select TA Seek or TA Alarm.

#### PI Sound (Works in EURO Mode only)

This function allows you to select the tuner working in PI Sound or PI Mute mode. Turn the left front knob clockwise or counter-clockwise to select PI Sound or PI Mute.

#### MASK DPI (Works in EURO Mode only)

This function allows you to select the tuner working in Mask DPI or Mask All mode. Turn the left front knob clockwise or counter-clockwise to select Mask DPI or Mask All.


RDS tuners can automatically tune in stations according to the style of music (or talk) they broadcast. Some RDS tuners can even break in with traffic alerts or emergency broadcasts.

RDS enables your receiver to display text messages (usually call letters and format info) that many FM stations include on a subcarrier signal within their normal broadcast signal.

The RDS function is always active, and if the FM station you are listening to is broadcasting RDS information, the radio station call letters, song info, artist info and other messages will appear.

## CONTROLS

Figure 3

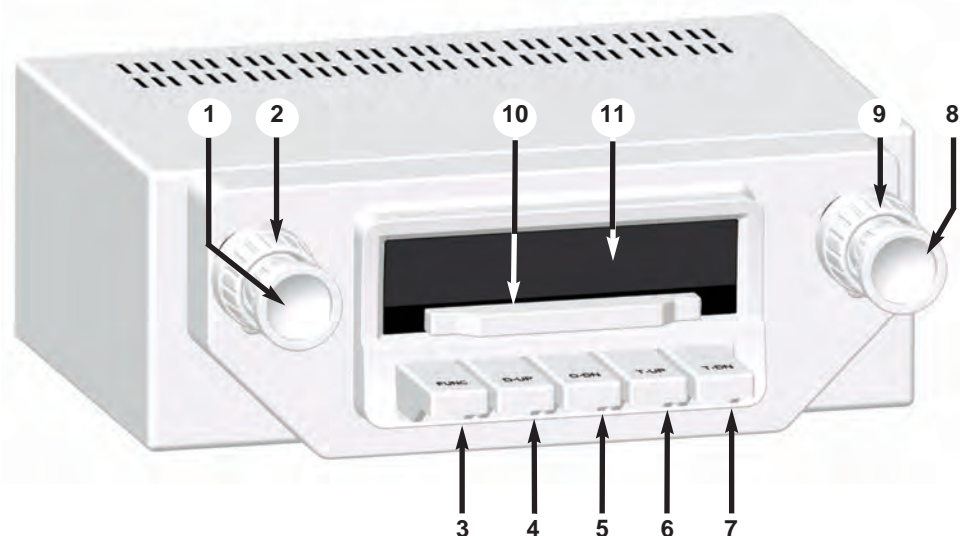

- |                                         |                                            |
|-----------------------------------------|--------------------------------------------|
| 1. ON (Push) / VOLUME / FUNCTION ADJUST | 7. PRE-SET 5 / DISC DOWN OR FOLDER DOWN    |
| 2. SOURCE SELECT RADIO/USB/iPOD/AUX     | 8. TUNE UP/DOWN/ PREVIOUS OR NEXT TRACK    |
| 3. PRE-SET 1 / PAUSE                    | 9. AM/FM BAND / FOLDER / PLAYLIST / ARTIST |
| 4. PRE-SET 2 / PREVIEW SCAN             | 10. SLIDEBAR LEFT ANALOG / RIGHT DIGITAL   |
| 5. PRE-SET 3 / RANDOM PLAY              | 11. LCD                                    |
| 6. PRE-SET 4 / DISC UP OR FOLDER UP     |                                            |

#### Bluetooth® Option:

By adding the Custom Autosound BLUKIT you can stream music or do hands free calling from your Bluetooth enable device to this radio.

#### COMPACT DISC OPTION:

By adding Custom Autosounds CD1 single disc player or USA-CD60 6 disc CD changer, you can enjoy many hours of music and operate all controls of the CD changer from the buttons on the radio. Normally the CD changer is mounted out of sight in the trunk.

Function See FIG.3		Radio Mode	USB/CDC Mode
<b>Power On/Off</b>	1	Press the left front knob to turn the unit on. Look for CUSTOM AUTOSOUND ON POWER UP Press the left front knob to turn the unit off. The LCD display will show GOODBYE for your confirmation	
<b>Volume</b>	1	Turn the left front knob to adjust the volume attenuation between 0~45 (Min/Max). 14 is the default turn-on level.	
<b>Mode</b>	2	Turn the left rear knob clockwise to select from an available listening source: Radio, USB, CDC, iPod or AUX.	
<b>TA</b>	2	Turn and hold the left rear knob clockwise to turn On/Off the Traffic Announcement function (FM Only) if supported by the station. TA will blink on the LCD	
<b>Clock On</b>	2	Turn the left rear knob counter-clockwise to activate the clock on-screen feature.. When you turn the left rear knob counter-clockwise the Clock is displayed for a few seconds. Turn and hold the left rear knob counter-clockwise while displaying Clock and "Hour Adjust" mode is activated for a few seconds. During the mode turn the left front knob to adjust the hour, turn the left rear knob counter-clockwise during "Hour Adjust" mode and "Minute Adjust" mode is activated for a few seconds. During this mode, turn the left front knob to adjust the minute.	Turn the left rear knob counter-clockwise to toggle and view artist, album, title information.
<b>View Song Info/ Clock</b>	2		
<b>Preset 1 Recall/ Store</b>	3	Press to select the #1 radio pre-set. Press and HOLD to store pre-set 1 into memory.	Press to play/pause file playback on USB / CDC
<b>Play/Pause</b>			

**MIDRANGE**

Use this function to make a more detailed boost or cut adjustment of midrange (vocal) frequencies as follows:0.5K/1.0K/1.25K/1.5KHz.Default setting is 1.0KHz.This is a very useful

mode for making very specific tonal adjustments. When selecting one of these 0.5K/1.0K/1.25K/1.5KHz points, array changes to the prior MID menu settings on page 10 (-12 to +12) will boost or cut at the selected frequency setting chosen in this menu.

**TREBLE**

Use this function to make a detailed boost or cut adjustment of treble frequencies as follows; 7.5K /10.0K/12.5K/15.0K. Default setting is 10.0KHz.When selecting one of these 7.5K /10.0K/12.5K/15.0K points, any changes to the prior TRE menu settings on page 10 (-12 to +12) will boost or cut at the selected frequency setting chosen in this menu. This is a very useful mode for making very specific tonal adjustments.

**Accessing the sub-menu system menu:**

1. **Press and hold the right front knob for 2 seconds**, then release, to access the sub-menu system.
2. Repeatedly press and release the front right knob to scroll through the available menu options.
3. Turn the left front knob right or left to select a value for the chosen menu option.
4. Press and release the right front knob repeatedly to move to the next function desired, or do nothing and the menu will revert to the current source display.

**Sub-Menu Options****DIMMER**

Use this menu option to switch the LCD brightness between 0 to 7 ,Turn the left front knob clockwise or counter-clockwise to make your selection.

**(LCD DISPLAY COLOR)**

Select the desired color preset. By default, the LCD lighting will White. Available color options include WHITE, RED , GREEN, BLUE, CYAN, YELLOW, PINK. When you selected the User Mode, the LCD lighting will alternate between all colors within 10 seconds.

**AUTO SEEK**

This function allows you to select auto seek tuning or manual tuning when you turn the right front knob to the right or left when listening to the radio. The factory default setting is AUTO SEEK. Turn the left front knob clockwise or counter-clock-





**FADER**

The fader control allows you to fade the sound from the front pair of speakers to the rear pair of speakers. Adjustment range is 0-20 between front and rear speakers.



**Loudness**

This function boosts bass and treble according to the volume. You will know this function is active when you see "LOUD" on your display. This function boost bass and treble for low listening volume and should be turned off at higher volumes.



**SUB ON/OFF**

Turn the subwoofer RCA output ON to activate this feature.



**SUB VOL**

When SUB ON is selected and a subwoofer is attached to the sub out RCA, use this function to increase or decrease the volume level of the subwoofer outputs from 0-12.



**SUB (55h / 85h / 120h / 160h)**

When SUB ON is selected and a subwoofer is attached to the sub out RCA, use this function to adjust the subwoofer crossover point to 55HZ, 85HZ, 120HZ or 160HZ. Use the left knob for adjustment.



**BASS / MID / TREBLE X-Over** This Menu does not come up when the EQ is set to anything other than OFF.

**BASS**

Use this function to make a more detailed boost or cut adjustment of bass (low) frequencies as follows:60/80/100/120Hz.This is a very useful mode for making very specific tonal adjustments. When selecting one of these 60/80/100/120Hz points, any changes to the prior BAS Menu settings on page 10 (-12 to +12) will boost or cut at the selected frequency setting chosen in this menu.



Function See FIG.3	Radio Mode	USB/CDC Mode
<b>Pre-set 2 Recall/ Store</b>	4	Press to select the #2 radio preset. Press and hold to store preset 2 into memory.
<b>Preview Scan</b>		
<b>Pre-set 3 Recall/ Store</b>	5	Press to select the #3 radio preset. Press and hold to store preset 3 into memory.
<b>Random</b>		
<b>Pre-set 4 Recall/ Store</b>	6	Press to select the #4 radio preset. Press and hold to store preset 4 into memory.
<b>Select Folder Select Disc</b>		
<b>Pre-set 5 Recall/Store</b>	7	Press to select the #5 radio preset. Press and hold to store preset 5 into memory.
<b>Select Folder Select Disc</b>		
<b>Next/Previous</b>	8	Turn the right front knob to tune to the next or previous AM/FM frequency. Turn the right front knob to change to the next/previous track.
<b>Audio Adjust</b>	8	Press the right front knob to activate the SEL(Select)function. Press repeatedly to cycle through the DSP(Digital Signal Processing)EQ. Bass, Mid, Treble, Balance, Fader, Loudness. Subwoofer and subwoofer specific adjustments (when SUB ON is selected). Turn the left front knob to select a value.

SEE FIG.3

Function See FIG.3	Radio Mode	USB/CDC Mode
<b>System Menu</b>	8	Press and hold the right front knob for 3 seconds to access the sub-menu system where you can adjust: Auto/Manual turning, PTY Search, TA Seek/Alarm, PI Sound/MUTE, Mask DPI/ALL, AREA USA/EU tuning, CT ON/OFF, LCD color, DIMMER, Vol Adjust/Vol Last and volume default level. Toggle the selection by turning the left front knob and pressing the right front knob to go the next mode.
<b>Preset 6 Store</b>	9	Turn the right rear knob counter-clockwise to select the #6 radio preset.
<b>Repeat Play</b>		Turn and hold the right rear knob clockwise to store preset 6 into memory.
	9	Turn and hold the right rear knob clockwise to turn On/Off The AF function.(FM Only, Disabled in USA)
<b>Band</b>	9	Turn the right rear knob clockwise to toggle through 5 radio bands (2 AM and 3 FM). NOTE: When tuning to a station, a stereo indicator (two ovals) will show in the upper right side of the radio's LCD screen. If there is no stereo icon seen, the station is in mono.
<b>Track/Directory Search</b>		Turn the right rear knob clockwise once to select "FOLDER" search mode, turn the front left knob clockwise or counter-clockwise to select folders (directories) on the usb drive. Press and release the front right knob to select the folder, the first song in that directory will be heard.
<b>iPod/iPhone Playlist/Search</b>	9	While in iPod mode with an iPod connected to the Docking inputs, turn the right rear knob clockwise to select the PLAYLIST. Turn the front left knob clockwise to choose from PLAYLIST, ARTIST, ALBUM, GENRE, SONGS, COMPOSER. Press and release the front right knob to access one of the selected items, then turn clockwise to select items within the list. Press and release the front right knob again to listen to the selected item. Turn and release the right rear knob counter-clockwise to repeat the current track (RPT TRK) or repeat all tracks (RPT ALL).
<b>LCD /ANALOG DISPLAY</b>	10	Slide bar to the right for the digital LCD display. Slide left for the classic look of an analog display. Note Dial indicator is only for cosmetics and does not move.

**Adjusting the sound properties:**

1. Press the right front knob, then release, to access the sound properties menu.
2. Repeatedly press and release the front right knob to scroll through the available menu options.
3. Turn the left front knob right or left to select a value for the chosen menu option.
4. Press and release the right front knob repeatedly to move to the next function desired, or do nothing and the menu will revert to the current source display.



**EQ SETTING**

When you first access this menu, EQ is set to OFF, Turn the left front knob to view and select from the 5 preset equalizer options.

FLAT setting offers sonic adjustments that lend themselves to classical music.

CLASSIC setting offers sonic adjustments that lend themselves to classical music.

POP setting accentuates the bass and treble settings. This is suitable for bass heavy popular music.

ROCK setting accentuates the treble settings. This is suitable for rock music.

**BASS / MID / TREBLE** selections do not come up when the EQ is set to anything other than OFF.

**BASS**

The bass adjustment function allows you to boost or cut the low frequencies from -12 to +12.



**MID**

The mid-range adjustment function allows you to adjust the middle frequencies -12 to +12.



**TREBLE**

The treble adjustment function allows high you to boost or cut the high frequencies from -12 to +12.



**BALANCE**

The balance adjustment function allows you to adjust or pan the stereo sound from the left or right, This position or the driver in relation to the speakers. Adjustment range is 0-20 between the left and right speakers.

